


Trainings ▾

Initial Check

⚠ WARNING ⚠

Air pressure must be released from the system before removing the air governor. The governor can be under pressure and cause personal injury.

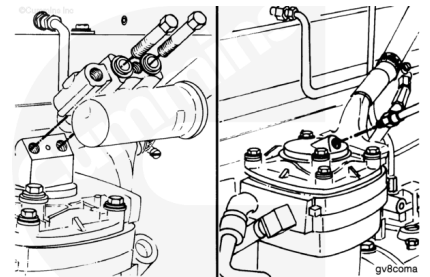


Note : The illustrations shown will be of the SS model single-cylinder air compressor. Differences in procedures for SS, QE, and ST model Holset® air compressors will be shown where necessary.

Remove the air governor or air governor hose from the air compressor unloader body.

Operate the engine to activate the air compressor.


If the air compressor is **not** pumping, the unloader valve is malfunctioning, and **must** be repaired or replaced.

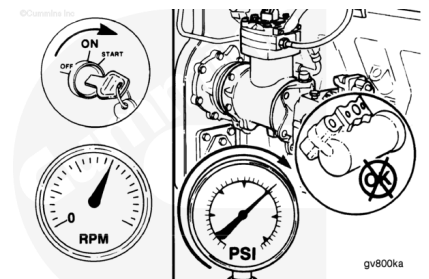

Remove

⚠ WARNING ⚠

The unloader valve body is installed with spring tension. Use care when removing to prevent personal injury. Always wear protective eyewear.

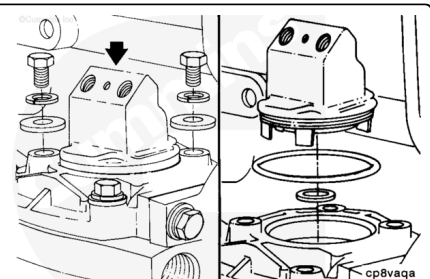

Holset® SS, E-Type, and ST Models

Hold the unloader valve body down, and remove the two captive washer capscrews and the two plain washers.

Remove the unloader valve body.

Remove the o-ring seal.


Remove the rectangular ring seal.

Remove the unloader valve cap and the unloader valve spring.

Note : Disassembly of the center unloader valve on Holset two-cylinder air compressors is similar to the single-cylinder unloader valve.


Remove the intake valve seat and valve.

Remove the intake valve spring.

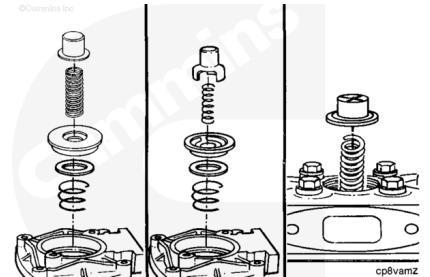

⚠ WARNING ⚠

The unloader body is installed with spring tension. Use care when removing to prevent personal injury. Always wear protective eyewear.

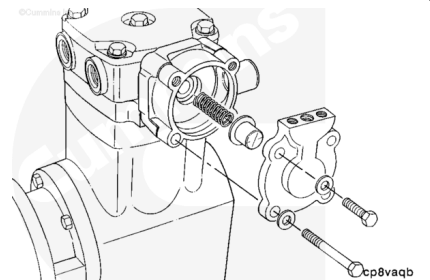


Holset® QE Models

Hold the unloader valve body down, and remove the four capscrews.

Remove the unloader valve spring.

Remove the unloader valve cap.

Remove the unloader body gasket and unloader valve cap rectangular ring seal.

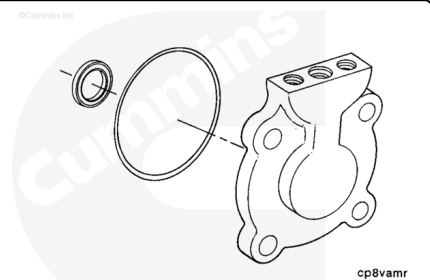


Clean

⚠ CAUTION ⚠

Do not use caustic cleaners. Failure to do so can cause compressor damage.

Remove all carbon and varnish from the unloader valve cap body.

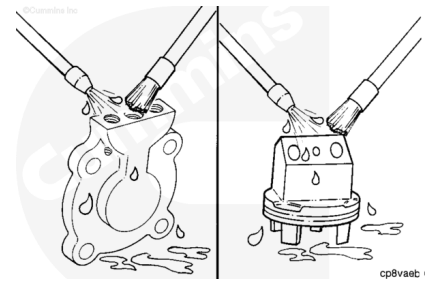


Inspect for Reuse


Use the valve spring tester, Part Number 3375182, to check the unloader spring.

Replace the unloader spring if it does **not** meet the specifications shown, or the wrong spring has been used.

Note : For Holset® two-cylinder air compressors, check both cylinder and center unloader springs. Holset® recommends that new springs be installed during rebuild.

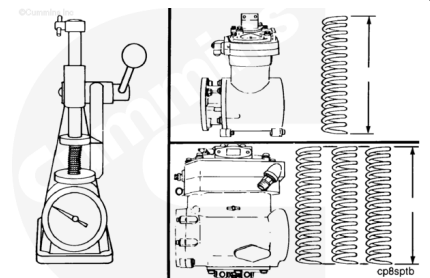

Note : If the compressor has a flat-hat-type unloader cap (1), it must use an unloader spring and valve seat different from that used with the three-prong unloader.

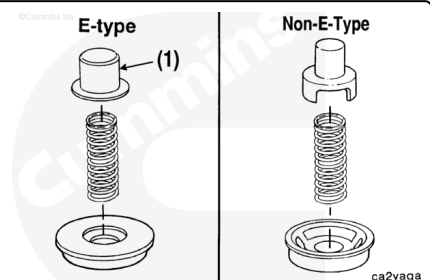

Install


Holset® SS, E-Type, and ST Models

Assemble the air compressor.

- Grease rectangular ring seal, unloader cap, and unloader body bore with high-temperature grease (Accrolube lubrication Teflon™ grease, or equivalent).

Torque Value: 14 n•m [124 in-lb]


Operate the engine, and check the compressor for air leaks.

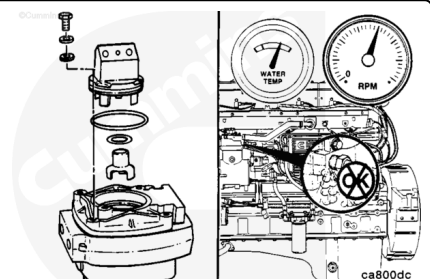


Install the new rectangular V-seal into the unloader body.

Note : The seal must be installed with the grooved side up.


Liberally lubricate the unloader valve bore above and below the rectangular ring seal with high-temperature grease (Accrolube lubrication Teflon™ grease, or equivalent).

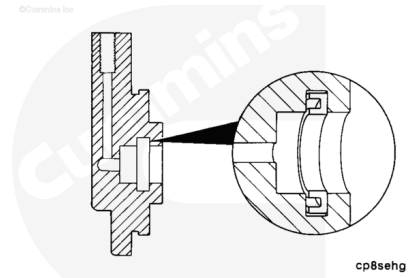

Install a new o-ring seal on the unloader valve body.

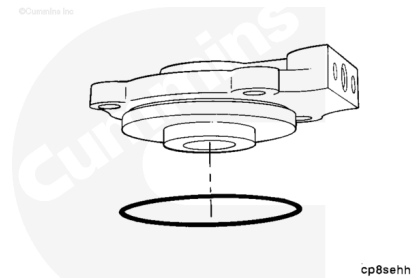


Use clean lubricating engine oil or Accrolube lubrication Teflon™ grease, or equivalent, to lubricate the seal.

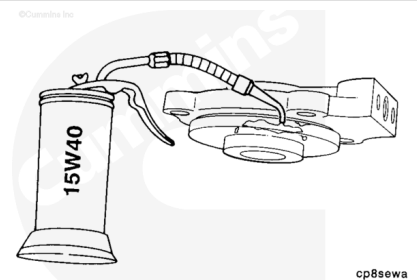

Liberally lubricate the unloader valve body bore and unloader cap with high temperature grease (Accrolube lubrication Teflon™ grease, or equivalent).


Install the unloader cap.

Install the unloader spring.

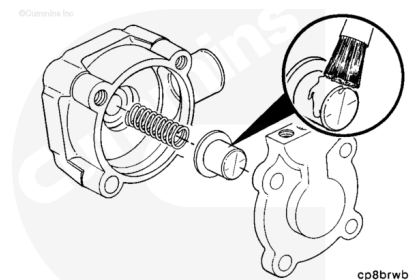

Lubricate the unloader screw threads and underhead with clean lubricating engine oil before installation.

Note : The two unloader body screws must not be used to attach any brackets.

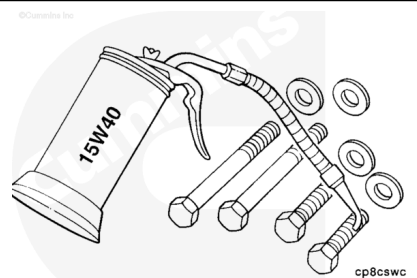


Assemble the unloader components, and attach the unloader assembly to the valve plate with the four capscrews and washers.

Note : The longer capscrews are used to mount the manifold to the air compressor.

Torque Value: 27 n•m [20 ft-lb]

Operate the engine, and check the air compressor for air leaks.

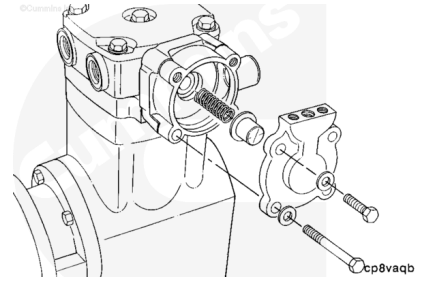

Last Modified: 31-Mar-2006
