


Trainings ▾

Install

Compressor Timing Procedure:

- Rotate the engine to Top Dead Center (TDC) using Refer to Procedure Procedure 003-004 (</qs3/pubsys2/xml/en/procedures/40/40-003-004-tr.html>).
- Rotate the gear in the air compressor until the I is in line with the V-notch on the air compressor housing, located at the 3-o'clock position as viewed from the front.

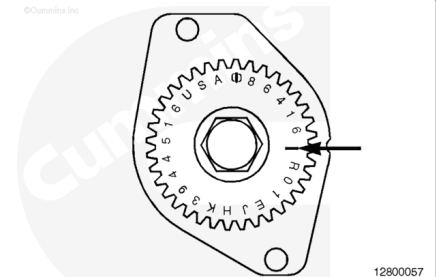

Install air compressor, two capscrews, and a new gasket onto the front gear housing.

Install the air compressor support bracket.

Torque Value:

Mounting Nuts 77 n•m [57 ft-lb]

Torque Value:

Support Capscrews to Air Compressor Support 43 n•m [32 ft-lb]


Torque Value:

Capscrews to Block 57 n•m [42 ft-lb]

Compressor drive gear mounting nut torque:

Torque Value:

Knorr-Bremse™ 165 n•m [122 ft-lb]

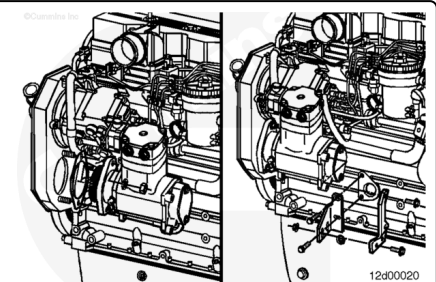

Install the oil supply line.

Torque Value: 15 n•m [133 in-lb]

