

Trainings ▾

Install

Spool Mount:

Install the upper alternator bracket and mounting capscrews.

Tighten the upper and lower alternator bracket mounting capscrew.

Torque Value:


M8

1. 24 n•m [18 ft-lb]

Torque Value:

M10

1. 43 n•m [32 ft-lb]

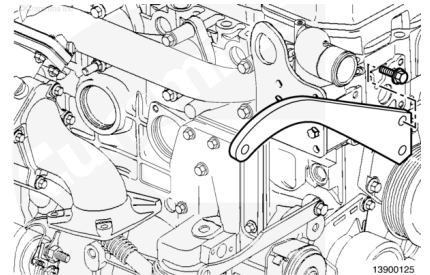


Note : On some applications, the alternator bracket and water inlet are combined in the same bracket. Refer to [Procedure 008-082 \(/qs3/pubsys2/xml/en/procedures/40/40-008-082-tr.html\)](/qs3/pubsys2/xml/en/procedures/40/40-008-082-tr.html), where applicable.

Install the lower alternator mounting bracket over the two dowel pins.

Install the two alternator bracket mounting capscrews and tighten.

Torque Value: 54 n•m [40 ft-lb]

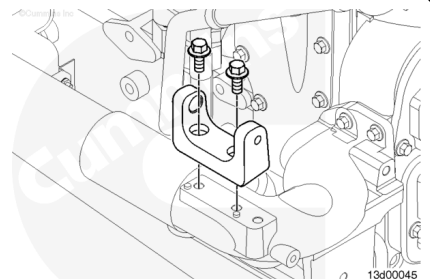


Hinge Mount:

Install the upper alternator bracket and mounting capscrews.

Install the lower alternator bracket and mounting capscrew.

Note : Depending on the alternator configuration, it may be necessary to wait until the alternator is installed before tightening the lower alternator bracket. This will allow adjustment of the bracket.

Tighten the upper and lower alternator bracket mounting capscrew.

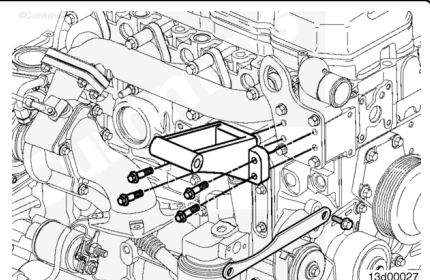

Torque Value:

M8

1. 24 n•m [18 ft-lb]

Torque Value:

M10

1. 43 n•m [32 ft-lb]

Last Modified: 24-Nov-2020
