

Trainings ▾


Measure

Using an inside micrometer or a vernier caliper, measure the distance from the starting motor mounting flange to the forward face of the front side of the flywheel ring gear.

Note : Include any spacers previously removed when completing the measurement.

Starting Motor Spacing		
mm		in
49.28	MIN	1.94
52.32	MAX	2.06


Add or remove spacers as necessary to achieve the correct starting motor spacing.

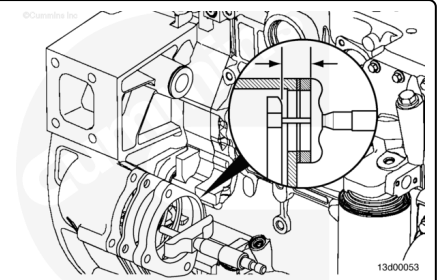

Install


For engines with wet flywheel housings, apply a 1.5 to 2.0 mm [0.06 to 0.09 in] wide bead of sealant, Part Number 3164067, to the flywheel housing starting motor mounting flange.

Note : If a starting motor spacer is required, make sure to apply sealant to the side of the spacer that contacts the starting motor.

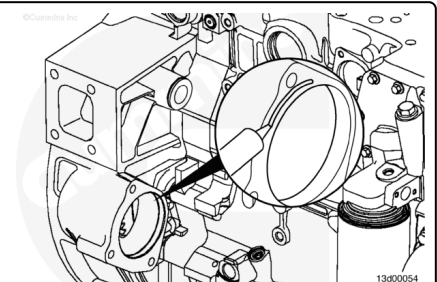

⚠ WARNING ⚠

This component or assembly weighs greater than 23 kg [50 lb]. To prevent serious personal injury, be sure to have assistance or use appropriate lifting equipment to lift this component or assembly.

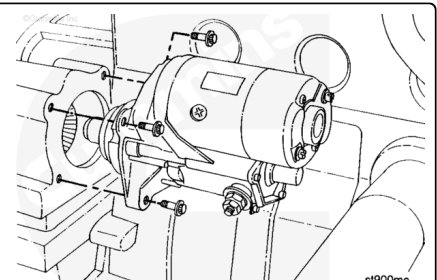

Install the three capscrews, the starting motor, and starting motor spacer, if required.

Torque Value: 43 n•m [32 ft-lb]

Last Modified: 08-Jan-2016
