


Trainings ▾

General Information

⚠ WARNING ⚠

Batteries can emit explosive gases. To reduce the possibility of personal injury, always ventilate the compartment before servicing the batteries. To reduce the possibility of arcing, remove the negative (-) battery cable first, and attach the negative (-) battery cable last.

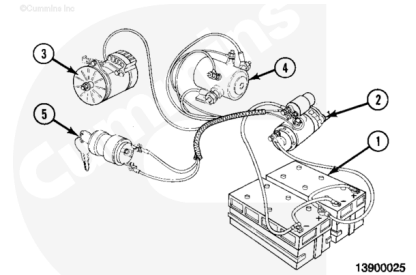

⚠ WARNING ⚠

To reduce the possibility of personal injury, keep hands, long hair, jewelry, and loose-fitting or torn clothing away from fans and other moving parts.

The basic electrical system consists of:

- Batteries (1)
- A starter motor (2)
- An alternator (3)
- A magnetic switch (4)
- An ignition switch (5)
- All necessary wiring.

All components **must** be carefully matched.

The rotary injection pump uses an electrical fuel shutoff valve. The in-line injection pump uses an electrically activated solenoid shutdown system. The function of the valve is discussed in the fuel system section.


The engine will have temperature and oil pressure sensors connected to indicators or wired for automatic shutdown. The engine can also be fitted with a block heater, oil pan heater, or intake manifold air heater.

Note : When troubleshooting a Cummins B Series generator set, refer to the Operation and Maintenance Manual, B Series Engines, Bulletin 3810205

(/qs3/portal/manualviewer.html?
path=/qs3/pubsys2/xml/en/outlines/3810205.html).

The accompanying illustrations show typical parallel and series connections:

- Parallel connection.

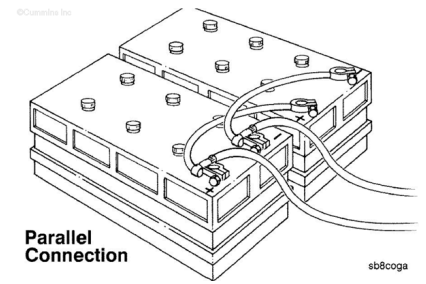

- Series connection.

