

Trainings ▾

Install

Rear Gear Train


Note : Before installing the flywheel housing, make sure any locating dowel rings are in the same position as when the flywheel housing was removed.

Note : The sealant called for in the following step may appear different than what was originally used to build the engine.

Apply a 1.5 to 2.0 mm [0.06 to 0.08 in] wide bead of sealant, Part Number 3164070, to the back side of the flywheel housing in the path illustrated.


Note : Install the flywheel housing within 10 minutes of applying the sealant or it will not seal correctly. Once installed, allow the sealant to dry for 30 minutes before running the engine.

Install the flywheel housing and capscrews.

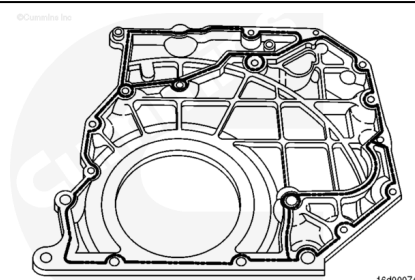

Tighten the flywheel housing capscrews in the sequence shown.

Note : Due to different SAE size flywheel housings, the location of the mounting capscrews shown may appear different than the illustration shown. The sequence shown will work for all sizes of flywheel housings.

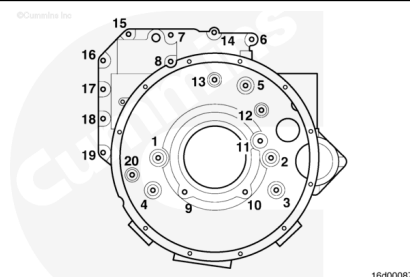


M10	49 n.m	[36 ft-lb]
M12	85 n.m	[63 ft-lb]

Front Gear Train

Note : Before installing the flywheel housing, make sure any locating dowel rings are in the same position as when the flywheel housing was removed.

If previously equipped, install a new rectangular seal on the rear seal carrier and apply assembly lube, Part Number 3163087.

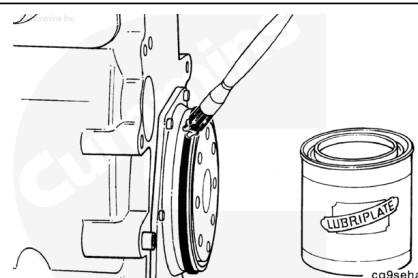


Inspect the rear face of the cylinder block and flywheel housing mounting surface for cleanliness and raised nicks or burrs.

Install two guide pins. Part Number 3163934.


Install the flywheel housing over the guide pins, making sure the flywheel housing is located on the dowel rings.

Note : Be sure the sealing ring is not damaged during installation.

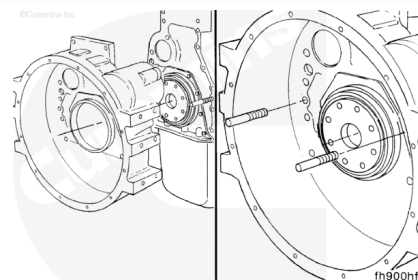

Remove the guide pins.

Install the mounting capscrews.

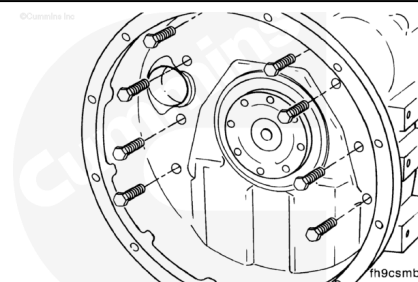

Tighten the flywheel housing capscrews in the sequence shown.

Torque Value: 77 n•m [57 ft-lb]

