

Trainings ▾

General Information

Prior to removing the damaged flywheel ring gear, first check if:

1. The ring gear is removable/replaceable
2. A replacement ring gear is available.

If may be necessary to replace the entire flywheel assembly.

Note : The ring gear on a flexplate is **not** replaceable. If the ring gear is damaged on a flexplate, the flexplate **must** be replaced as an assembly.

©Cummins Inc.


Disassemble

⚠ WARNING ⚠

To reduce the possibility of severe eye damage, wear eye protection when you drive the gear from the flywheel. Do not use a steel drift pin or damage to the component can occur.

Use the brass drift pin to drive the ring gear from the flywheel.


©Cummins Inc.

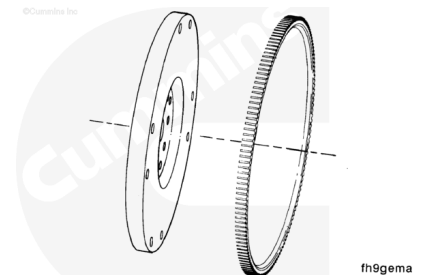

Assemble

Heat the new ring gear for 20 minutes in an oven preheated to 127°C [261°F].

©Cummins Inc.

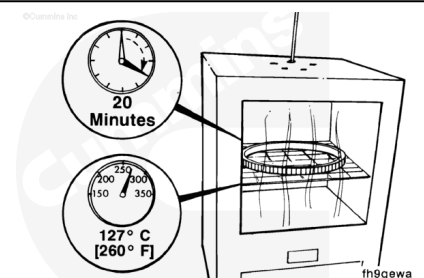

⚠ WARNING ⚠

To reduce the possibility of burns, wear protective gloves when installing the heated gear.

The ring gear **must** be installed so the bevel on the teeth is toward the crankshaft side of the flywheel.

Install the ring gear.

