


Trainings ▾

Remove

⚠ CAUTION ⚠


Do not allow metal shavings to fall in the engine when drilling a hole in the cup plug. Damage to engine components can occur.

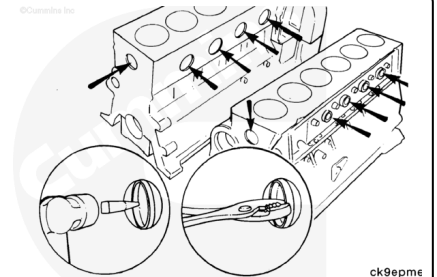

Use a center punch to mark the cup plug for drilling.

Drill a 1/8-inch hole into the cup plug.


Use a dent puller to remove the plug.

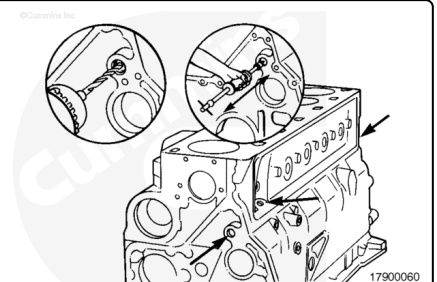

Clean


Thoroughly clean the cup plug hole using Scotch-Brite™, or equivalent.

Use spray cleaner, Part Number 3375433, or equivalent, to clean the bore for the final time.

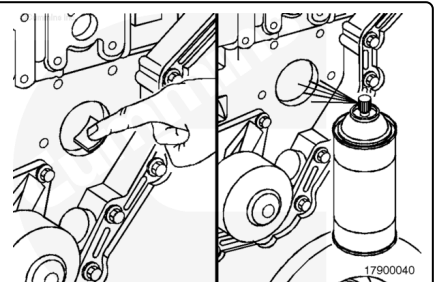

Inspect for Reuse


Inspect the cup plug bores for damage.

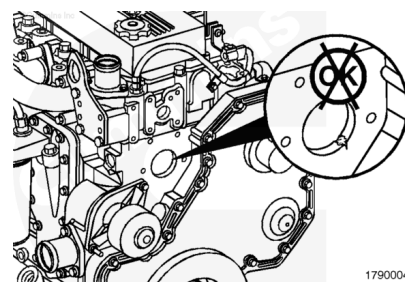

Install

⚠ CAUTION ⚠


Excessive sealant can run back into the engine and cause damage to other components. Allow the sealant to dry for a minimum of 2 hours before operating the engine. The plug can come out of the bore if the sealant is not dry.

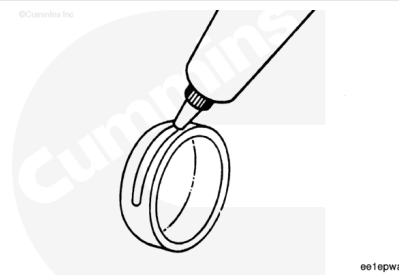

Apply a 2-mm [1/16-in] bead of cup plug sealant, Part Number 3375068, or equivalent, to the outside circumference of the cup plug and the inside circumference of the cup plug bore.


Note : Do not install a used cup plug. Discard all plugs after removal.

Install the cup plug with the appropriate cup plug driver. Refer to the Service Products Catalog, Bulletin 3377710 (</qs3/portal/manualviewer.html?path=/qs3/pubsys2/xml/en/outlines/3377710.html>).

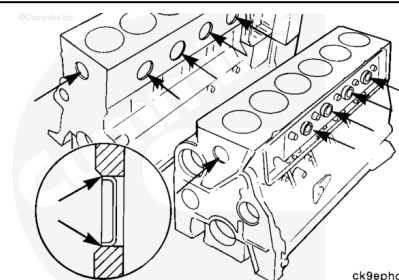

⚠ CAUTION ⚠

Do not install the cup plug too deeply. If the cup plug is not installed straight and flat, it must be replaced with a new cup plug.

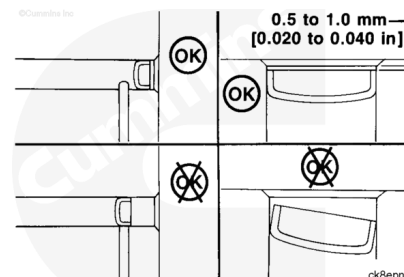

The cup plug **must** be installed with the edge of the cup plug 0.5 to 1.0 mm [0.020 to 0.040 in] deeper than the leading chamfer of the bore.

Last Modified: 16-Dec-2004
