

Trainings ▾

Cylinder Block


Tool Number

3162249

Camshaft Bushing Installation/Removal Kit

Used to remove and install camshaft bushings.

©Cummins Inc

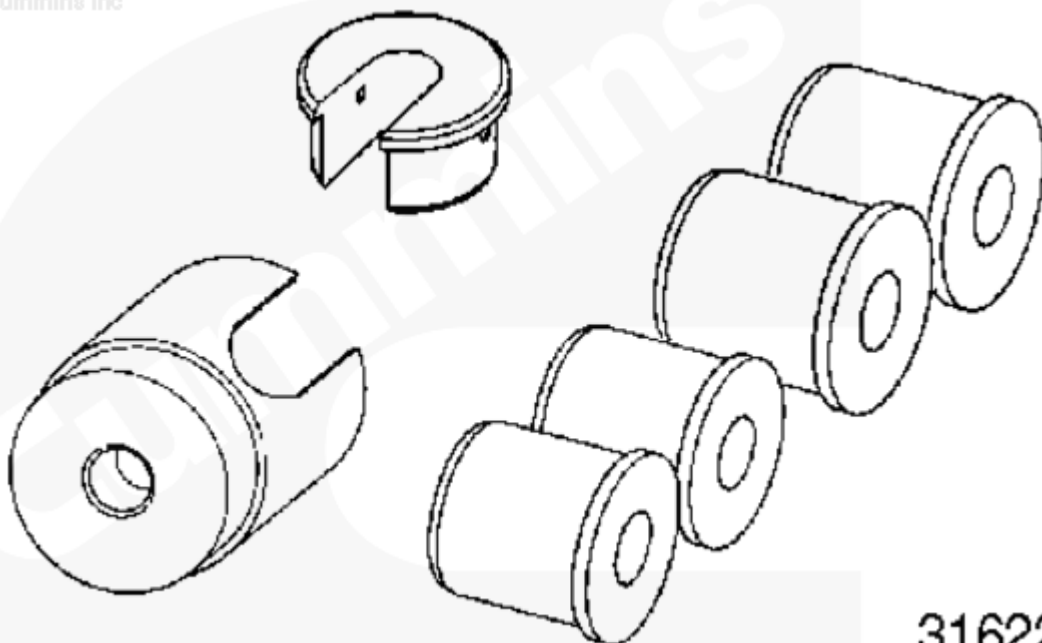

3162253


Tool Number

3163054

Camshaft Gear Installation/Removal Tool

Used to install and remove the camshaft gear without removing the camshaft from the engine.

©Cummins Inc

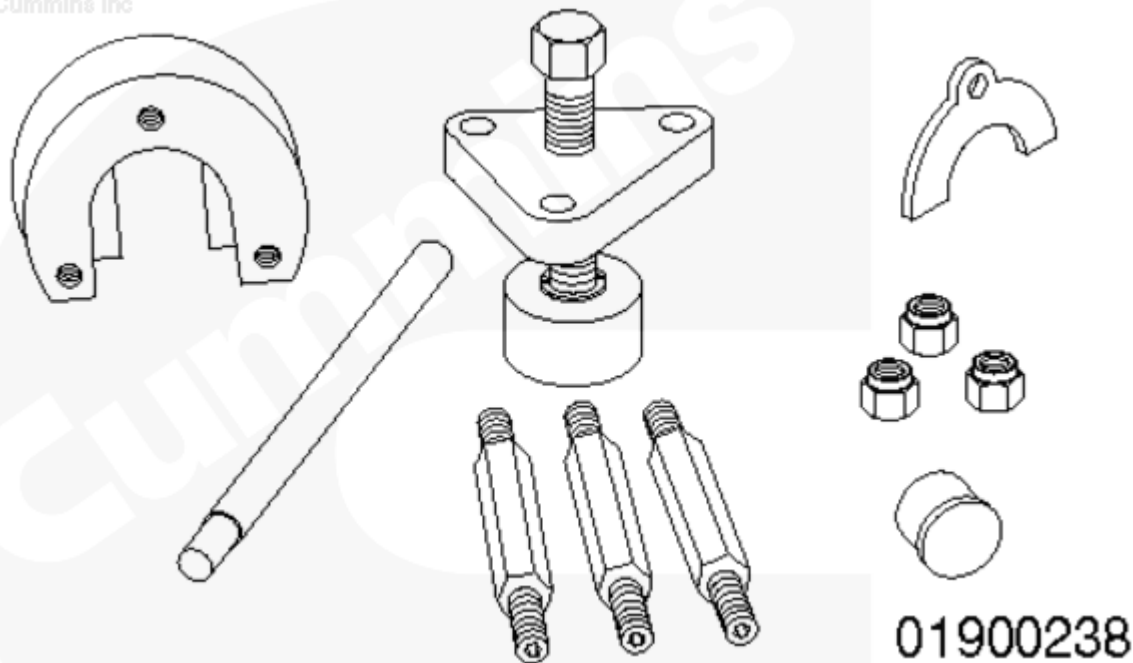
**Tool Number**

3163720

Dowel Pin Extractor

Used to remove solid locating pins from the cylinder block. Kit includes SAE and Metric sizes.

©Cummins Inc

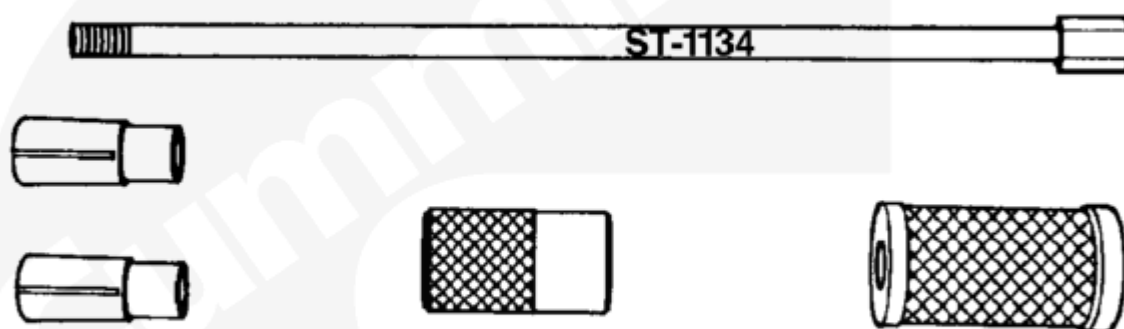

ST-1134

Tool Number

3163934

Assembly Guide Pin

M12 x 1.75

©Cummins Inc



3822784

Tool Number

3163935

Assembly Guide Pin

M10 x 1.25

©Cummins Inc



3822784

Tool Number

3163936

Assembly Guide Pin

M8 x 1.0

©Cummins Inc



3822784


Tool Number

3164067

RTV Silicone Sealant

Used in most locations requiring RTV sealant.

©Cummins Inc

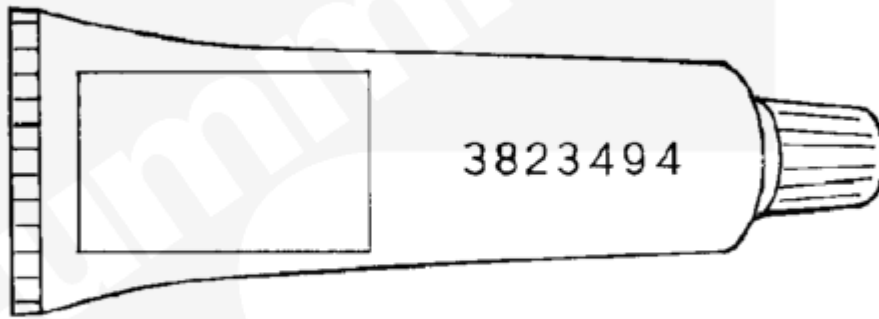**3823494**


Tool Number

3164070

RTV Sealant

Used to seal rear gear housing to block, front cover to block, oil pan T-Joints and intake manifold to cylinder head joints. For rear gear train engines only.

©Cummins Inc

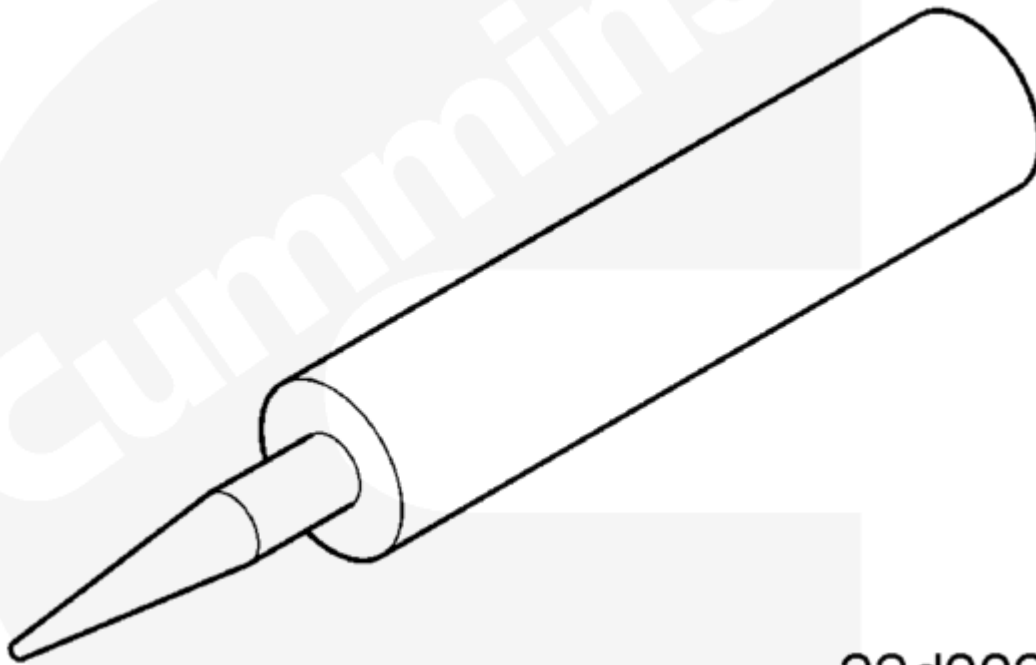

22d00220


Tool Number

3164330, 4918294

Piston Ring Compressor

Used to install piston with rings into the cylinder bore. 3164330 - 102 mm [4.02 in] bore engines.
4918294 - 107 mm [4.21 in] bore engines.

©Cummins Inc

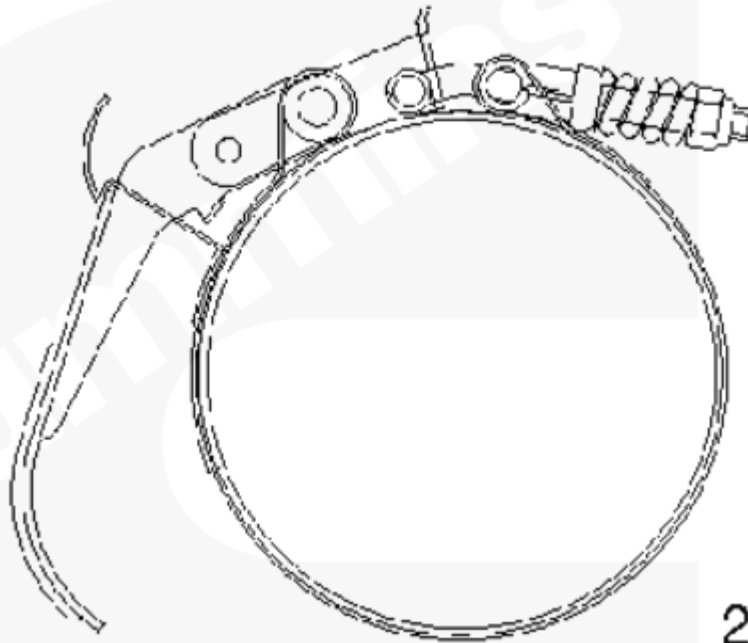

22d00141


Tool Number

3164438

Depth Gauge Assembly

Used to measure liner protrusion, cylinder block counterbore depths, and valve intrusion and/or protrusion. Equipped with a digital electronic indicator.

©Gummine Inc

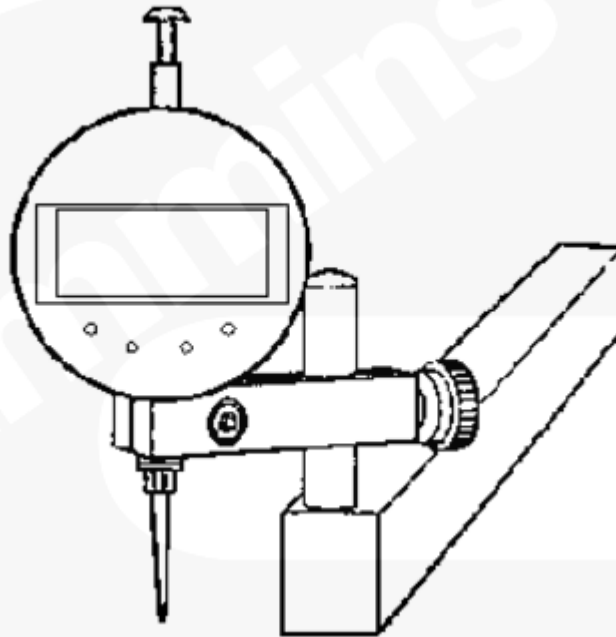

3164438


Tool Number

3164659

Oil Seal Replacer (front)

Used to remove/install the front crankshaft seal. For rear gear train engines only.

©Cummins Inc

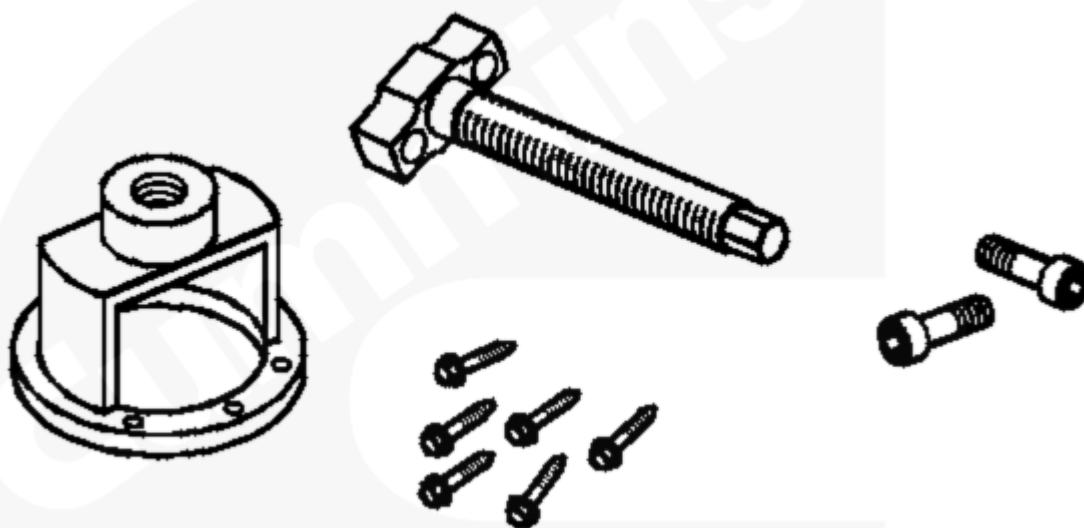

22d00086

Tool Number

3164977

Assembly Guide Pin

M8 x 1.25

©Cummins Inc



3822784


Tool Number

3165035

Cam Bushing Driver

Handheld driver can be used to replace the front or rear bushings only.

©Cummins Inc

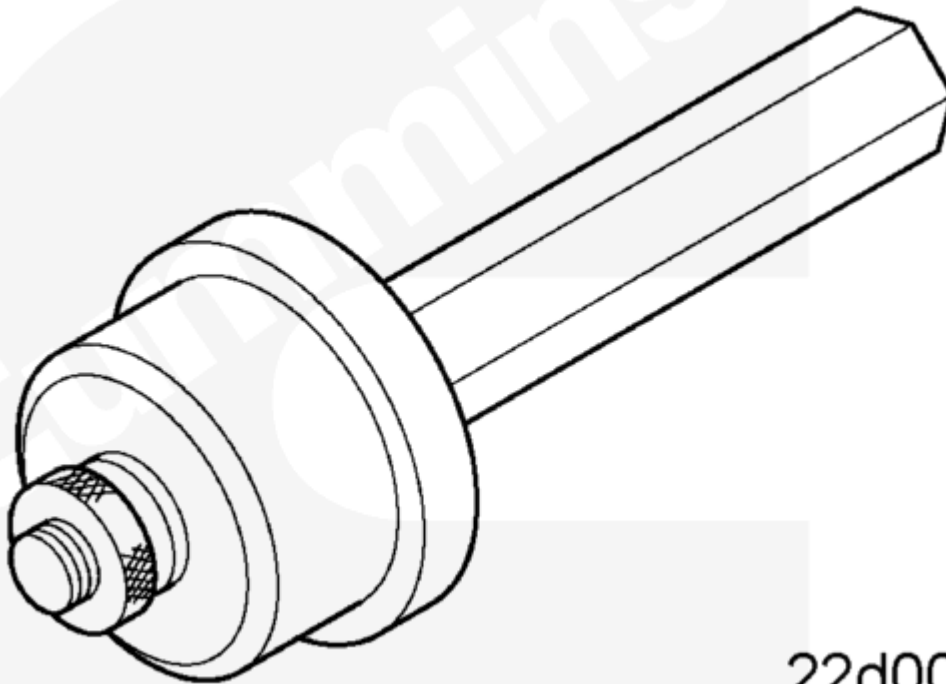

22d00221


Tool Number

3165045

Camshaft Bushing Tool

Used to remove and install camshaft bushings.

©Cummins Inc

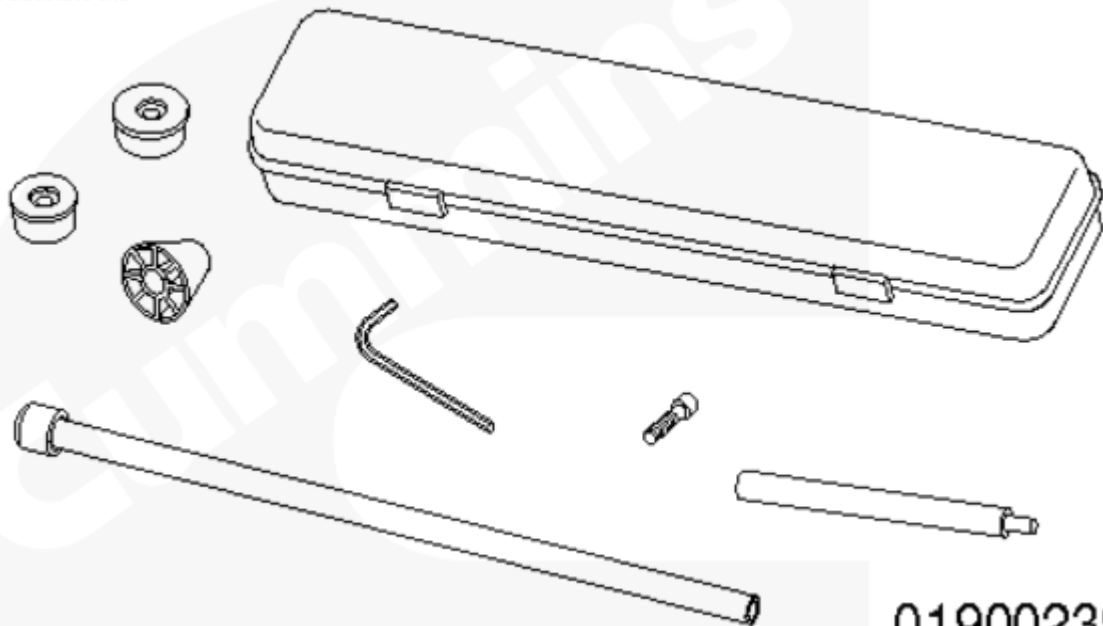

01900239


Tool Number

3375326

Crankshaft Gear Remover

Used to pull the crankshaft gear without heating or damaging the gear.

©Cummins Inc

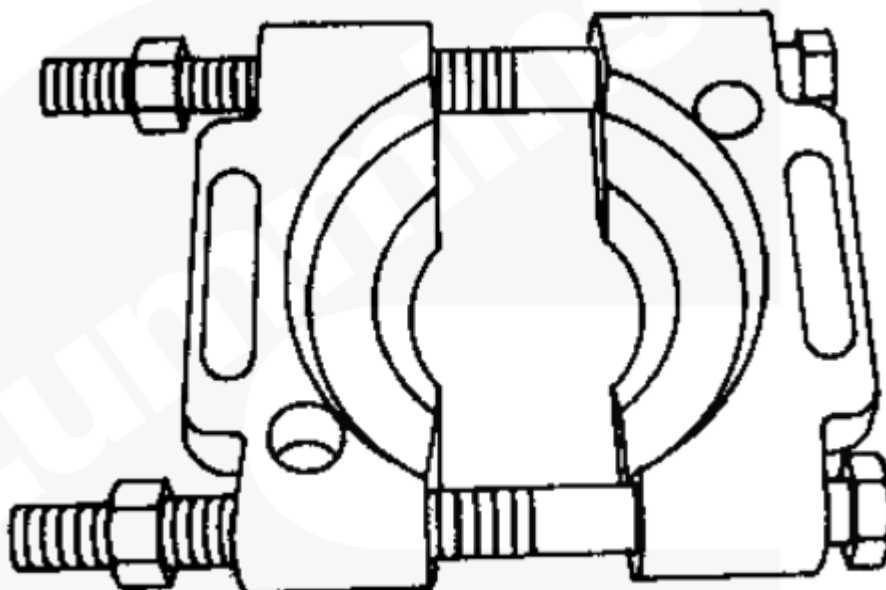

22d00101


Tool Number

3375432

Crack Detection Kit

Used to locate cracks in cylinder blocks and cylinder heads, as well as in other engine components.

©Cummins Inc

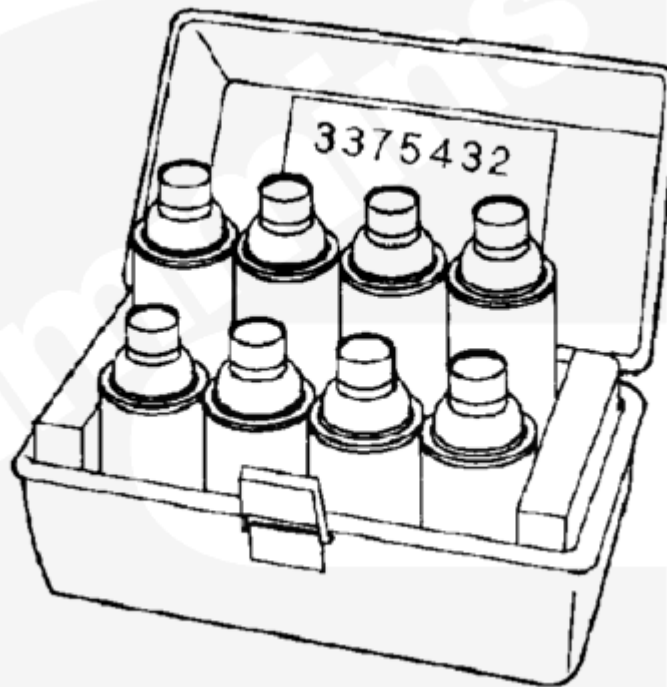

3375432


Tool Number

3375957

Nylon Lift Sling

Used to lift the crankshaft from the engine during installation and removal.

©Cummins Inc

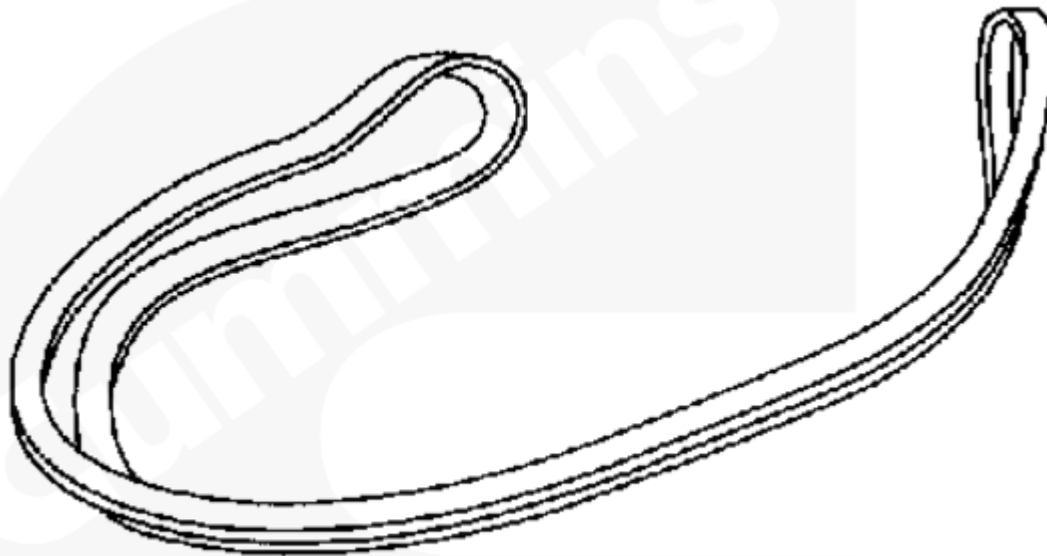

01900240

Tool Number

3376488

Assembly Guide Pin

M10 x 1.5

©Cummins Inc



3822784


Tool Number

3377399

Magnetic Base Indicator Holder

Used in conjunction with dial indicator, Part Number 3824564 (metric); 4918289 (SAE).

©Cummins Inc

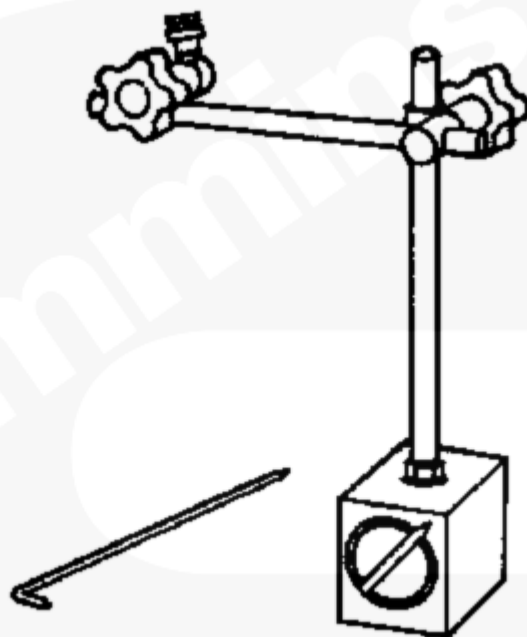

22d00102


Tool Number

3822513

Tappet Removal Tool Kit

Used to remove and install valve tappets.

©Cummins Inc

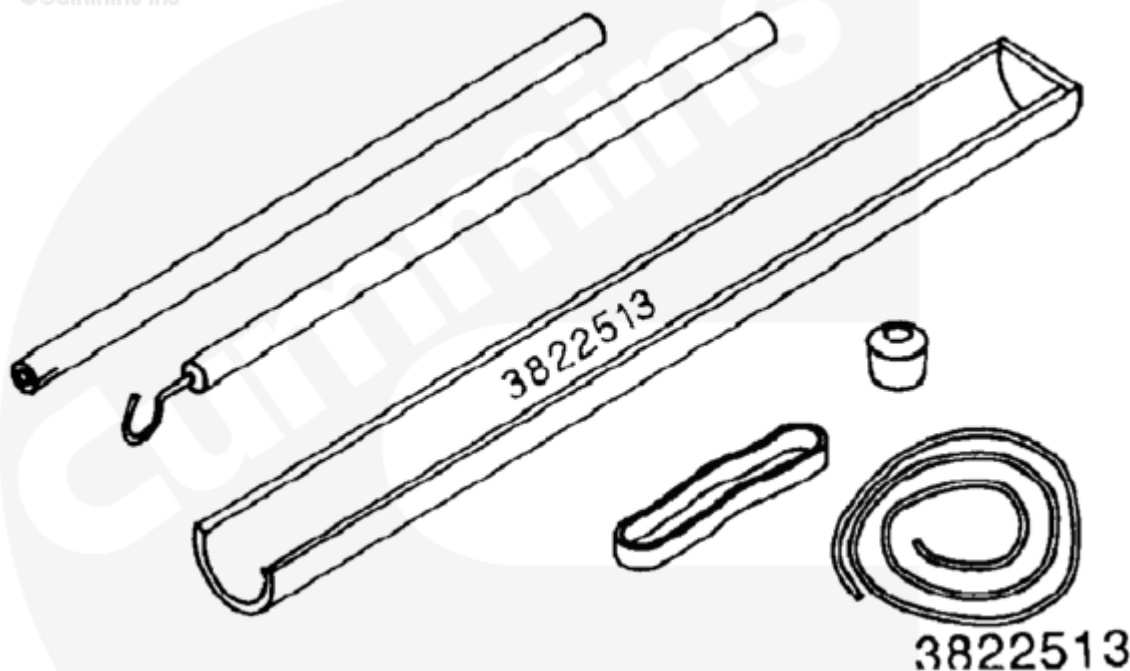

Tool Number

3822709

Threaded Insert Kit

Blind metric inserts can be used to repair different size cylinder block threads.

©Cummins Inc



22d00218


Tool Number

3823137

Piston Ring Expander

Used to install piston rings onto pistons without damaging or distorting the rings.

©Cummins Inc

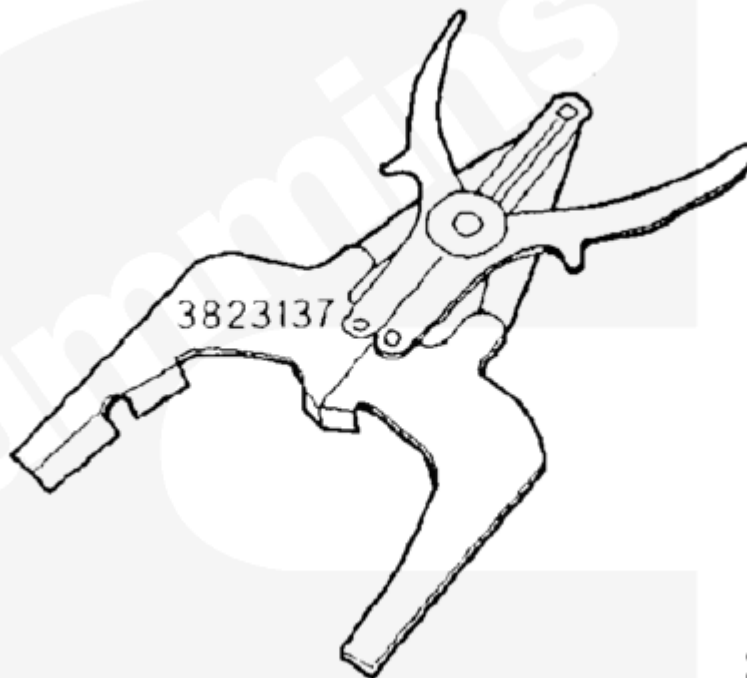

3823137

3823137


Tool Number

3823585

Gear Splitter

Used to separate cast iron gears.

©Cummins Inc

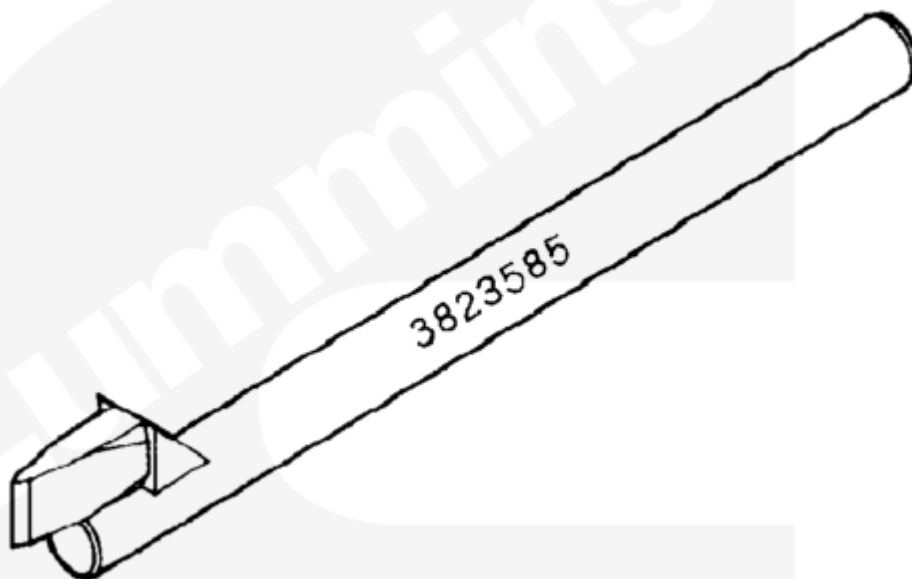

3823585


Tool Number

3823612

Flexible Hone

Used to deglaze the engine block cylinder walls.

©Cummins Inc

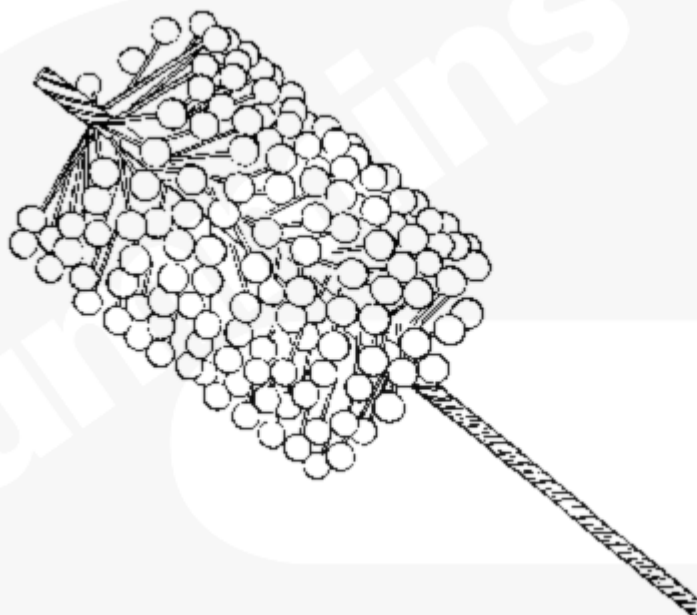

22d00103


Tool Number

3823621

Hydraulic Actuator Kit

Used to remove and install camshaft bushings.

©Cummins Inc

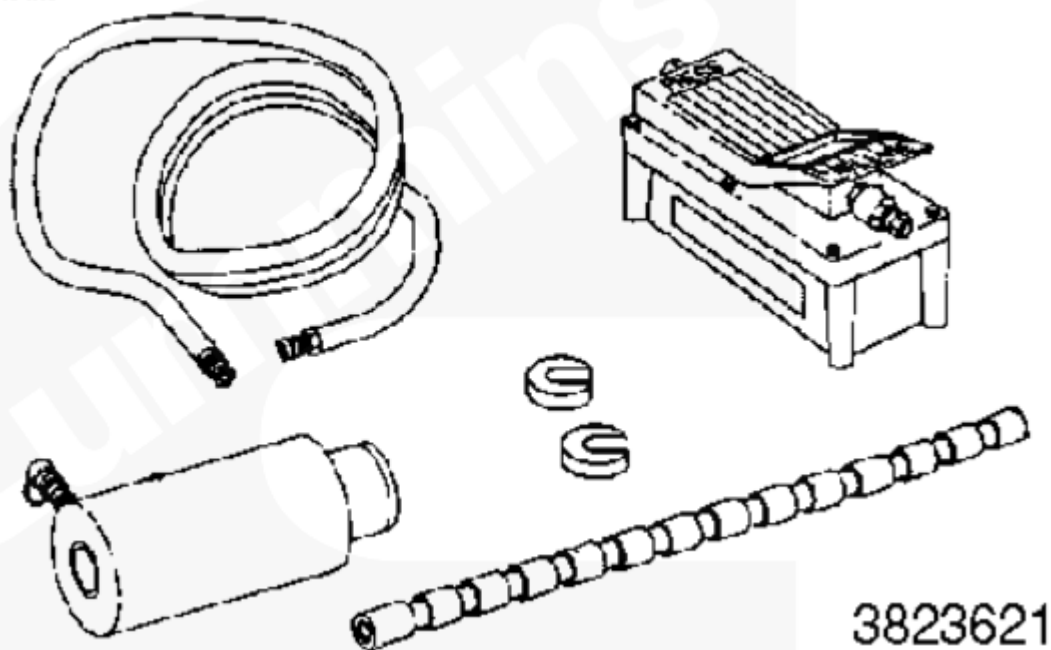


Tool Number

3823818

Main Bearing Rollout Tool

Used to remove and install the main bearings with the crankshaft installed.

©Cummins Inc

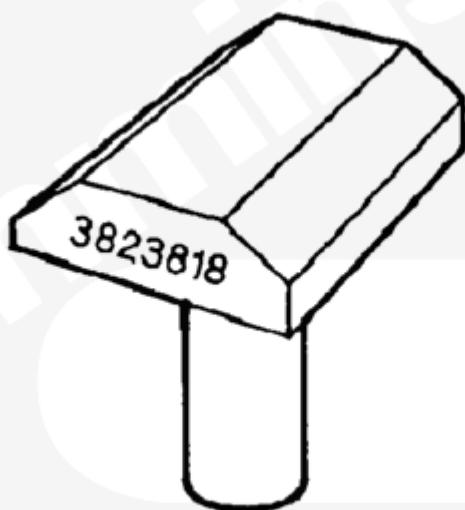

3823818


Tool Number

3824078

Wear Sleeve Installation Tool

Used to install the rear crankshaft lubricating oil seal wear sleeve.

©Cummins Inc

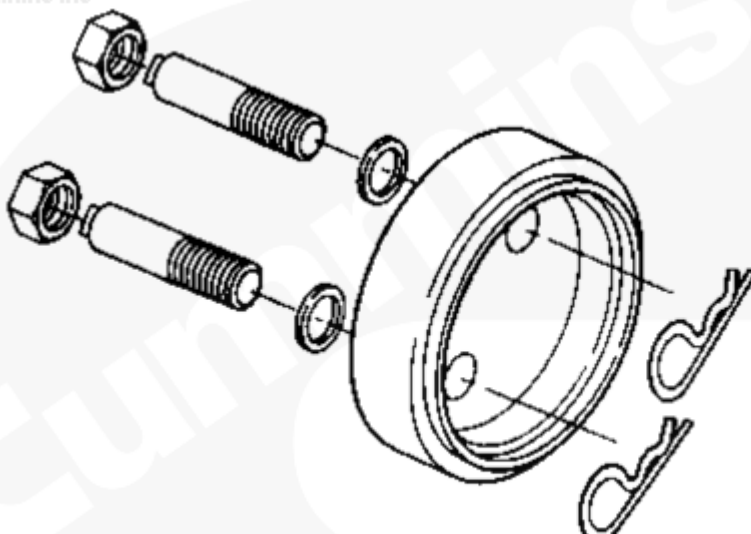

3824078

Tool Number

3824498

Oil Seal Installation Tool

Used to install the front crankshaft lubricating oil seal in the front cover to a specified depth.

©Cummins Inc



3824498


Tool Number

3824500

Wear Sleeve Installation Tool

Used to install the front crankshaft lubricating oil seal wear sleeve.

©Cummins Inc

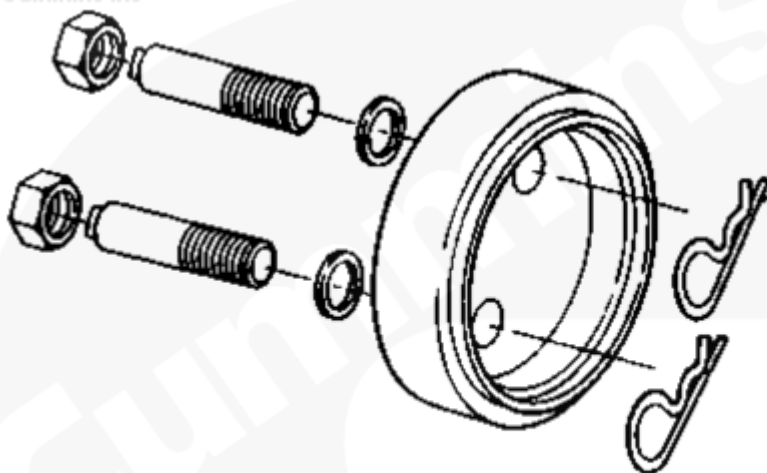

3824500


Tool Number

3824591

Engine Barring Gear

Used to engage the flywheel ring gear to rotate the crankshaft.

©Cummins Inc

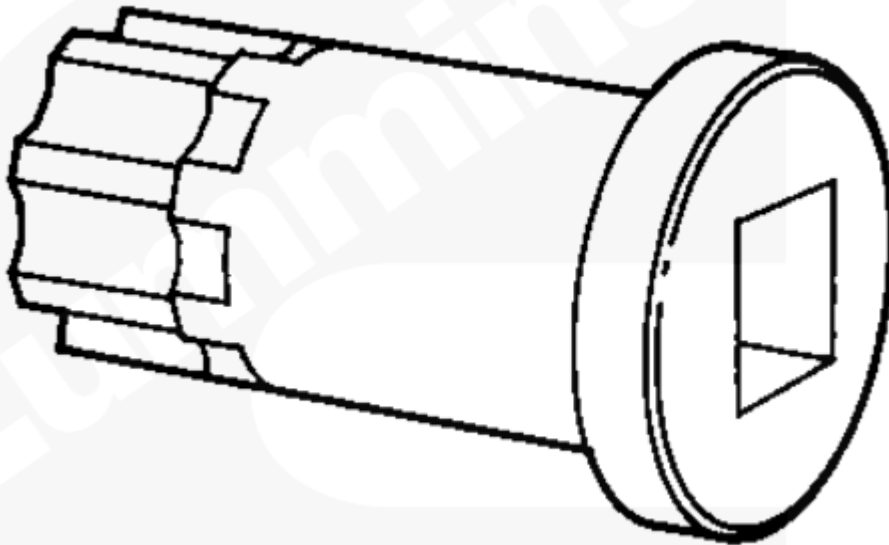

3824591


Tool Number

4918219

Precision Straightedge

Used to check cylinder blocks and cylinder heads for flatness.

©Cummins Inc

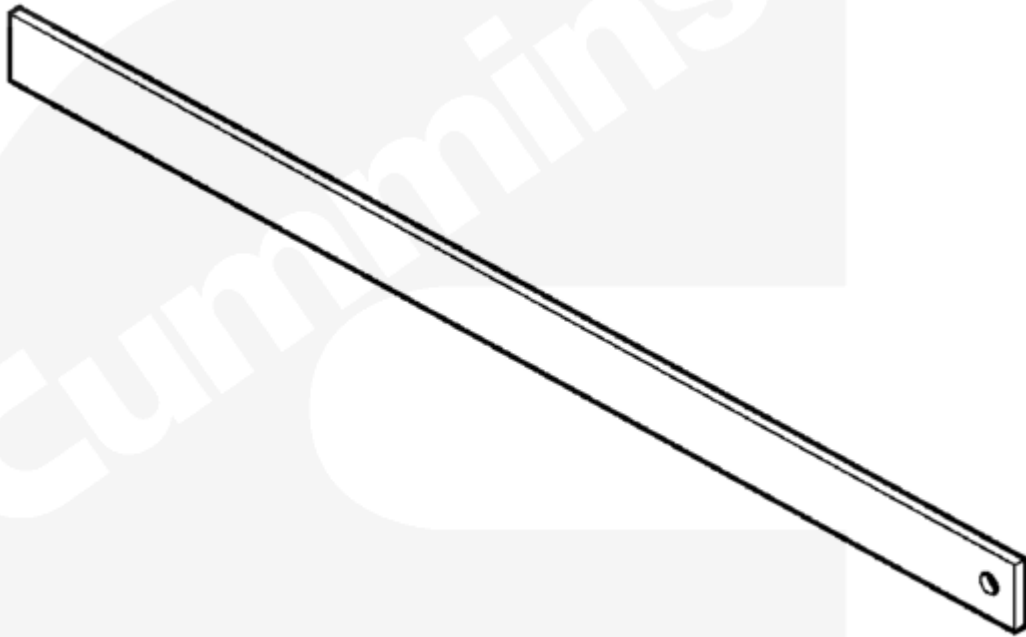

22d00222


Tool Number

5395259

Crankshaft Seal Installation Kit, Rear

Used to install laydown lip seal.

©Cummins Inc

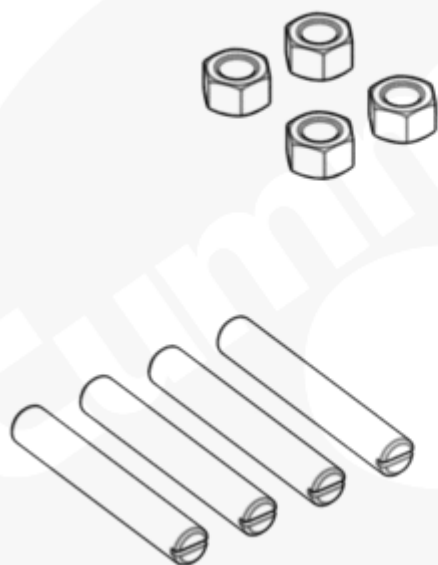

01901081


Tool Number

5395330

Crankshaft Seal Removal Kit, Rear

Used to remove laydown lip seal.

©Cummins Inc

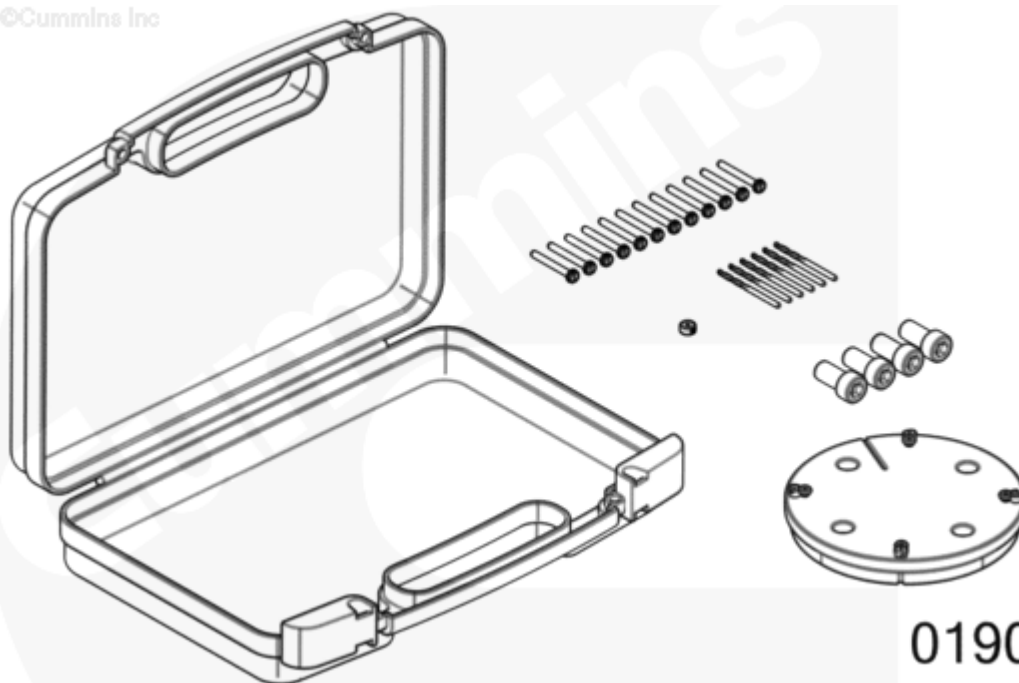

01901083


Tool Number

5395409

Carrier Centering Tool, Rear Crankshaft

Used to align the rear carrier on front gear train engines only.

©Cummins Inc

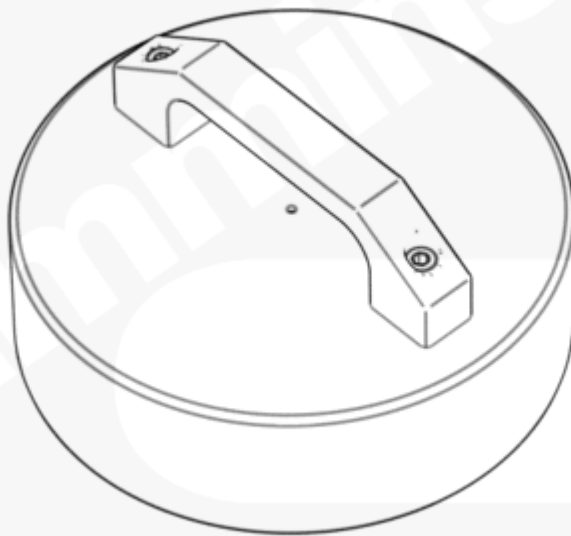

01901082