


Trainings ▾

Engine Views

The following illustrations show the locations of the major external engine components, filters, and other service and maintenance points. Some external components will be at different locations for different engine models.

Note : The illustrations are **only** a reference to show a typical engine.


©Cummins Inc

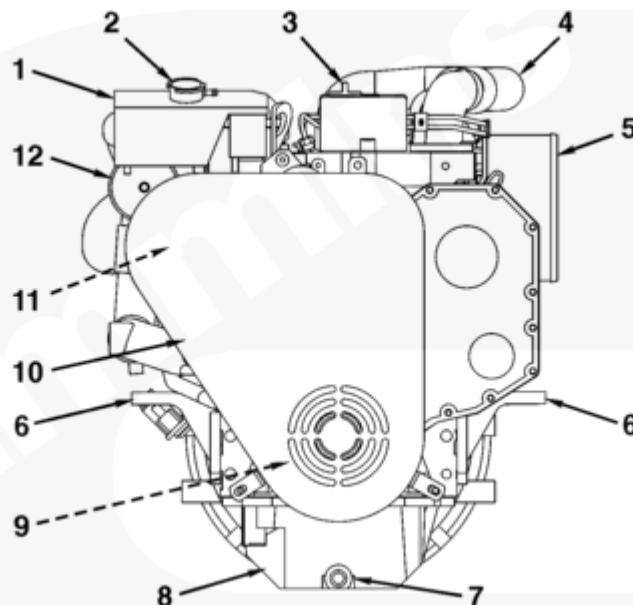

00900436

Front View - Typical B Series, 4 Cylinder


1. Expansion tank
2. Coolant pressure cap an coolant fill
3. Engine oil fill cap
4. Inlet air crossover tube
5. Air filter
6. Engine mounts
7. Engine oil drain, front
8. Oil pan
9. Vibration damper (behind cover)
10. Belt guard
11. Alternator (behind cover)
12. Heat exchanger.

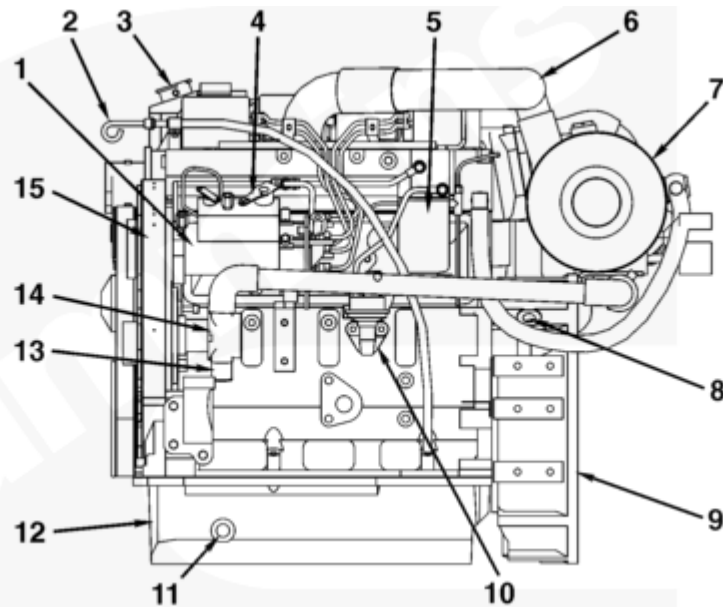

00900433

Left or Port View - Typical B Series 4 Cylinder


1. Fuel pump
2. Dipstick (engine oil)
3. Coolant pressure cap and coolant fill
4. Throttle lever
5. Fuel filter
6. Inlet air crossover tube
7. Air cleaner
8. Magnetic pickup speed sensor
9. Flywheel housing
10. Fuel transfer/lift pump
11. Oil pan heater location (if equipped)
12. Oil pan
13. Sea water inlet
14. Sea water pump
15. Engine dataplate location.

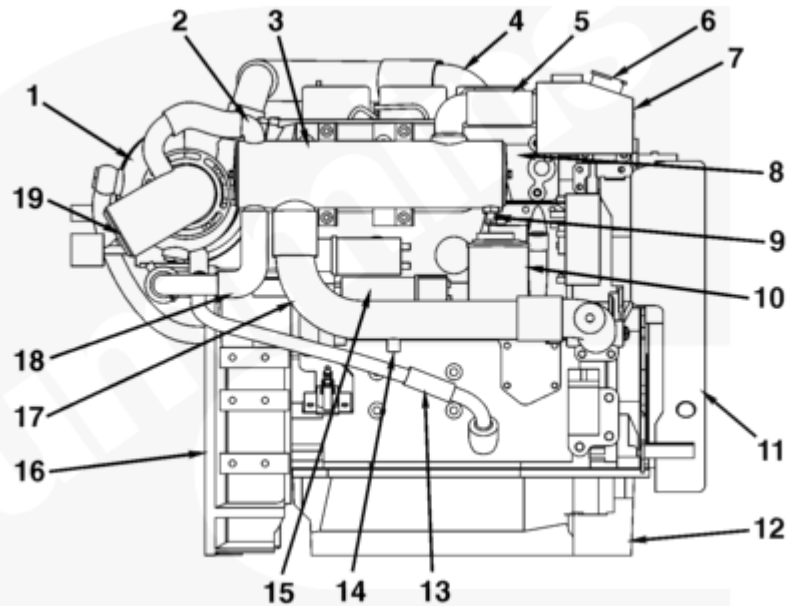

00900434

Right or Starboard View - Typical B Series, 4 Cylinder


1. Turbocharger
2. Sea water outlet to exhaust elbow
3. Heat exchanger
4. Inlet air crossover tube
5. Coolant inlet to heat exchanger
6. Coolant pressure cap and coolant fill
7. Expansion tank
8. Exhaust Manifold (water cooled)
9. Zinc plug (heat exchanger)
10. Oil filter
11. Belt guard
12. Oil pan
13. Turbocharger oil drain tube
14. Coolant drain
15. Starter
16. Flywheel housing
17. Coolant outlet to engine
18. Sea water inlet to heat exchanger
19. Exhaust elbow.

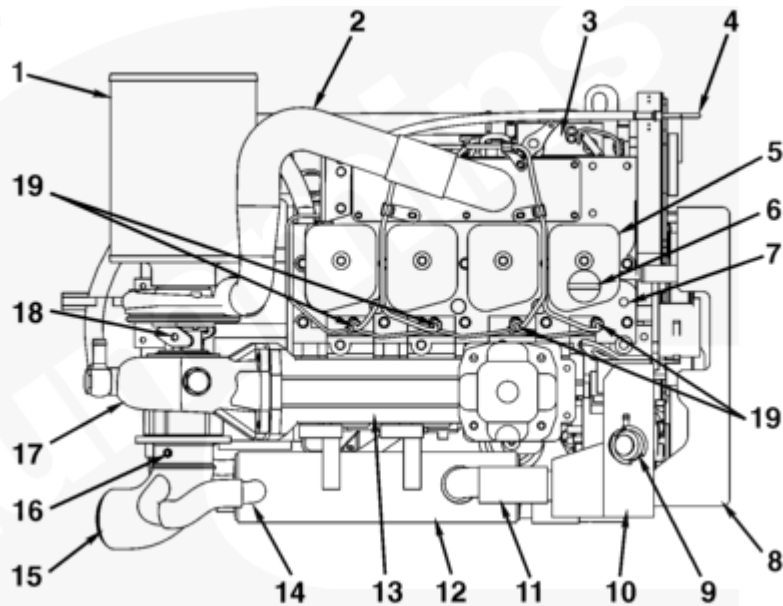

00900435

Top View - Typical B Series, 4 Cylinder


1. Air cleaner
2. Inlet air crossover tube
3. Fuel pump
4. Dipstick (engine oil)
5. Valve cover
6. Engine oil fill cap
7. Coolant temperature sensor
8. Belt guard
9. Coolant pressure cap and coolant fill
10. Expansion tank
11. Coolant inlet to heat exchanger
12. Heat exchanger
13. Exhaust manifold (water cooled)
14. Sea water outlet to exhaust elbow
15. Exhaust elbow
16. Exhaust temperature/back pressure sensor (test port)
17. Turbocharger
18. Turbocharger lubricating oil inlet
19. Fuel injectors.

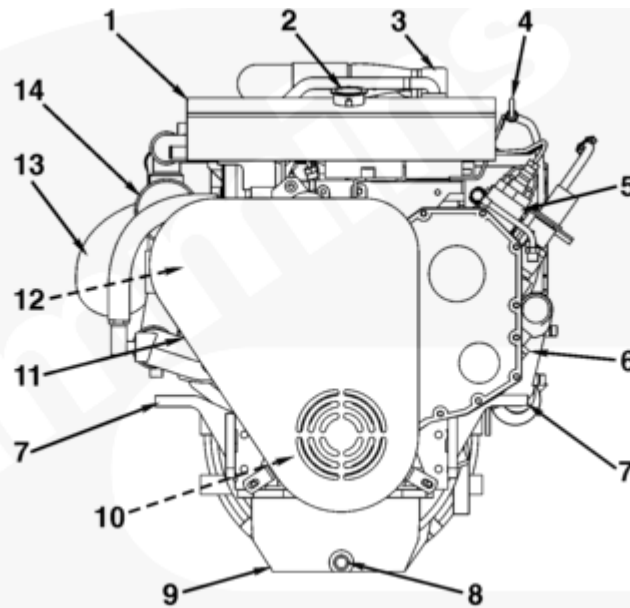

00900440

Front View - Typical B Series, 6 Cylinder Jacket Water Aftercooled


1. Expansion tank
2. Coolant pressure cap and coolant fill
3. Aftercooler
4. Dipstick (engine oil)
5. Fuel pump
6. Sea water pump
7. Engine mount
8. Engine oil drain (front)
9. Oil pan
10. Vibration damper (behind cover)
11. Belt guard
12. Alternator (behind cover)
13. Exhaust elbow
14. Heat exchanger.

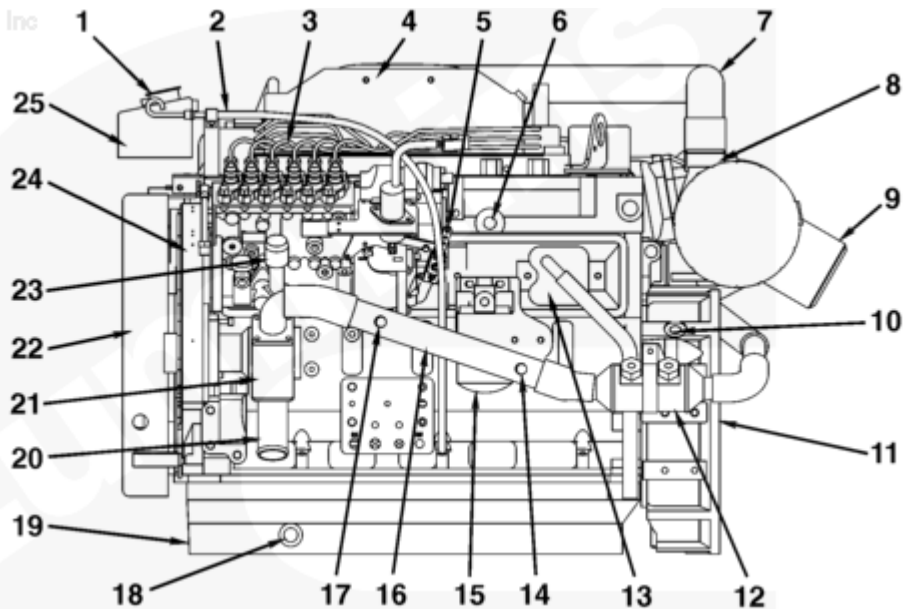

00900437

Left or Port View - Typical B Series, 6 Cylinder Jacket Water Aftercooled


1. Coolant pressure cap an coolant fill
2. Dipstick (engine oil)
3. High pressure fuel lines (6)
4. Aftercooler
5. Throttle lever
6. Intake manifold temperature sensor
7. Inlet air crossover tube
8. Turbocharger
9. Exhaust elbow
10. Magnetic pickup speed sensor
11. Flywheel housing
12. Marine gear oil cooler
13. Crankcase breather
14. Fuel cooler fuel inlet
15. Fuel filter
16. Fuel cooler
17. Fuel cooler fuel outlet
18. Oil heater location (if equipped)
19. Oil pan
20. Sea water inlet
21. Sea water pump
22. Belt guard
23. Fuel primer/lift pump
24. Engine dataplate
25. Expansion tank.

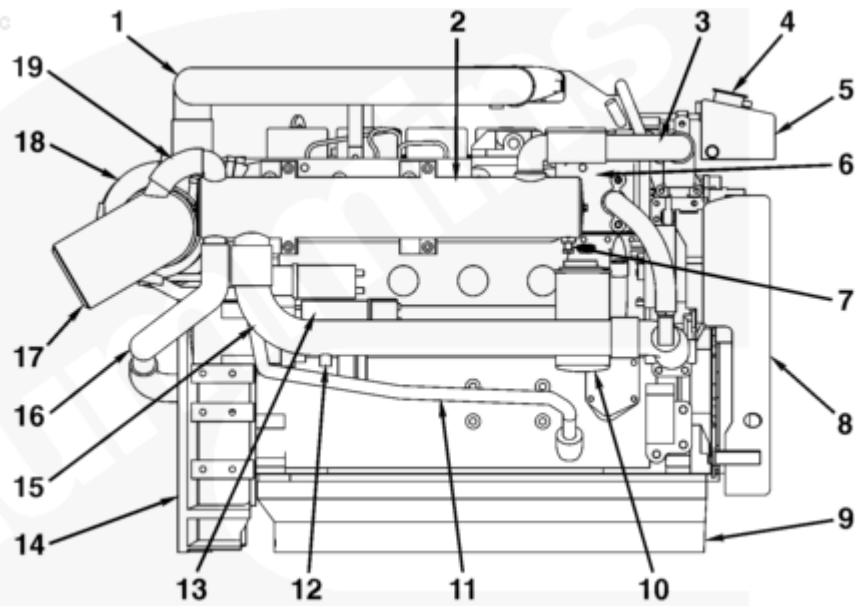

00900438

Right or Starboard View - Typical B Series, 6 Cylinder Jacket Water Aftercooled


1. Inlet air crossover tube
2. Heat exchanger
3. Coolant inlet to heat exchanger
4. Coolant pressure cap an coolant fill
5. Expansion tank
6. Exhaust manifold (water cooled)
7. Zinc plug (heat exchanger)
8. Belt guard
9. Oil pan
10. Oil filter
11. Turbocharger oil drain
12. Coolant drain
13. Starter
14. Flywheel housing
15. Coolant out to engine
16. Sea water inlet to heat exchanger
17. Exhaust elbow
18. Turbocharger
19. Sea water outlet to exhaust elbow.

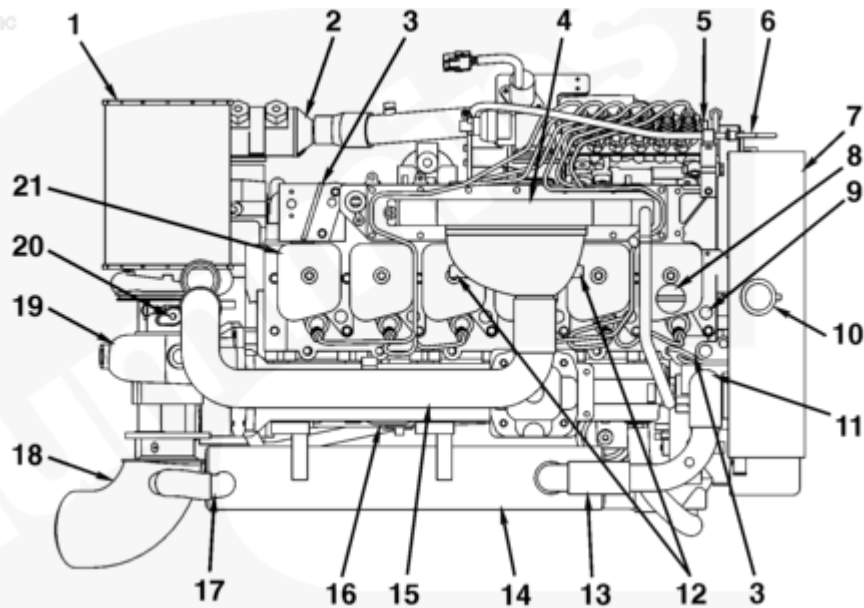

00900439

Top View - Typical B Series, 6 Cylinder Jacket Water Aftercooled


1. Air filter
2. Marine gear oil cooler
3. Lifting points
4. Aftercooler
5. Fuel pump
6. Dipstick (engine oil)
7. Expansion tank
8. Engine oil fill cap
9. Coolant temperature sensor
10. Coolant pressure cap and coolant fill
11. Coolant thermostat location
12. Inlet air crossover tube temperature sensors
13. Coolant inlet to heat exchanger
14. Heat exchanger
15. Inlet air crossover tube
16. Exhaust manifold (water cooled)
17. Sea water outlet to exhaust elbow
18. Exhaust elbow
19. Turbocharger
20. Turbocharger oil inlet
21. Valve cover.

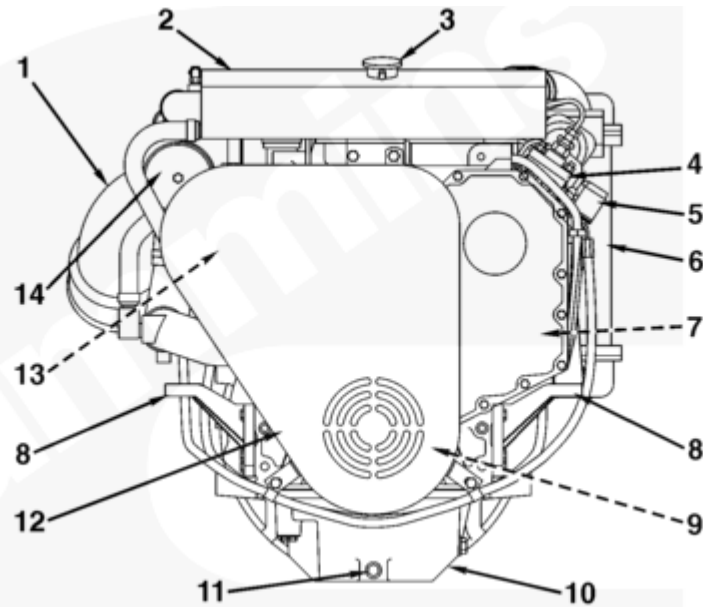

00900444

Front View - Typical B Series, 6 Cylinder Sea Water Aftercooled


1. Exhaust elbow
2. Expansion tank
3. Coolant pressure cap and coolant fill
4. Fuel injection pump
5. Fuel lift/primer pump
6. Aftercooler
7. Sea water pump
8. Engine mount
9. Vibration damper (behind cover)
10. Oil pan
11. Oil drain, front
12. Belt guard
13. Alternator (behind cover)
14. Heat exchanger.

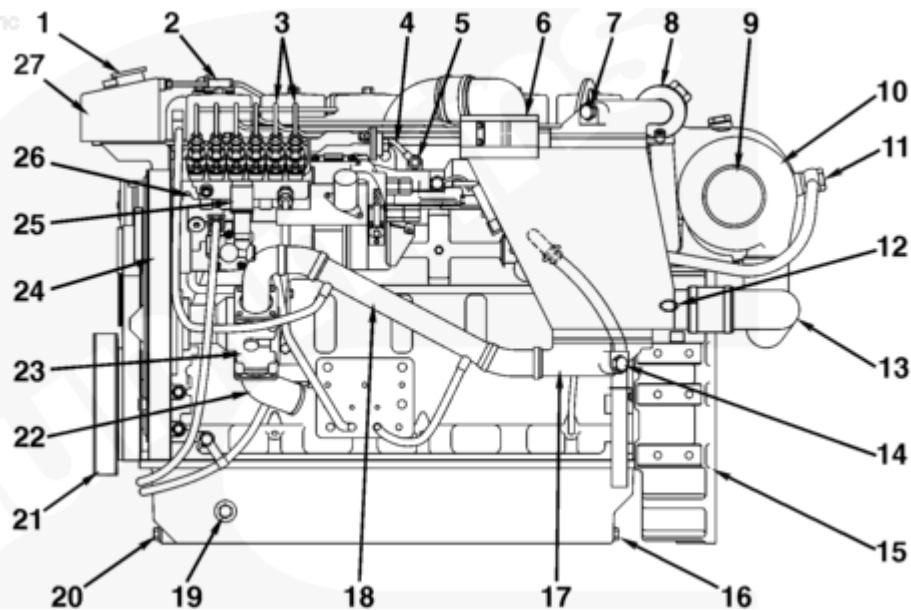

00900441

Left or Port View - Typical B Series, 6 Cylinder Sea Water Aftercooled


1. Coolant pressure cap and coolant fill
2. Engine oil fill cap
3. High pressure fuel lines (6)
4. Low pressure fuel lines
5. Fuel vent screw
6. Air heater element
7. Zinc plug (aftercooler)
8. Marine gear oil cooler
9. Air inlet connection
10. Turbocharger
11. Turbocharger coolant supply
12. Magnetic pickup speed sensor
13. Inlet air crossover tube
14. Zinc plug (aftercooler)
15. Flywheel housing
16. Engine oil drain, rear
17. Aftercooler
18. Fuel cooler
19. Oil pan heater location (if equipped)
20. Engine oil drain, front
21. Vibration damper
22. Sea water pump inlet
23. Sea water pump
24. Engine dataplate location
25. Fuel lift/primer pump
26. Fuel injection pump
27. Expansion tank.

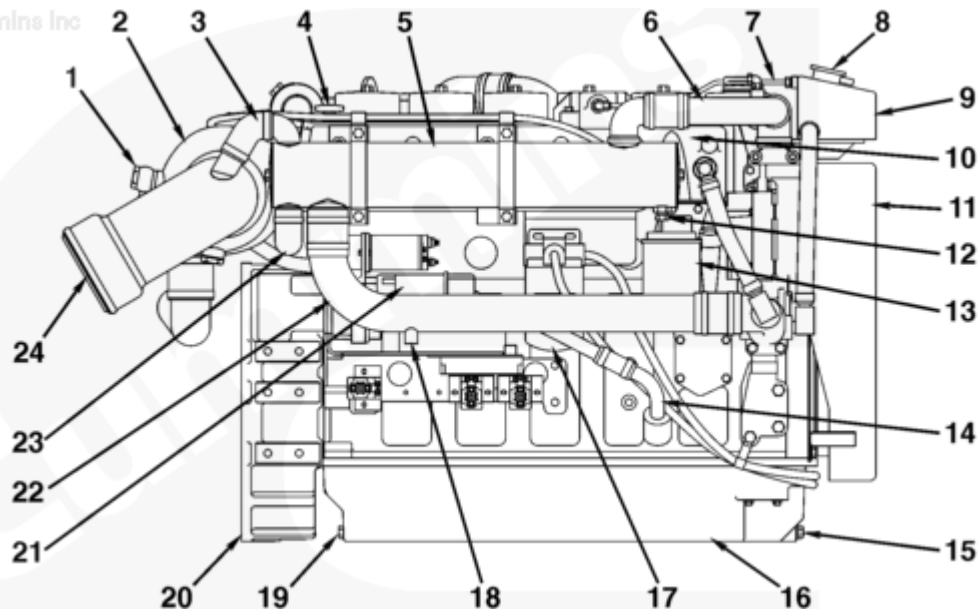

00900442

Right or Starboard View - Typical B Series, 6 Cylinder Sea Water Aftercooled

1. Turbocharger coolant inlet
2. Turbocharger
3. Sea water outlet to exhaust elbow
4. Dipstick (engine oil)
5. Heat exchanger
6. Coolant inlet to heat exchanger
7. Coolant vent line
8. Coolant pressure cap and coolant fill
9. Expansion tank
10. Exhaust manifold (water cooled)
11. Belt guard
12. Zinc plug (heat exchanger)
13. Oil filter
14. Turbocharger oil drain tube
15. Engine oil drain, front
16. Oil pan
17. Fuel filter
18. Coolant drain plug
19. Engine oil drain, rear
20. Flywheel housing
21. Starter
22. Coolant outlet to engine
23. Sea water inlet to heat exchanger
24. Exhaust elbow.

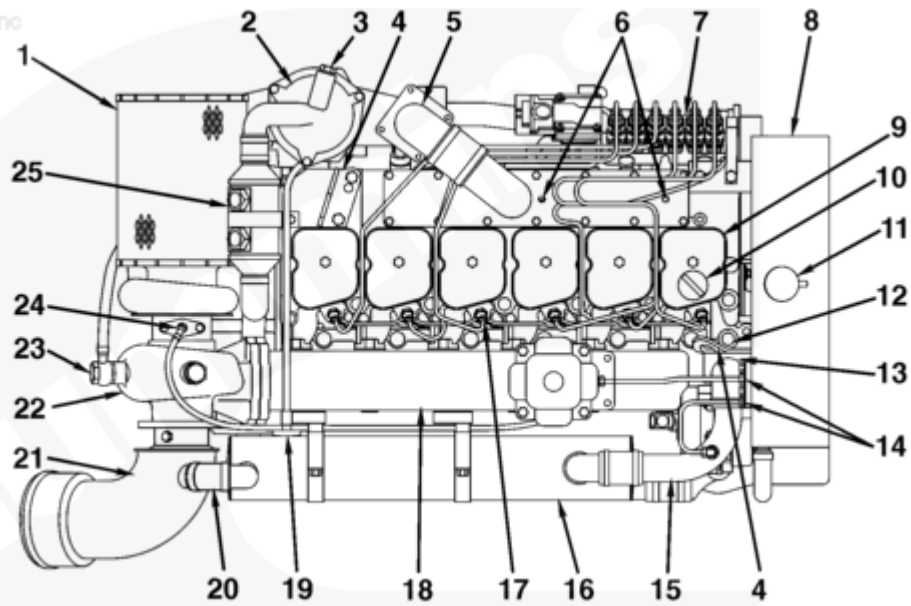

00900443

Top View - Typical B Series, 6 Cylinder Sea Water Aftercooled

1. Air cleaner
2. Aftercooler
3. Zinc plug (aftercooler)
4. Lifting points
5. Air heater element
6. Intake manifold temperature sensors
7. Fuel injection pump
8. Expansion tank
9. Valve cover
10. Engine oil fill cap
11. Coolant pressure cap and coolant fill
12. Coolant temperature sensor
13. Coolant thermostat
14. Coolant vent lines
15. Coolant inlet to heat exchanger
16. Heat exchanger
17. Fuel injectors (6)
18. Exhaust manifold (water cooled)
19. Dipstick (engine oil)
20. Sea water outlet to exhaust elbow
21. Exhaust elbow
22. Turbocharger
23. Turbocharger coolant inlet
24. Turbocharger oil inlet
25. Marine gear oil cooler.

