

Trainings ▾

Select Service Tools

Recommended Cummins® Service Tools

- Electrical test lead, Part Number 3823993
- Electrical test lead, Part Number 3824811
- Electrical test lead, Part Number 3823995.


Additional Service Items

- No additional service items required.

General Information

The engine interface wiring harness connects the customer interface box (C.I.B.) to the engine control module (ECM) original equipment manufacturer (OEM) interface connection.

Note : The primary purpose of this harness is to provide the length necessary to connect the components and interface with the engine ECM. Use the wiring diagram for details.

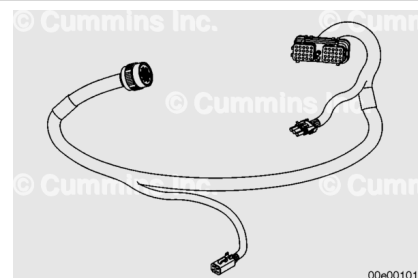


Test

Use the following procedure for detailed component diagrams. Refer to Procedure 208-002 in Section E.
(</qs3/pubsys2/xml/en/procedures/513/513-208-002.html>)

Use the wiring diagram, if necessary.

Check the harness for connectivity and damage. Use the following procedure for general resistance measurement techniques. Refer to Procedure 019-360 in Section 19.
(</qs3/pubsys2/xml/en/procedures/99/99-019-360.html>)

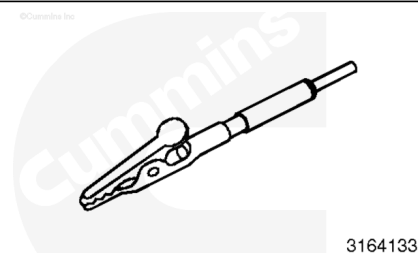

Use the above Select Service Tools section for test lead information.

Use the following procedure for general inspection techniques.

Refer to Procedure 019-361 in Section 19.

(/qs3/pubsys2/xml/en/procedures/99/99-019-361.html)

Preparatory Steps

⚠ WARNING ⚠


Batteries can emit explosive gases. To reduce the possibility of personal injury, always ventilate the compartment before servicing the batteries. To reduce the possibility of arcing, remove the negative (-) battery cable first and attach the negative (-) battery cable last.

- Disconnect the batteries. See equipment manufacturer service information.

Remove

Disconnect the engine interface wiring harness from the engine and the C.I.B.. If necessary for repair, remove the harness.


Note the harness routing and location of harness mounting points for installation.

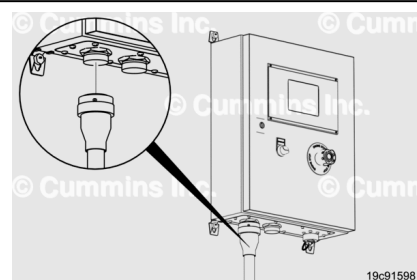

Install

Connect the engine interface wiring harness to the engine and C.I.B..

Route and secure the harness to mounting points noted during removal.

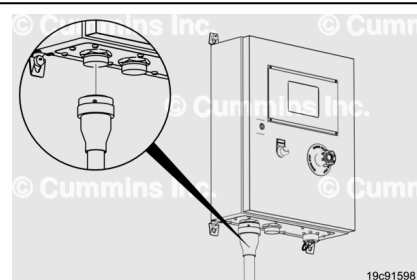

Finishing Steps

WARNING

Batteries can emit explosive gases. To reduce the possibility of personal injury, always ventilate the compartment before servicing the batteries. To reduce the possibility of arcing, remove the negative (-) battery cable first and attach the negative (-) battery cable last.

- Connect the batteries. See equipment manufacturer service information.
- Perform system test to verify proper function. Refer to Procedure 015-047 in Section 15. (</qs3/pubsys2/xml/en/procedures/513/513-015-047.html>)