

Trainings ▾

General Information

The Joystick Activation Signal opens and closes the Function 5 and 6 dual relay within the thruster interface data harness (in case of using the switch or analog based thruster interface modules) or it could drive internal relays existing in the CAN gateway. Cummins Inc. is **not** responsible for any original equipment manufacturer (OEM) supplied components connected to the dual relay Function 5 and 6. The dual relay module is **only** available with the switch-based and analog-based thruster interface modules. Reference wiring Diagram, Bulletin 4358381, if necessary. Refer to Procedure 015-179 CAN Gateway for more information about using Joystick Activation Signal and CAN Gateway.

The procedure applies to the following software configuration:


- Inboard Joystick version 2.17 and greater
- Thruster Interface Module version 2.10 and greater.

Joystick Activation Signal

Joystick activation signal is available with the CAN gateway via a 4 pin connector. The OEM is responsible for fabricating their own harness. Joystick activation signal drives internal relays within the CAN Gateway instead of using the Dual Relay Module. Function 5 and 6 remains the same. Refer to wiring diagram, Bulletin 4358381, for more information.

During Function 5 signal, the joystick activation signal activates Function 5. Function 5 will be activated when the joystick is moved off neutral. Function 5 will **not** be activated if the thruster buttons are pressed while the control head is active. Once in joystick mode, Function 5 will remain activated until the control lever station handles are moved out of neutral, then Function 5 is deactivated.

During Function 6 signal, the joystick activation signal uses both Function 5 and 6. When the joystick knob is moved from the neutral position, Function 5 and 6 will activate (relay contacts open/close) for the prescribed amount of time (in seconds). When control is returned to the lever control station

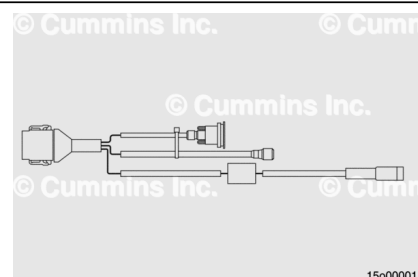

(lever control station handles are moved out of neutral), then Function 5 and 6 will activate again for the prescribed amount of time.

Last Modified: 20-Aug-2019
