

Trainings ▾

General Information

⚠ WARNING ⚠

Do not pull or pry on the fan to manually rotate the engine. To do so can damage the fan blades. Damaged fan blades can cause premature fan failures which can result in serious personal injury or property damage.

©Cummins Inc.

This procedure instructs how to rotate the engine for service events.

Note : The illustrations in this procedure are generic and may not represent the hardware on all engines.

Preparatory Steps

⚠ WARNING ⚠

Batteries can emit explosive gases. To reduce the possibility of personal injury, always ventilate the compartment before servicing the batteries. To reduce the possibility of arcing, remove the negative (-) battery cable first and attach the negative (-) battery cable last.

©Cummins Inc.




ck800wa

- Disconnect the batteries. See equipment manufacturer service information.

Rotate

Insert the appropriate socket into the accessory drive. Bar the engine over.

Rotate the engine **clockwise** when viewed from the front of the engine.

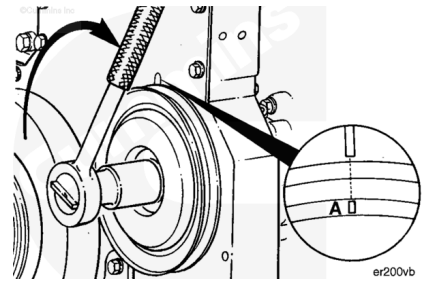

Finishing Steps

⚠ WARNING ⚠

Batteries can emit explosive gases. To reduce the possibility of personal injury, always ventilate the compartment before servicing the batteries. To reduce the possibility of arcing, remove the negative (-) battery cable first and attach the negative (-) battery cable last.

- Remove all tools.
- Connect the batteries. See equipment manufacturer service information.

