



Trainings ▾

Remove


Remove the gear cover. Refer to Procedure 001-031
(</qs3/pubsys2/xml/en/procedures/35/35-001-031-tr.html>).

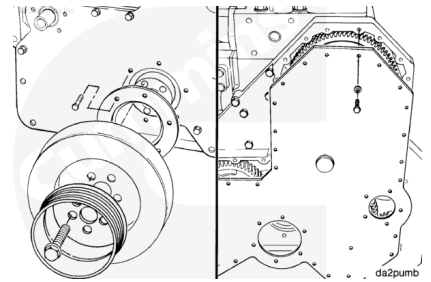


Remove the camshaft idler gear. Refer to Procedure 001-036
(</qs3/pubsys2/xml/en/procedures/35/35-001-036-tr.html>).

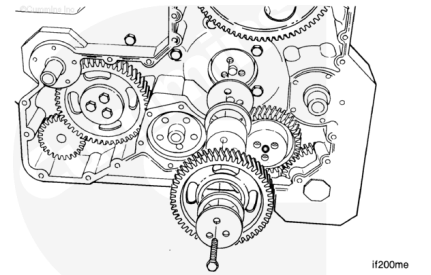


Place two puller adapter assemblies (1) in opposite lightening holes in cam gear.

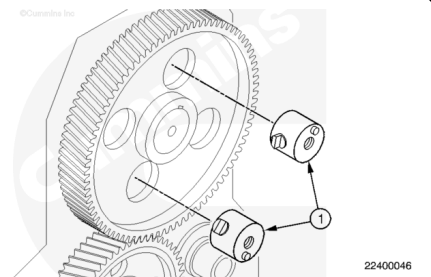

Install lifting plate (11) on the holder plate (2) with one screw (8). Tighten screw securely.

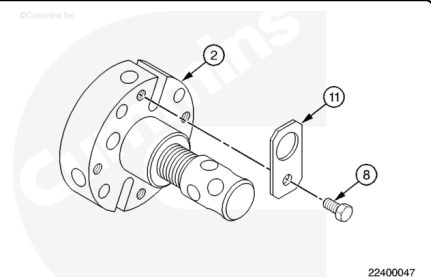

Attach a lifting device to the lifting plate (11).

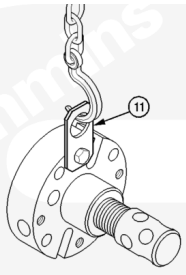

22400048


⚠ WARNING ⚠

The puller assembly is heavy. Use a lifting device when securing it to the cam gear.

Make sure the forcing screw pilot is engaged with the center of the camshaft and the puller adapter assembly studs are properly seated in the holder plate assembly.

Using the lifting device, position the holder plate (2) against the cam gear and install two screws (7) through the holder plate (2) into the puller adapters (1).

Tighten screws securely.

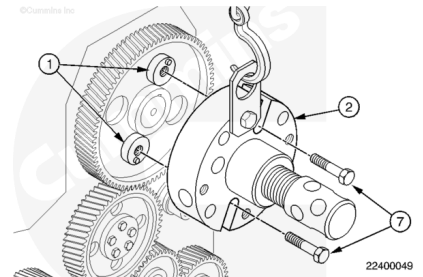


22400049

⚠ WARNING ⚠

Cam gear and puller assembly may fall when released and cause serious personal injury.

Do not attempt to alter the puller assembly for use with any kind of impact wrench. The threads on the puller assembly may gall and seize.

Use the lever bar (4), extension bar (5), and torque reaction lever (6), to turn the forcing screw (3) clockwise, pulling the cam gear from the camshaft.

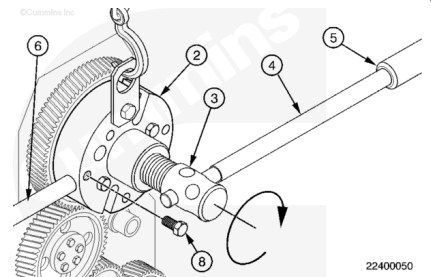

22400050