

Trainings ▾

Preparatory Steps

This procedure is applicable for single and dual damper configurations.

- Remove the fan drive belt. Refer to Procedure 008-002 (</qs3/pubsys2/xml/en/procedures/35/35-008-002-trismx.html>) in Section 8.



Remove


⚠ CAUTION ⚠

Do not use a hammer or a screwdriver to remove the viscous damper. These tools can damage the damper.

Remove two of the vibration damper and crankshaft pulley retaining capscrews.


Install two guide studs, Part Number 3376696, in the holes.

Remove the remaining three capscrews, clamping plate, pulley, and damper.

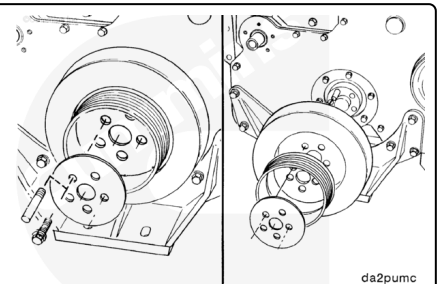

Inspect for Reuse

Inspect the pulley for cracks, excessive wear in the belt grooves, or other damage.

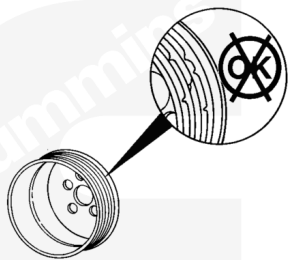


da2pusa

Install

Make sure the mounting surfaces of the crankshaft nose, the vibration damper, and the pulley are clean, dry, and free of burrs.

Install two guide studs, Part Number 3376696, in the crankshaft nose.

Install the vibration damper, pulley, and clamping plate on the guide studs.

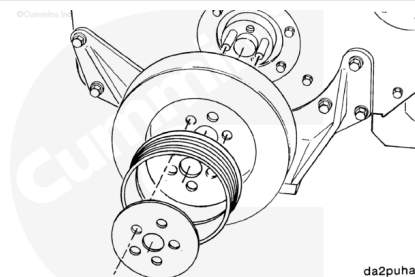

da2puha

Use clean 15W-40 engine oil to lubricate the capscrew threads.


Install three of the five capscrews.

Remove the two guide studs, and install the two remaining capscrews.

Tighten the capscrews in a star pattern.

Torque Value:


1. 68 N•m [50 ft-lb]
2. + 60 degrees

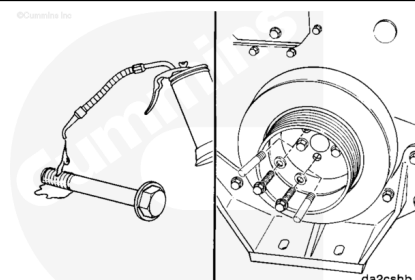

da2cshb

Finishing Steps

- Install and adjust the fan drive belt. Refer to Procedure 008-002 (/qs3/pubsys2/xml/en/procedures/35/35-008-002-tr-ismx.html) in Section 8.
- Operate the engine and check for leaks.

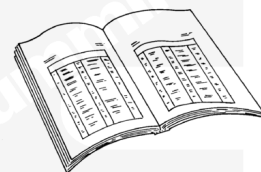

Last Modified: 13-Nov-2019