


Trainings ▾

Install

On the exhaust side of the engine, install the gasket, and four capscrews (2).

Install the gasket, dipstick tube bracket, and four capscrew (1).

Torque Value: 48 n•m [35 ft-lb]

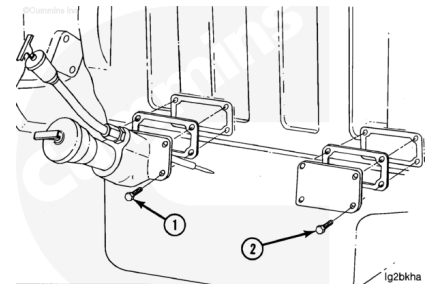

On the fuel pump side of the engine, install the gasket, the cover, and the four capscrews.

Torque Value: 48 n•m [35 ft-lb]

