

Trainings ▾

Preparatory Steps

⚠ WARNING ⚠

To reduce the possibility of personal injury, avoid direct contact of hot oil with your skin.

⚠ WARNING ⚠

Some state and federal agencies have determined that used engine oil can be carcinogenic and cause reproductive toxicity. Avoid inhalation of vapors, ingestion, and prolonged contact with used engine oil. If not reused, dispose of in accordance with local environmental regulations.

- Drain the lubricating oil. Refer to Procedure 007-037 in Section 7. (</qs3/pubsys2/xml/en/procedures/35/35-007-037-tr.html>)
- Remove the lubricating oil pan. Refer to Procedure 007-025 in Section 7. (</qs3/pubsys2/xml/en/procedures/101/101-007-025-tr.html>)

©Cummins Inc.




ck800wa

Remove

The crankshaft **must** be rotated to allow access to remove all the nozzles.

Remove the piston cooling nozzles.

©Cummins Inc.

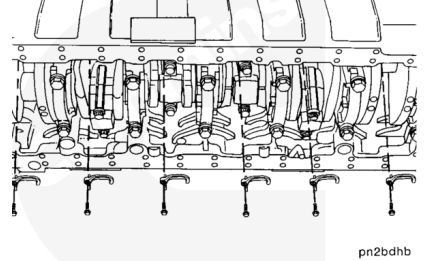


pn2bdhb


Inspect for Reuse

Measure the piston cooling nozzle length.

Piston Cooling Nozzle Length		
mm		in
44.5	NOM	1.752

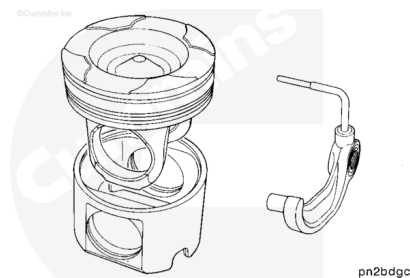

Inspect the capscrews, washers, and piston cooling nozzles for damage.

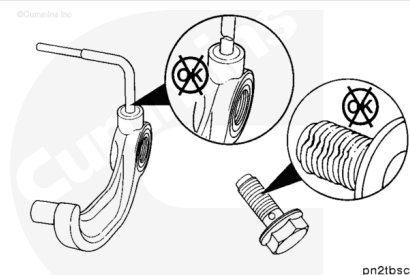


Install

Install the nozzles, washers, and capscrews.

Tighten the capscrews.

Torque Value: 28 n•m [21 ft-lb]

Note : The crankshaft must be rotated to allow access to install all the nozzles.

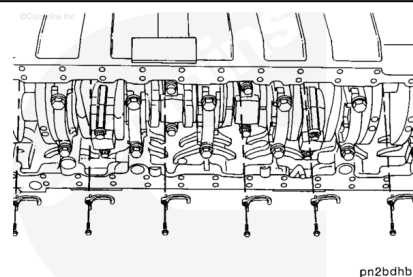

Finishing Steps

- Install the lubricating oil pan. Refer to Procedure 007-025 in Section 7. (</qs3/pubsys2/xml/en/procedures/101/101-007-025-tr.html>)
- Fill the engine with lubricating oil. Refer to Procedure 007-037 in Section 7.



(/qs3/pubsys2/xml/en/procedures/35/35-007-037-tr.html)

- Operate the engine to normal operating temperature and check for oil leaks.

Last Modified: 03-Feb-2016
