

## Trainings ▾

### Install

#### With EGR

Install two guide pins, Part Number 3376488, in the top row of the water header plate mounting capscrew holes.

Install the water header plate and capscrews. Use a new gasket


Remove the two guide pins and install the other two capscrews.

The capscrews are **not** tightened to their final value until all related components are installed.

Install the coolant heater housing (3). Refer to Procedure 008-012 in Section 8. (</qs3/pubsys2/xml/en/procedures/35/35-008-012-tr.html>)


Install the coolant filter head and filter (2). Refer to Procedure 008-007 in Section 8. (</qs3/pubsys2/xml/en/procedures/35/35-008-007-tr.html>)

Install the coolant thermostat housing support and gasket (6). Refer to Procedure 008-015 in Section 8. (</qs3/pubsys2/xml/en/procedures/35/35-008-015-tr.html>)

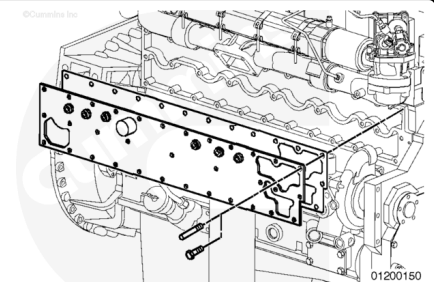

Tighten all capscrews in the sequence shown.

**Torque Value:** 54 n•m [ 40 ft-lb ]

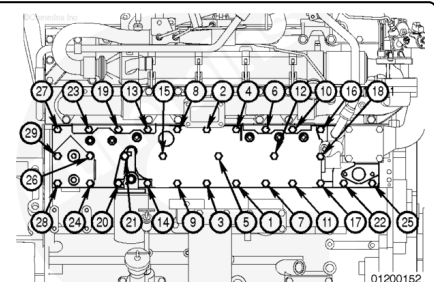


#### Without EGR

Install two guide pins, Part Number 3376488, in the top row of the water header plate mounting capscrew holes.

Install the water header plate and capscrews. Use a new gasket.

Remove the two guide pins, and install the other two capscrews.

The capscrews are **not** tightened to their final value until all related components are installed.

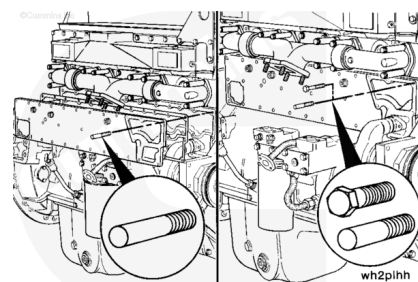


Install the coolant heater housing (3). Refer to Procedure 008-012 in Section 8. (</qs3/pubsys2/xml/en/procedures/35/35-008-012-tr.html>)

Install the coolant filter head and filter (2). Refer to Procedure 008-007 in Section 8.

(</qs3/pubsys2/xml/en/procedures/35/35-008-007-tr.html>)

Install the coolant thermostat housing support and gasket (6). Refer to Procedure 008-015 in Section 8.

(</qs3/pubsys2/xml/en/procedures/35/35-008-015-tr.html>)

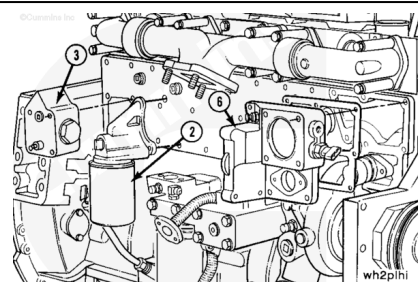

Tighten all capscrews in the sequence shown.

**Torque Value:** 54 n•m [ 40 ft-lb ]

