


Trainings ▾

Remove

⚠ WARNING ⚠


This component or assembly weighs greater than 23 kg [50 lb]. To prevent serious personal injury, be sure to have assistance or use appropriate lifting equipment to lift this component or assembly.

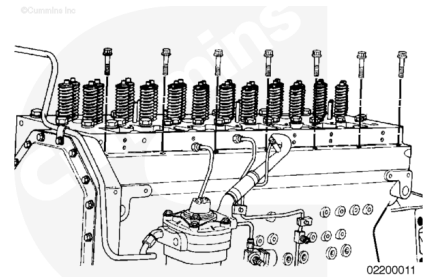

Remove the seven 12-point cylinder head cap screws on the fuel pump side of the engine.

Remove the remaining 32 cylinder head cap screws in the sequence shown.


Three cap screws are located inside the intake ports.

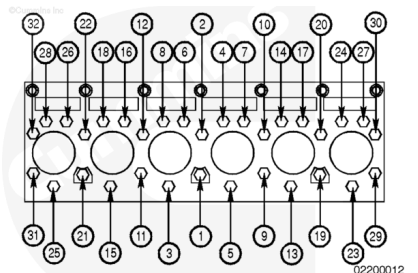

Install the cylinder head lifting bracket, Part Number 3822479, with two rocker lever support mounting cap screws and two of the long rocker housing mounting cap screws.

Tighten the cap screws.

Torque Value: 47 n•m [35 ft-lb]

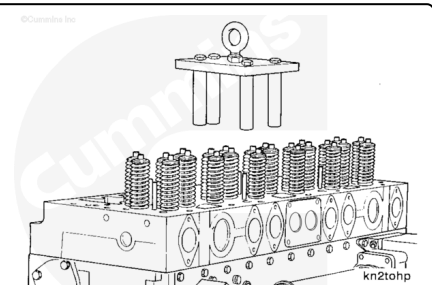


⚠ CAUTION ⚠

Place the cylinder head on wood blocks to prevent damage to the combustion face.

Use a hoist or hydraulic arm to remove the cylinder head.

Remove and discard the cylinder head gasket.

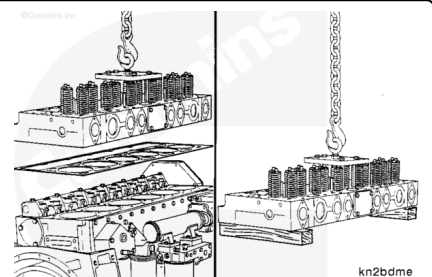

Last Modified: 30-Nov-2022
