

Trainings ▾


Install

With EGR

Install the breather tube, bracket, and capscrew on the engine.

Tighten the bracket capscrew.

Torque Value: 27 n•m [20 ft-lb]

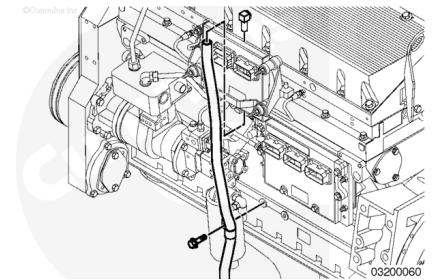

Without EGR

Install the breather tube, bracket, and capscrew on the engine.

Tighten the bracket capscrew.

Torque Value: 27 n•m [239 in-lb]

