


Trainings ▾

Remove

Remove the air piping from the intake manifold.

Remove the hose from the crankcase breather.

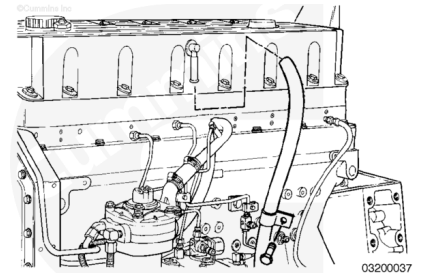

Remove the 16 capscrews and the rocker lever cover.

Remove the 16 isolators from the cover.

