



Trainings ▾

Install

Use a new gasket and install the rocker lever housing.

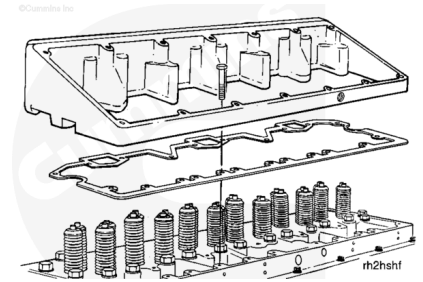

Note : Oil resistant, medium strength thread locker, such as Loctite™ 243, or equivalent, **must** be used when assembling the six short capscrews located on both sides of the three intake ports.

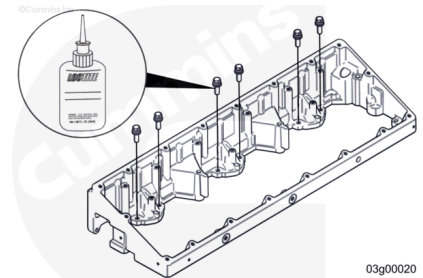


Step 1: Snug all bolts.

Step 2: Tighten the 24 capscrews in the sequence shown.

Torque Value: 34 n•m [25 ft-lb]


Step 3: Tighten the 24 capscrews in the sequence shown.

Torque Value: 61 n•m [45 ft-lb]

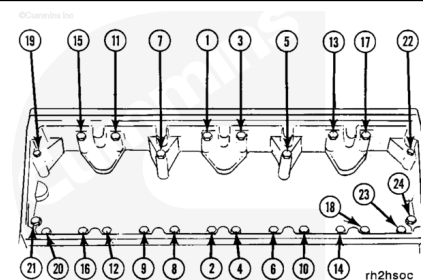


Install the internal engine wiring harness on the engine.

The harness and connectors **must** be clear of any moving parts, so the wires will **not** be damaged during engine operation.

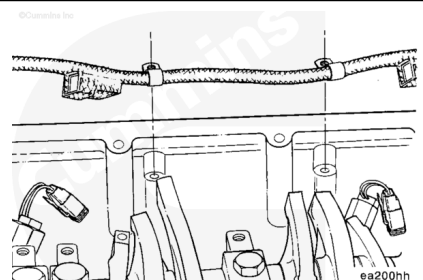


Connect the 15-pin connector of the internal engine harness to the 15-pin connector of the external engine harness.

Note : The internal and external Metri-Pack™ connectors are "keyed." Make sure both connectors are correctly aligned when they are joined together.

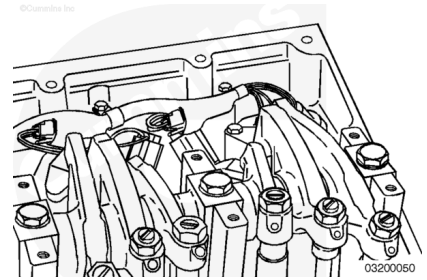

Install the holding clamps for the internal engine harness.
Tighten the capscrews.

Torque Value: 20 n•m [15 ft-lb]

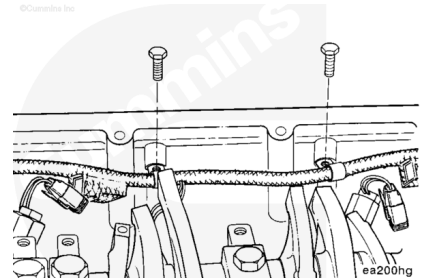

Install the crossheads in the same position from which they were removed , and rotate the rocker levers down.

