


Trainings ▾

Remove

⚠ WARNING ⚠

Batteries can emit explosive gases. To avoid personal injury, always ventilate the compartment before servicing the batteries. To avoid arcing, remove the negative (-) battery cable first and attach the negative (-) battery cable last.

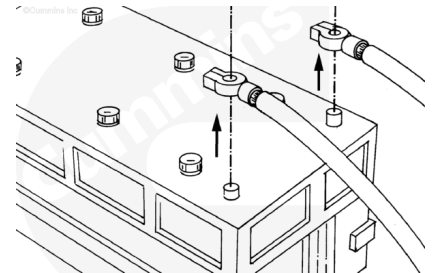

Disconnect the battery cables. Disconnect negative (-) cable first.

Clean the supply pump and the surrounding area.

Remove the electric wire to the fuel shutoff solenoid.

Remove the fuel plumbing.

Remove the two support bracket capscrews from the cylinder block bracket.

Remove the four fuel pump mounting capscrews and remove the fuel pump.

