


Trainings ▾

Remove

⚠ WARNING ⚠

Batteries can emit explosive gases. To avoid personal injury, always ventilate the compartment before servicing the batteries. To avoid arcing, remove the negative (-) battery cable first and attach the negative (-) battery cable last.

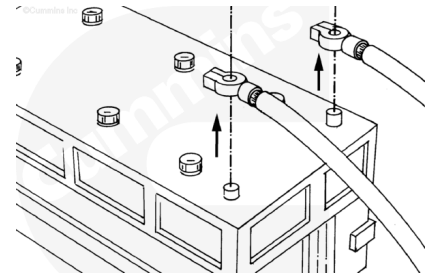

Disconnect the battery cables. Disconnect negative (-) cable first.


Clean the supply pump and the surrounding area.

Remove the electric wire to the fuel shutoff solenoid.

Remove the fuel plumbing.


Remove the two support bracket capscrews from the cylinder block bracket.

Remove the four fuel pump mounting capscrews and remove the fuel pump.

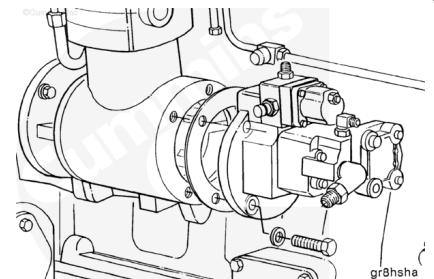


Clean and Inspect for Reuse

Clean the gasket surfaces of the fuel pump and the air compressor or accessory drive.

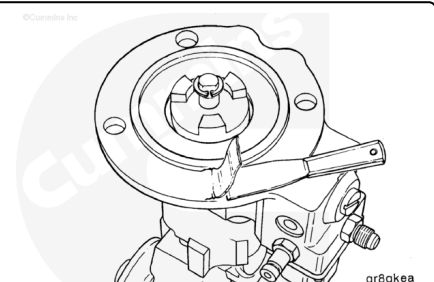


Inspect the mounting surfaces for damage.

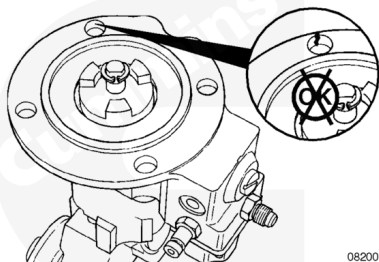

08200105

Inspect the jaw coupling spider and the jaw coupling hub for damage or wear.

©Cummins Inc.

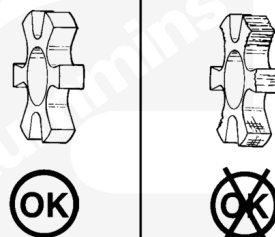


08200106

Install

Install the jaw coupling spider, a new mounting gasket, and fuel pump.

Install the four mounting capscrews.

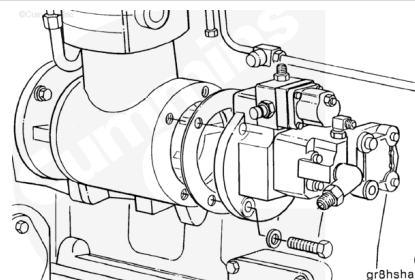


Install the two fuel pump support brackets to cylinder block bracket capscrews.

Tighten the support bracket to engine mounting capscrews.

Torque Value: 47 n•m [35 ft-lb]

Tighten the fuel pump mounting capscrews.

Torque Value: 47 n•m [35 ft-lb]

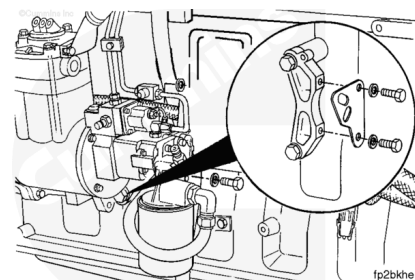


Connect the fuel plumbing.

Connect the electric wire to the shutoff solenoid.


Connect the battery cables.

Start the engine and check for leaks.

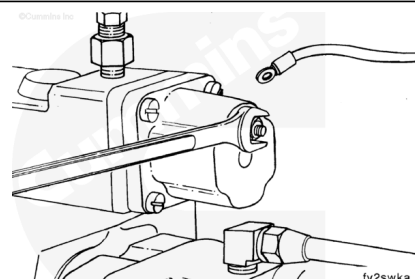


Prime

To reduce engine cranking time, prime the fuel supply pump.
If the fuel supply pump is dirty, clean the outside of the pump.

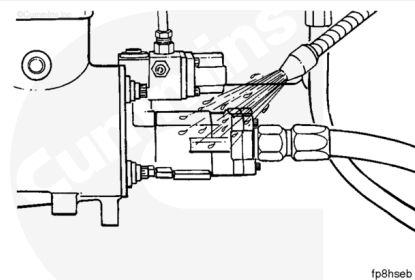


Remove the filter cap from the top of the front support.
Fill the pump with clean fuel oil.

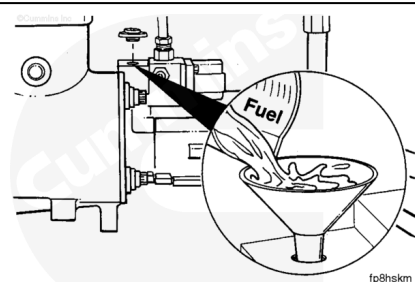


Install and tighten the filter cap.

Torque Value: 16 n•m [142 in-lb]

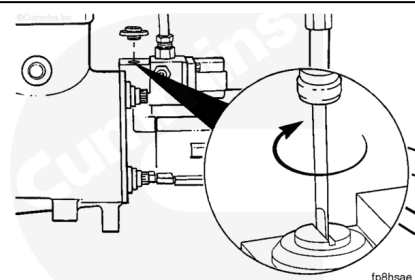


If the filter cap opening can **not** be used, remove the fuel supply hose to the gear pump.

Fill the pump with clean fuel.

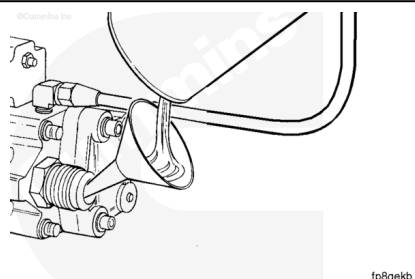


Install the fuel supply hose to the gear pump.

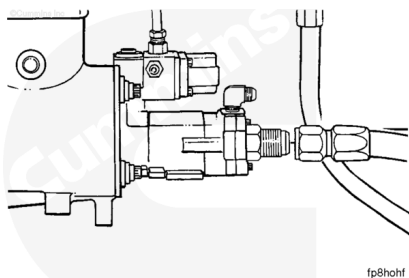


Rotation Check


Remove the fuel supply hose and the fuel inlet fitting from the gear pump.

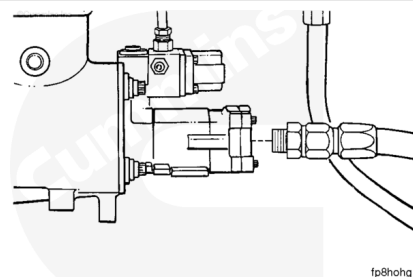

Look into the gear pump and crank the engine. The gear pump gears **must** turn.

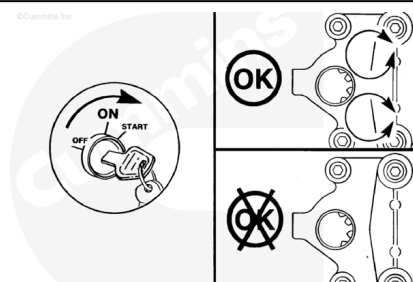


If the supply pump gears do **not** turn, remove the fuel pump.

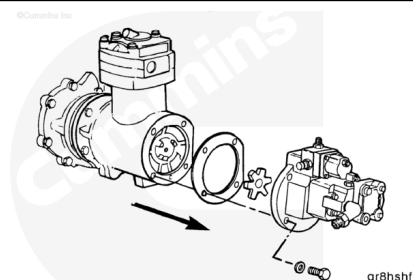

Crank the engine and check the air compressor or the accessory drive shaft for rotation.

If the shaft turns, the fuel pump is damaged and **must** be replaced or repaired.

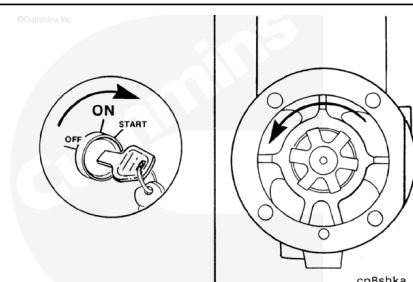

If the shaft does **not** turn, remove the air compressor and check the accessory drive for rotation. If the accessory derivations turns, the air compressor or air compressor coupling is damaged and **must** be replaced.

Last Modified: 07-Sep-2011
