


Trainings ▾

Install

⚠ CAUTION ⚠

Do not use petroleum products on the coolant plumbing o-rings. The o-rings will swell and cause the connection to leak.

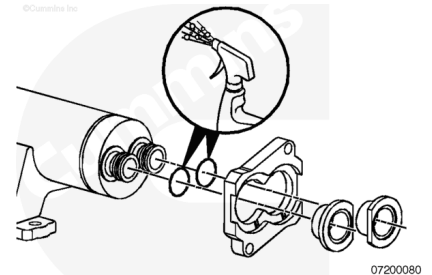


Install two new o-rings on the oil cooler water inlet and outlet transfer tubes.

Lubricate the o-rings with clean engine coolant, soapy water, or vegetable oil to avoid pinching the o-rings while assembling.

While holding the mounting flange in place, install both transfer tubes into the oil cooler as far as possible. The straight sides of the transfer tube flanges **must** face each other when installed.

Install two new o-rings on the ends of the oil cooler water transfer tubes.


Lubricate the o-rings with clean engine coolant, soapy water, or vegetable oil to avoid pinching the o-rings while assembling.

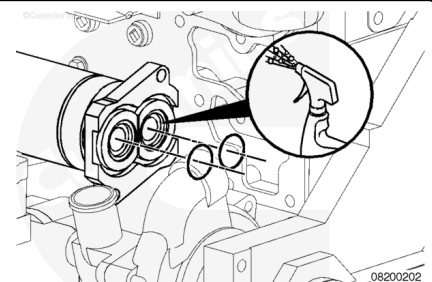

Install two new gaskets on the lubricating oil filter head.

Install the oil cooler on the engine, and tighten the mounting capscrews.


Torque Value: 47 n•m [35 ft•lb]

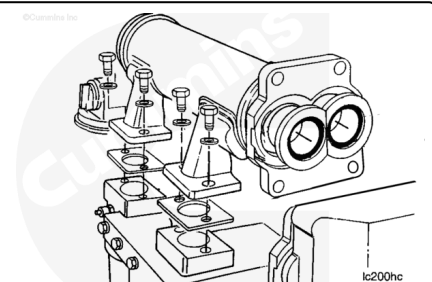

Install the two oil cooler water connection retainer mounting flange capscrews.

Make sure the o-rings on the end of the connection tubes are located correctly.

Torque Value: 47 n•m [35 ft-lb]

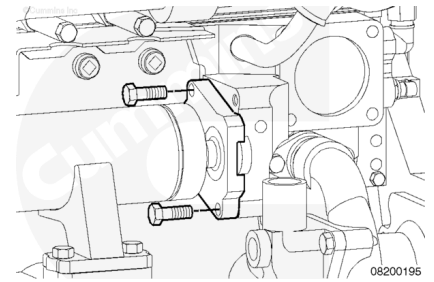

If equipped with four oil cooler thermostat mounting flange capscrews, install the four oil cooler thermostat mounting flange capscrews. Tighten the capscrews alternately and evenly.

Torque Value: 47 n•m [35 ft-lb]

