


Trainings ▾

Remove


Remove the four capscrews and the housing.

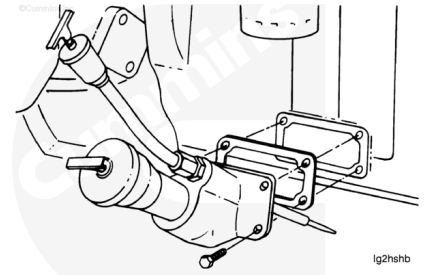

Clean and Inspect for Reuse


Clean the housing gasket surface.

Clean the cylinder block gasket surface.

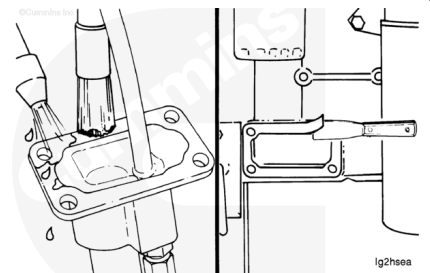

Inspect the dipstick guide tube.

If the guide tube is cracked, missing, or **not** angled downward into the oil pan, replace the dipstick tube housing.

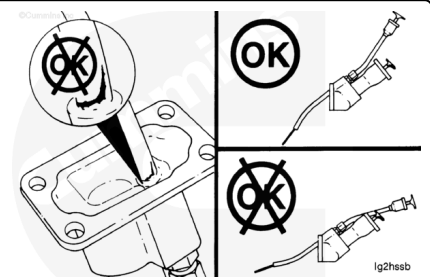


Install

Install a new gasket and the dipstick tube housing.

Install the four capscrews.

Torque Value: 47 n•m [35 ft-lb]

Check the dipstick calibration. Refer to Procedure 007-009 in Section 7. (</qs3/pubsys2/xml/en/procedures/35/35-007-009-tr.html>)

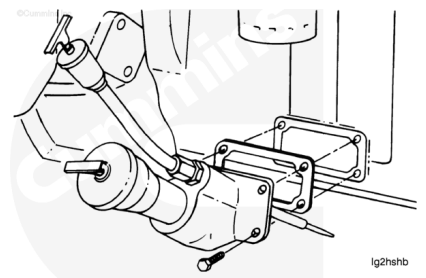

Last Modified: 23-Jan-2009
