


Trainings ▾

Inspect

WARNING

Wear safety glasses or a face shield, as well as protective clothing, to prevent personal injury when using a steam cleaner or high-pressure water.

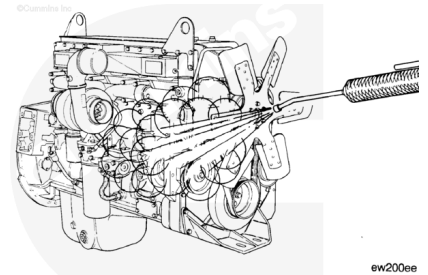

WARNING


Wear appropriate eye and face protection when using compressed air. Flying debris and dirt can cause personal injury.

Use a steam cleaner or high-pressure washer to clean the engine. Dry with compressed air.


Inspect the internal crankcase breather, hose, and tube for restriction. Refer to Procedure 003-002 in Section 3.

(/qs3/pubsys2/xml/en/procedures/35/35-003-002-tr.html)

The rocker lever housing cover **must** be removed to inspect the internal engine crankcase breather.

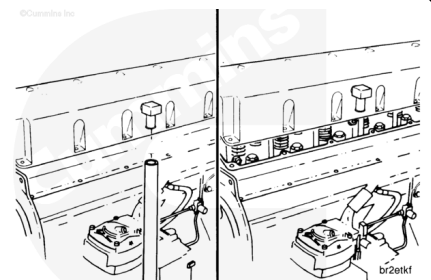


Check for a loose, damaged or missing oil dipstick tube, dipstick, or oil filler cap.

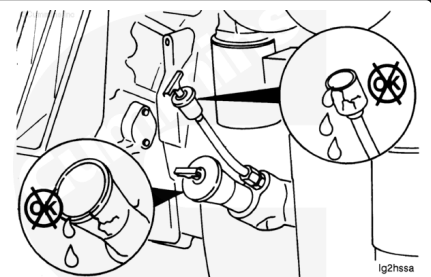

Operate the engine to normal operating temperature, and inspect the exterior of the engine for leaking gaskets, seals, o-rings, pipe plugs, or fittings.

Note : Before replacing any gaskets, check the capscrews to be sure they are tightened to the correct torque values. Refer to Procedure 018-009 in Section V (</qs3/pubsys2/xml/en/procedures/99/99-018-009.html>) for the specific component capscrew torque specifications.

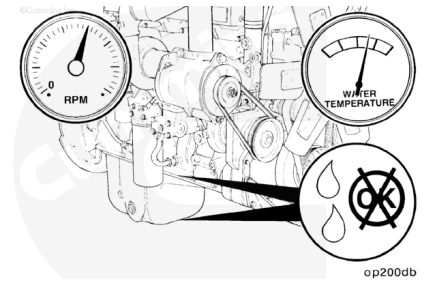

Last Modified: 23-Jan-2009
