


Trainings ▾

Test


ISM Engines

The combination oil pressure and oil temperature sensor is located on the engine block directly above the accessory drive.

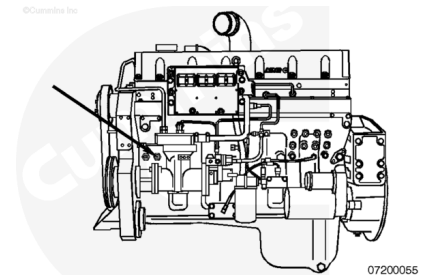

Check the following for defects:

- Electrical wiring broken
- Sending unit malfunction
- Plumbing loose or broken.

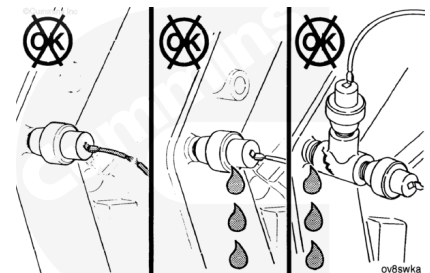

To check for a sending unit malfunction:

- Use Compulink™ to verify the readings of the suspect gauge.
- If readings from the engine sensors are suspected, use a master gauge of known accuracy to verify.
- Connect the line from the master gauge to the main oil rifle on the fuel pump side of the engine.
- Replace the sending unit or sensor if it is defective.

