

Trainings ▾

Adjust


Note : Consult the vehicle manufacturer for fan hub installations that were **not** supplied by Cummins Inc.

Do **not** adjust belt tension to full value with the adjusting screw. Belt tension can increase when the locknut is tightened and cause reduced belt and bearing life.

Loosen the idler pulley shaft locknut.

Use belt tension gauge, Part Number ST-1293 or equivalent, and the belt tension chart to adjust the belt to the correct tension. Refer to Procedure 018-005 in Section V.


(</qs3/pubsys2/xml/en/procedures/99/99-018-005.html>)

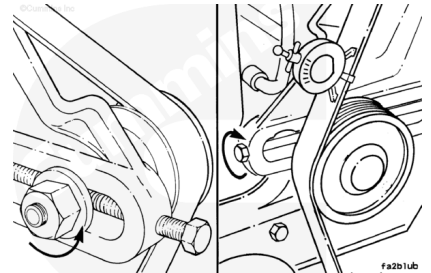

Tighten the idler pulley shaft locknut.


Torque Value: 190 n•m [140 ft-lb]

Check the belt tension again to make sure the belt is **not** too tight.

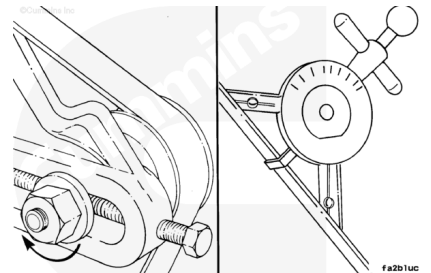


Remove

Loosen the fan idler pulley shaft locknut.

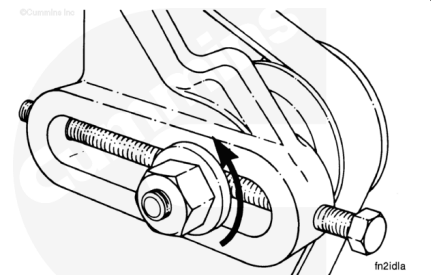

Turn the adjusting screw **counterclockwise** to release the belt tension.



Move the fan idler pulley and fan pulley centers as close as possible. The belt can then be removed without excessive force.

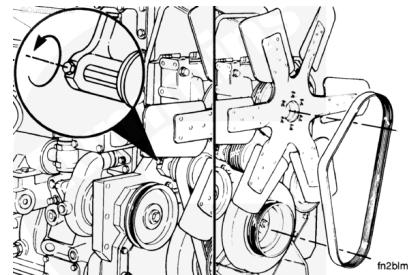

Inspect for Reuse

Inspect the belt for:

- Cracks
- Glazing
- Tears or cuts
- Excessive wear.

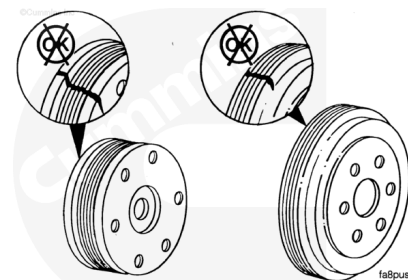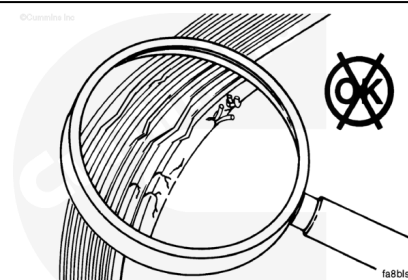


Inspect the pulley alignment.

Pulley misalignment **must not** exceed 6 mm [0.236 in] for each meter [39.4 in] 1.6 mm for each 305 mm [1/16 inch for each 12 inches] of distance between the pulley centers.

Replace the fan idler pulley and fan hub pulley if they are **not** in alignment. Refer to Procedure 008-030 in Section 8.


(/qs3/pubsys2/xml/en/procedures/35/35-008-030.html)

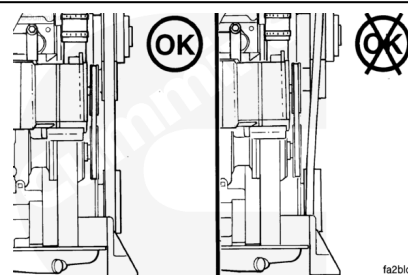

Install

⚠ CAUTION ⚠

To reduce the possibility of damage to the pulley and new belt, do not roll the belt over the pulley or pry it on with a tool.

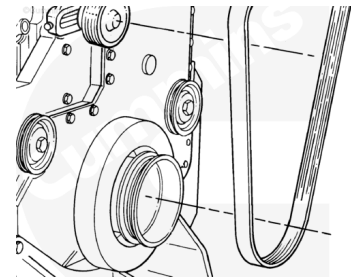


Install a new fan belt on the pulleys.

Use belt tension gauge, Part Number ST-1293, or equivalent, to measure the belt tension. Refer to Procedure 018-005 in Section V. (</qs3/pubsys2/xml/en/procedures/99/99-018-005.html>)

Turn the adjusting screw to adjust the belt tension.


Note : A belt is considered used if it has been in operation 10 minutes or longer. If used belt tension is below the minimum value, tighten the belt to the maximum value. Replace the belt if it will not maintain correct tension.

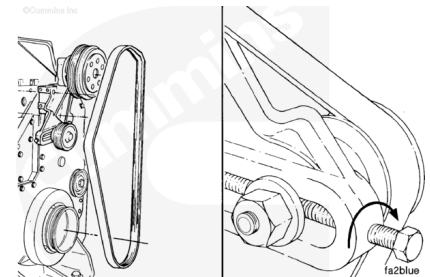

Tighten the idler pulley shaft locknut.

Torque Value: 190 n•m [140 ft-lb]

Check the belt tension again to make sure belt is **not** too tight.

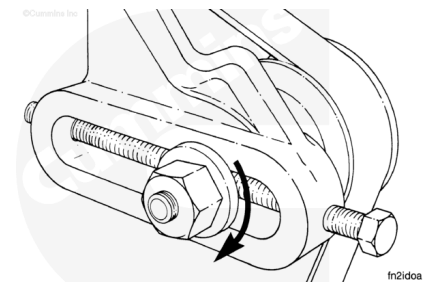

Inspect for pulley misalignment. It **must not** exceed 6 mm [0.236 in] for each meter [39.4 in] 1.6 mm for each 305 mm [1/16 inch for each 12 inches] of distance between the pulley centers.

Replace the fan idler pulley and fan hub pulley if they are **not** in alignment. Refer to Procedure 008-030 in Section 8. (</qs3/pubsys2/xml/en/procedures/35/35-008-030-tr.html>)

