


Trainings ▾

Remove


⚠ WARNING ⚠

Do not remove the pressure cap from a hot engine. Wait until the coolant temperature is below 50°C [120°F] before removing the pressure cap. Heated coolant spray or steam can cause personal injury.

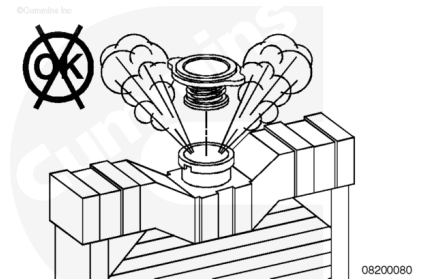


Remove the cooling system pressure cap.

Turn the valve on the coolant filter head to the OFF position.

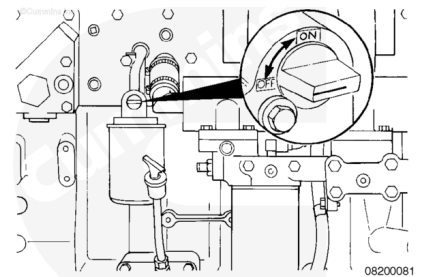

⚠ WARNING ⚠

A small amount of coolant can leak when servicing the coolant filter with the shutoff valve in the OFF position. To reduce the possibility of personal injury, avoid contact with hot coolant.

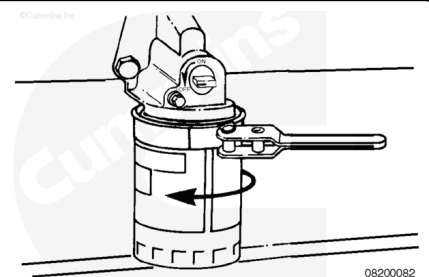

Remove and discard the coolant filter.

Use a lint-free cloth to clean the coolant filter head gasket surface.

