

Trainings ▾

Remove

⚠ WARNING ⚠

Do not remove the pressure cap from a hot engine. Wait until the temperature is below 50°C [120°F] before removing the pressure cap. Heated coolant spray or steam can cause personal injury.

©Cummins Inc.



ck800wa

⚠ WARNING ⚠

Coolant is toxic. Keep away from children and pets. If not reused, dispose of it in accordance with local environmental regulations.


- Drain the cooling system. Refer to Procedure 008-018 in Section 8. (</qs3/pubsys2/xml/en/procedures/35/35-008-018-tr.html>)

Remove

Remove the three capscrews and the filter head.

Remove the two o-rings.

©Cummins Inc.

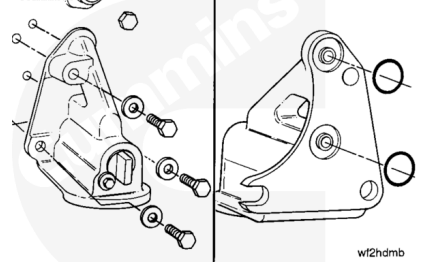


wf2hdmb

Clean and Inspect for Reuse

⚠ WARNING ⚠

When using solvents, acids, or alkaline materials for cleaning, follow the manufacturer's recommendations for use. Wear goggles and protective clothing to reduce the possibility of personal injury.

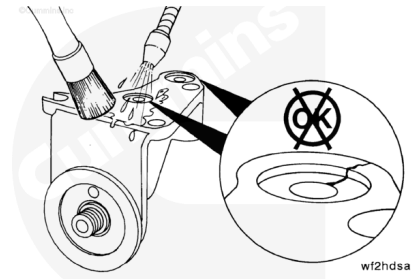


⚠ WARNING ⚠


Wear appropriate eye and face protection when using compressed air. Flying debris and dirt can cause personal injury.

Use solvent to clean the filter head. Dry with compressed air.

Inspect the filter head for cracks or other damage.

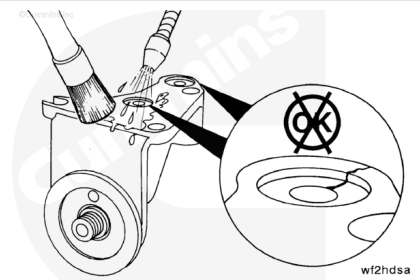

Turn the control valve by hand. If the valve does **not** rotate freely, remove and inspect the valve.

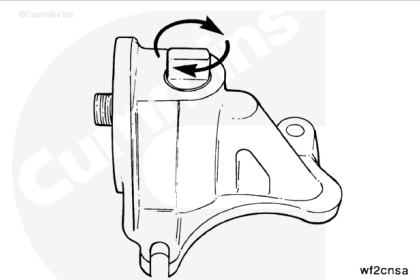


To remove the valve, remove the capscrew, and pull the valve out of the housing.

Remove the o-ring from the valve.

Inspect the valve for corrosion or pitting.

Inspect the housing bore for corrosion or pitting.

Clean or replace the valve and housing, if necessary.

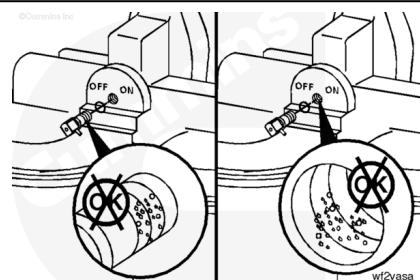

Install


Install a new o-ring on the valve.

Lubricate the o-ring with a film of antiseize compound.

Install the valve in the filter head.


Tighten the capscrew.

Torque Value: 10 n•m [90 in-lb]

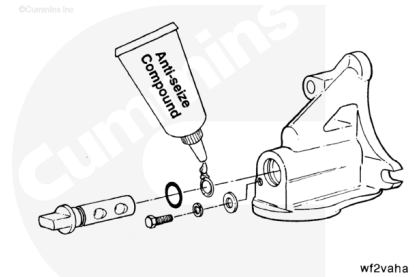

Use clean 15W-40 oil to lubricate the two new o-rings.

Install the o-rings on the filter head.

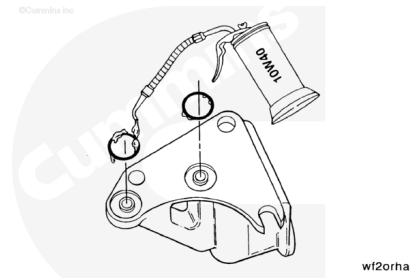

⚠ CAUTION ⚠


The control valve must be in the ON position to prevent engine damage.

Install the filter head and filter, if removed.

Tighten the capscrews.

Torque Value: 54 n•m [40 ft-lb]

Turn the control valve to the ON position.

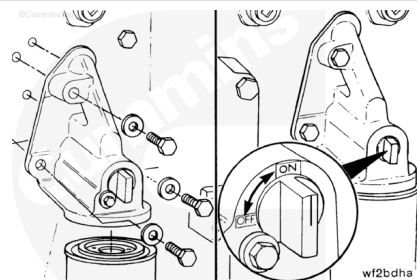


Finishing Steps

⚠ WARNING ⚠

Coolant is toxic. Keep away from children and pets. If not reused, dispose of in accordance with local environmental regulations.

- Fill the cooling system. Refer to Procedure 008-018 in Section 8. (</qs3/pubsys2/xml/en/procedures/35/35-008-018-tr.html>)

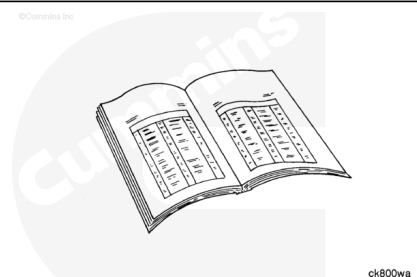

- Operate the engine until it reaches a temperature of 80°C [180°F] and check for coolant leaks.

Last Modified: 23-Jan-2009
