


Trainings ▾

Initial Check

Remove the fan drive belt. Refer to Procedure 008-002 in Section 8. (</qs3/pubsys2/xml/en/procedures/35/35-008-002-tr.html>)


Inspect the fan hub for:

- Freedom of rotation
- Cracks
- Grease seal leakage.

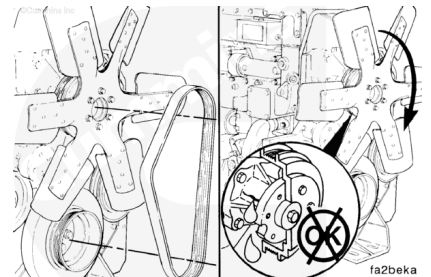

Measure the fan hub end clearance.

Fan Hub End Clearance		
mm		in
0.08	MIN	0.003
0.41	MAX	0.016

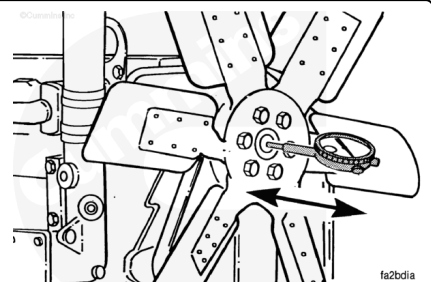

Replace or rebuild the fan hub if the end clearance does **not** meet these specifications, or contact a Cummins® Authorized Repair Location for rebuilding the fan hub.

Preparatory Steps


- Remove the fan and clutch assembly. Refer to Procedure 008-040 in Section 8. (</qs3/pubsys2/xml/en/procedures/35/35-008-040-tr.html>)



Remove

⚠ WARNING ⚠

This component or assembly weighs greater than 23 kg [50 lb]. To prevent serious personal injury, be sure to have assistance or use appropriate lifting equipment to lift this component or assembly.

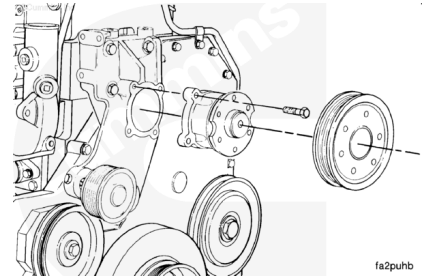


Remove the fan drive pulley.

Remove the four capscrews and the fan hub.

Install

⚠ WARNING ⚠

This component or assembly weighs greater than 23 kg [50 lb]. To prevent serious personal injury, be sure to have assistance or use appropriate lifting equipment to lift this component or assembly.

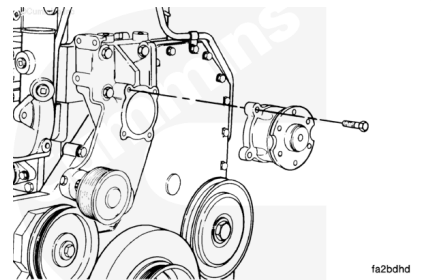

Install the fan hub and four capscrews.

Torque Value: 47 n•m [35 ft-lb]

Finishing Steps

- Install the fan drive pulley and the fan clutch and assembly. Refer to Procedure 008-040 in Section 8. (</qs3/pubsys2/xml/en/procedures/35/35-008-040-tr.html>)
- Install, adjust, and tighten the fan drive belt. Refer to Procedure 008-002 in Section 8 (</qs3/pubsys2/xml/en/procedures/35/35-008-002-tr.html>)

