


## Trainings ▾

### Maintenance Check

#### ⚠ CAUTION ⚠

The engine's intake air must be filtered to prevent dirt and debris from entering the engine. If any of the intake air piping is damaged or loose, unfiltered air will enter the engine, which can cause premature wear and engine failure.

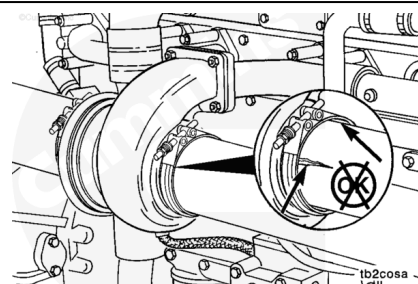


Inspect the intake air piping once a week for cracked hoses, damage, or loose clamps.

Replace damaged pipes and tighten loose clamps as necessary to make sure the air intake system does **not** leak.

**Torque Value:** 8 n•m [ 71 in-lb ]

Check for corrosion of the intake system piping under the clamps and hoses. Corrosion can allow corrosive products and dirt to enter the intake system.

Disassemble and clean the intake air piping as required.

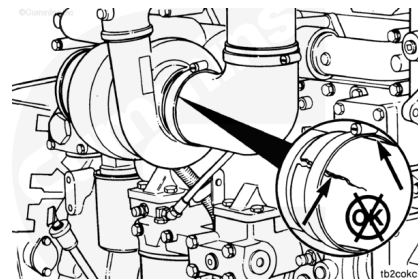


Noise can be caused by an air leak from the:

- Turbocharger-to-discharge-elbow connection


Inspect for damage. Tighten loose clamps.

**Torque Value:** 8 n•m [ 71 in-lb ]

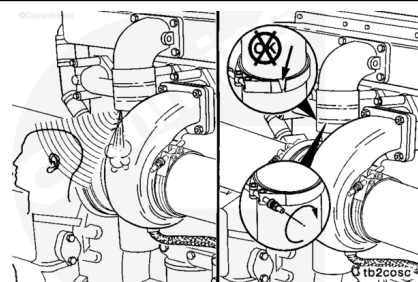

- Turbocharger-to-exhaust-manifold mounting gasket

Replace the gasket. Refer to a Cummins® Authorized Repair Location for turbocharger removal and installation.

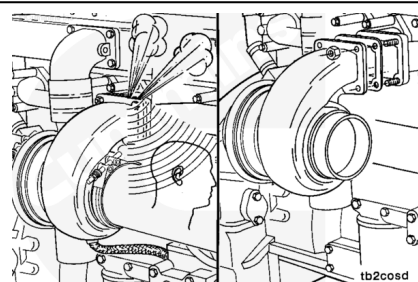

- Turbine housing sealing surface exhaust leak

Tighten the turbine housing capscrews or V-band clamps.

**Torque Value:**


Capscrews

1.14 n•m [ 120 in-lb ]

**Torque Value:**

V-band

1.9 n•m [ 80 in-lb ]

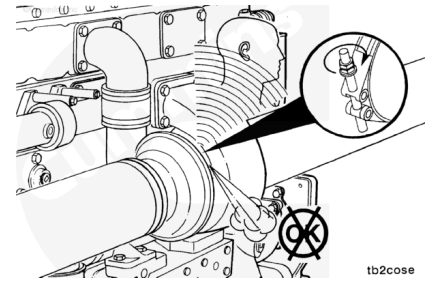

- Compressor housing sealing surface air leak.

Tighten the compressor housing V-band clamp nut.

**Torque Value:**


Capscrews

1.7 n•m [ 62 in-lb ]

**Torque Value:**

V-band

1.9 n•m [ 80 in-lb ]

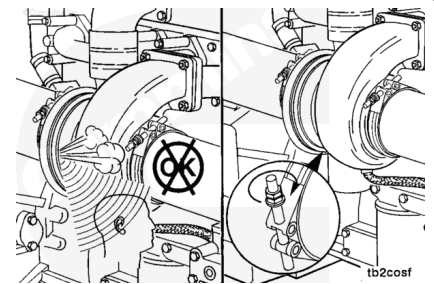

If damage resulted in coolant, oil, excessive fuel or excessive black smoke entering the exhaust system, the aftertreatment system **must** be inspected. Refer to a Cummins® Authorized Repair Location.