


Trainings ▾

Maintenance Check

Note : Use Snap-on™ Part Number FRDHM, or equivalent crow's foot or torque wrench extension to properly tighten the mounting nut. The extension **must** be straight in line with the torque wrench to achieve proper torque.

Tighten the turbocharger mounting nuts.


Torque Value: 61 n•m [45 ft-lb]

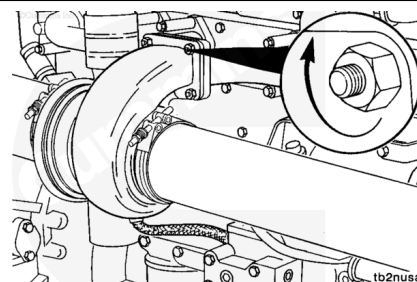

Check the turbine housing's sealing surface for exhaust leaks.

If a leak is found, tighten the V-band clamp nut.

Torque Value: 9 n•m [80 in-lb]

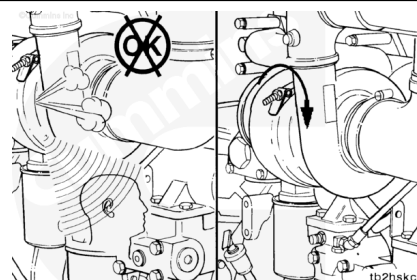

Check the compressor housing sealing surface for leaks.

If a leak is found, tighten the V-band clamp nut.

Torque Value: 9 n•m [80 in-lb]

If a malfunction resulted in coolant, oil, excessive fuel or excessive black smoke entering the exhaust system, the aftertreatment system **must** be inspected. Contact a Cummins® Authorized Repair Location.

