


## Trainings ▾

### Install

Automotive with CM875, CM870 and CM570

#### **⚠ WARNING ⚠**

**Keep fingers and hands away from the actuator link to reduce the possibility of personal injury as a result of sudden movement when air is supplied.**

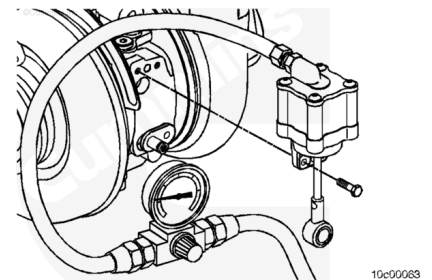

If using INSITE™ electronic service tool to override the turbocharger actuator position, connect the vehicle air supply line to the turbocharger actuator.

If INSITE™ electronic service tool is **not** being used to remove the actuator, apply 620 kPa [90 psi] to 827 kPa [120 psi] of regulated air pressure to the turbocharger actuator.

The turbocharger actuator end link to cross-shaft is a tight clearance fit. Use care to reduce the possibility of damaging the turbocharger actuator or the turbocharger or the turbocharger cross-shaft when removing the actuator.


Install the turbocharger actuator onto the turbocharger.

If **not** installing a new turbocharger actuator, apply Threadlocker, Part Number 3824040, onto the two capscrews holding the turbocharger actuator before installing the capscrews onto the turbocharger bearing housing.

**Torque Value:** 17 n•m [150 in-lb]

#### **⚠ CAUTION ⚠**

**The zinc anode is a sacrificial washer that reduces the possibility of corrosion of the turbocharger cross-shaft and bushing. The failure to install will result in excessive corrosion and wear to the cross-shaft bushing.**

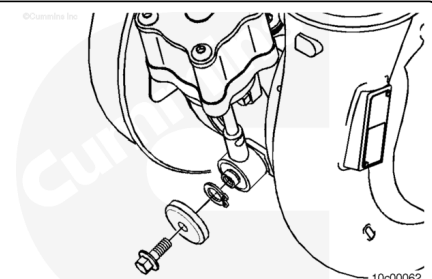

Install the snap ring onto the turbocharger cross-shaft.

Apply Threadlocker, Part Number 3824040, onto the capscrew holding the zinc anode washer before installing the zinc anode washer and the capscrew.

**Torque Value:** 23 n•m [ 204 in-lb ]

Turn off the override in INSITE™ electronic service tool or remove the regulated air supply.

If **not** already installed, install the air line to the turbocharger actuator.

Start and operate the engine.

Verify proper operation and check for air leaks.