

Trainings ▾

Preparatory Steps


Remove the turbocharger control valve. Refer to Procedure 019-388 in the Troubleshooting and Repair Manual CM870 Electronic Control System ISM Engines, Bulletin 4021381 (</qs3/portal/manualviewer.html?path=/qs3/pubsys2/xml/en/outlines/4021381.html>) or the Troubleshooting and Repair Manual CM875 Electronic Control System ISM Engines, Bulletin 4021477 (</qs3/portal/manualviewer.html?path=/qs3/pubsys2/xml/en/outlines/4021477.html>).



Remove


Low Mount

Remove the three low mount bracket capscrews.
Remove the low mount bracket.

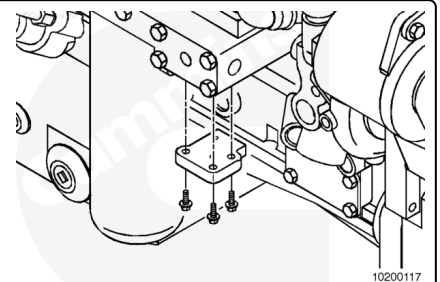

High Mount


Remove the high mount bracket stud from the fuel rail.
Remove the high mount bracket nut from the rocker lever housing stud.
Remove the high mount bracket.

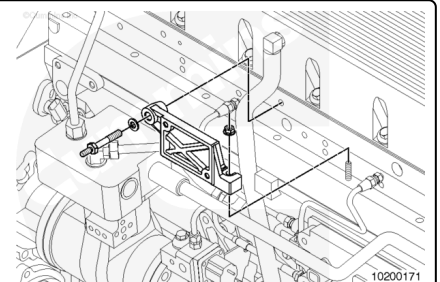

Inspect for Reuse

Check the mounting bracket and replace if damage is found.

©Cummins Inc.

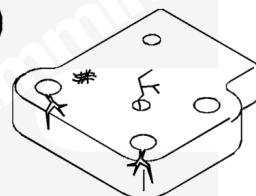

10200118

Install


Low Mount

Install the low mount bracket.

Install the three low mount bracket capscrews.

Tighten the capscrews.

Torque Value: 45 n•m [33 ft-lb]

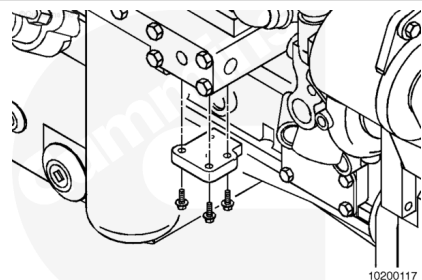

10200117

High Mount

Align the high mount bracket with the threaded fuel rail hole, placing it onto the rocker lever housing stud.

Thread the stud into the fuel rail threaded hole.


Thread the nut onto rocker lever housing stud.

Tighten the fuel rail stud.

Torque Value: 45 n•m [33 ft-lb]

Tighten the rocker lever housing stud nut.

Torque Value: 20 n•m [15 ft-lb]

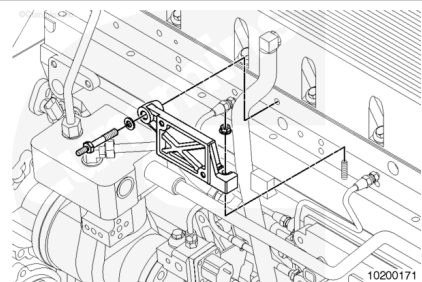

10200171

Finishing Steps

Install the turbocharger control valve. Refer to Procedure 019-388 in the Troubleshooting and Repair Manual CM870 Electronic Control System ISM Engines, Bulletin 4021381 (/qs3/portal/manualviewer.html?path=/qs3/pubsys2/xml/en/outlines/4021381.html) or the Troubleshooting and Repair Manual CM875 Electronic Control System ISM Engines, Bulletin 4021477 (/qs3/portal/manualviewer.html?path=/qs3/pubsys2/xml/en/outlines/4021477.html).

