


Trainings ▾

Remove

Disconnect the air line from turbocharger control valve.


Use masking tape to tape the end of the air line and turbocharger control valve to prevent contamination.

Remove the turbocharger control valve air line.

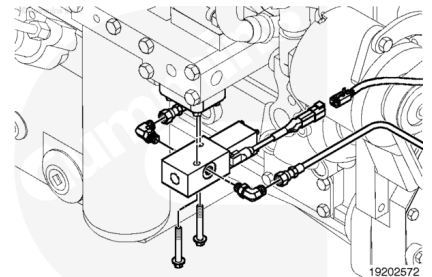

⚠ CAUTION ⚠

The turbocharger control valve is very sensitive to contamination. Failure to prevent contamination from entering the turbocharger control valve air lines will cause damage to the turbocharger control valve.

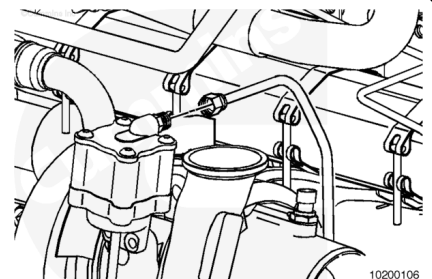

Disconnect the air line at turbocharger actuator.

Use masking tape to tape the end of air line and turbocharger actuator to prevent contamination.

Remove the P-clip at the rear of the turbocharger bearing housing.

