

Trainings ▾

Remove

Remove the EGR cooler coolant return tube bracket from the exhaust manifold.


Remove the exhaust manifold.

Cover all open points on the exhaust manifold and cylinder head with the appropriate protective caps or heavy tape, if needed.

Remove the two upper capscrews from the end sections of the exhaust manifold and install two guide studs, Part Number 3376488.

Remove the remaining capscrews, exhaust manifold, and gaskets.

Discard the gaskets.

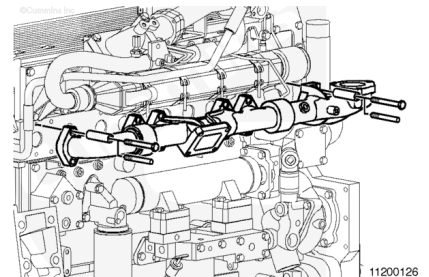


Automotive with CM570

Remove the two upper capscrews from the end sections of the exhaust manifold and install two guide studs, Part Number 3376488.

Remove the remaining capscrews, exhaust manifold, and gaskets.

Discard the gaskets.

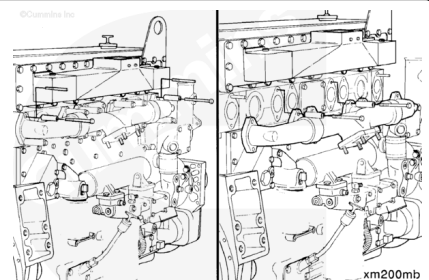


Marine Applications

Remove the heat shield mounting capscrews.

Remove the heat shield.

Remove the insulation blanket mounting capscrews.

Remove the insulation blanket.

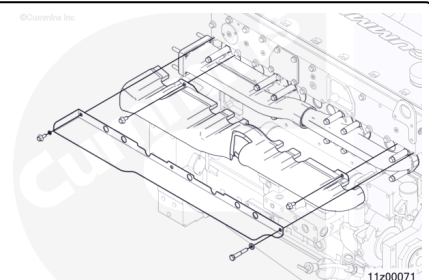

Remove an upper capscrew and spacer from each end of the exhaust manifold and install guide studs, Part Number 3376488.

Remove the remaining capscrews, spacers, exhaust manifold, and gaskets.

Discard the gaskets.

