

Trainings ▾

Install

Automotive with CM875, CM870 and CM570

Loosen the EGR differential pressure sensor adapter mounting capscrews, but do **not** remove. This is so the tubes are **not** distorted during installation.

Make sure **not** to cross-connect tubes or a fault code will result.

Apply a light lubricant (CRC 3-36, WD-40, or equivalent) to the tube threads and install the tubes. The lubricant **must** be applied inside the tube nut, directing the spray on the threads and around the sleeve and flange area.

Tighten the tube nuts.


Torque Value: 16 n·m [142 in-lb]

Position the insulation on the differential pressure sensor tubes so the tube nuts at the venturi connection are covered.

The insulation on the pressure tubes is designed to **only** cover the bottom portion of the tube which threads into the EGR transfer tube. This location proves to be most effective and prevents heat soaking of the EGR differential pressure sensor.

Tighten the EGR differential pressure sensor adapter mounting capscrews. Refer to Procedure 011-028 in Section 11.

(</qs3/pubsys2/xml/en/procedures/35/35-011-028-tr.html>)

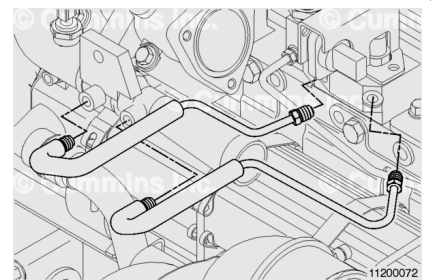


Automotive with CM876

Make sure **not** to cross-connect tubes or a fault code will result.

Apply a light lubricant (CRC 3-36, WD-40, or equivalent) to the tube threads and install the tubes. The lubricant **must** be applied inside the tube nut, directing the spray on the threads and around the sleeve and flange area

Tighten the tube nuts at the venturi connections.

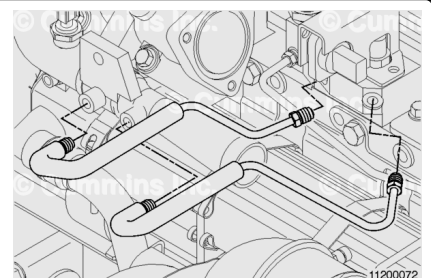

Torque Value: 26 n·m [230 in-lb]

Tighten the hose clamps at the differential pressure sensor adapter.

Torque Value: 1.5 n·m [13 in-lb]

Position the insulation on the differential pressure sensor tubes so that the tube nuts at the venturi connection are covered.

The insulation on the pressure tubes is designed to cover **only** the bottom portion of the tube which threads into the EGR transfer tube. This is the most effective location and reduces the possibility of heat soaking of the EGR differential pressure sensor.

