


Trainings ▾

Install

⚠ CAUTION ⚠

Do not use petroleum products on the coolant plumbing grommets. The grommets will swell and cause the connection to leak. Lubricate the grommets with clean engine coolant, soapy water, or vegetable oil to avoid damaging the grommets while assembling.

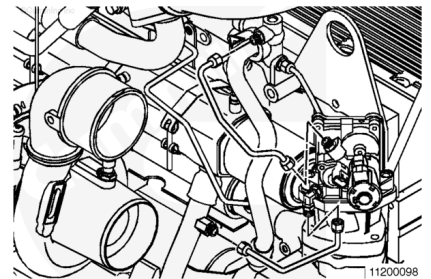

Install the EGR valve coolant supply line to the EGR valve and EGR cooler coolant supply tube.

Tighten the tube nuts.

Torque Value: 13 n•m [120 in-lb]

Install the EGR valve coolant return line to the EGR valve and coolant return water manifold.

Tighten the tube nuts.

Torque Value: 13 n•m [120 in-lb]