


Trainings ▾

Install

Automotive with CM875, CM870 and CM570

⚠ CAUTION ⚠

Do not use petroleum products on the coolant plumbing o-rings. The o-rings will swell and cause the connection to leak if petroleum products are used.

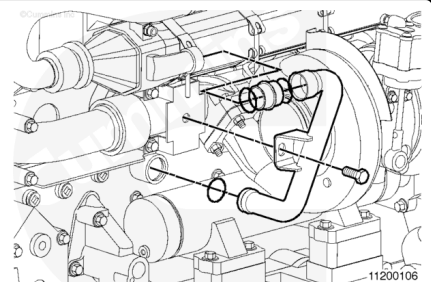

Lubricate the o-ring connection mating surfaces with clean engine coolant, soapy water, or vegetable oil. To avoid pinching or rolling the o-rings during assembly, do **not** lubricate the o-ring.

Install new o-rings on the EGR cooler coolant return tube and jumper connection.

Install the EGR cooler coolant return jumper connection into the EGR cooler coolant return tube.

Position the lower end of the EGR cooler coolant return tube jumper connection as illustrated in the graphic.

Install the EGR cooler coolant return tube from the water header plate to the EGR cooler coolant jumper connection.


Coat the EGR cooler coolant return tube mounting capscrew with high temperature anti-seize compound.

Install and tighten the capscrew.

Torque Value: 47 n•m [35 ft-lb]

Lubricate the o-ring connection mating surfaces with clean engine coolant, soapy water, or vegetable oil. To avoid pinching or rolling the o-rings during assembly, do **not** lubricate the o-ring.

Install new o-rings on the EGR cooler coolant supply upper tube.

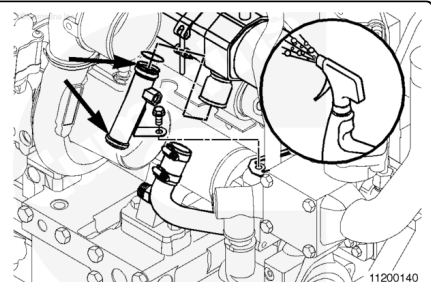

Do **not** lubricate the retainer o-ring. Install the retainer o-ring (dry) onto the EGR cooler coolant supply upper tube past the small o-ring gland.


Install the EGR cooler coolant supply upper tube from the EGR cooler to the EGR cooler coolant supply lower tube and the EGR cooler coolant supply hose.

Install the EGR cooler coolant supply upper tube into the EGR cooler flange. Push the retainer o-ring up the EGR cooler coolant supply tube until it contacts the EGR cooler flange.

Install the tube retainers and hose clamp onto the EGR cooler coolant supply upper tube, EGR cooler and retainer o-ring.

Tighten the hose clamp.

Torque Value: 5 n•m [44 in-lb]

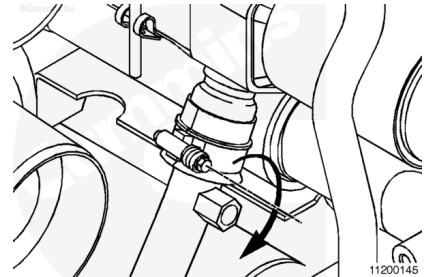


Tighten the EGR cooler coolant supply upper tube and water manifold return tube mounting capscrew (1).

Torque Value: 20 n•m [177 in-lb]

Equally space the EGR cooler coolant supply hose over the EGR cooler coolant supply upper and lower tubes and tighten the hose clamps (2).

Torque Value: 5 n•m [44 in-lb]

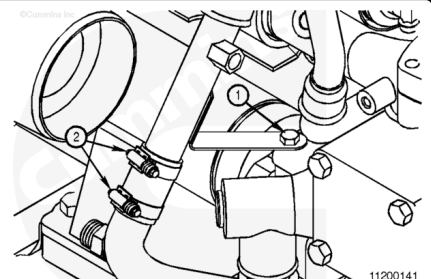


Lubricate the grommets with clean engine coolant, soapy water, or vegetable oil for easier installation and to avoid pinching or rolling the grommets while assembling.

Install the EGR cooler coolant front and rear vent tubes.

Install the retaining clip and capscrew for the EGR cooler coolant rear vent tube and tighten the capscrew.


Torque Value: 47 n•m [35 ft-lb]

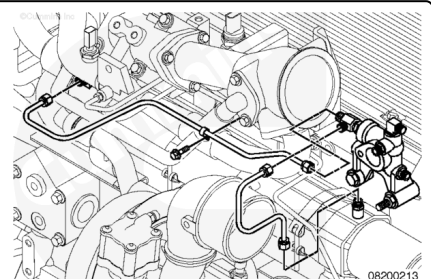

Automotive with CM876

⚠ CAUTION ⚠

Do not use petroleum products on the coolant plumbing o-rings. The o-rings will swell and cause the connection to leak if petroleum products are used.

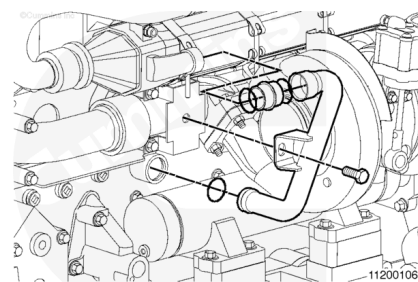

Lubricate the o-ring connection mating surfaces with clean engine coolant, soapy water, or vegetable oil. To avoid pinching or rolling the o-rings during assembly, do **not** lubricate the o-ring.

Install new o-rings on the EGR cooler coolant return tube and jumper connection.

Install the EGR cooler coolant return jumper connection into the EGR cooler coolant return tube.

Position the lower end of the EGR cooler coolant return tube jumper connection as illustrated in the graphic.

Install the EGR cooler coolant return tube from the water header plate to the EGR cooler coolant jumper connection.

Coat the EGR cooler coolant return tube mounting capscrew with high temperature anti-seize compound.

Install and tighten the capscrew.

Torque Value: 47 n•m [35 ft-lb]

Lubricate the o-ring connection mating surfaces with clean engine coolant, soapy water, or vegetable oil. To avoid pinching or rolling the o-rings during assembly, do **not** lubricate the o-ring.

Install new o-rings on the EGR cooler coolant supply tube.

Install the EGR cooler coolant supply tube into the EGR cooler and the water pump.


Install the EGR cooler coolant supply tube capscrew into the EGR cooler coolant inlet flange. Do **not** torque.

Make sure the EGR cooler coolant supply tube is seated completely in the water pump body before tightening the EGR cooler coolant supply tube retaining clamp capscrew to reduce the possibility of pinching the o-ring.

Tighten the remaining clamp capscrew.

Torque Value: 34 n•m [25 ft-lb]


Tighten the EGR cooler coolant supply tube upper mounting capscrew.

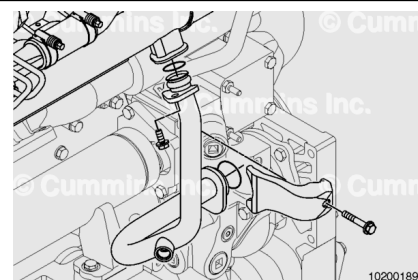

Torque Value: 34 n•m [25 ft-lb]

Lubricate the grommets with clean engine coolant, soapy water, or vegetable oil for easier installation and to avoid pinching or rolling the grommets while assembling.

Install the EGR cooler coolant vent tube.

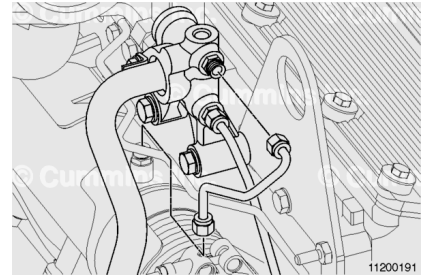

Last Modified: 08-Jun-2006
