


Trainings ▾

Install


Position the timing mark on the air compressor crankshaft at the 12 o'clock position.

Position the accessory drive shaft dowel pin at the 2 o'clock position as viewed from the front of the engine.

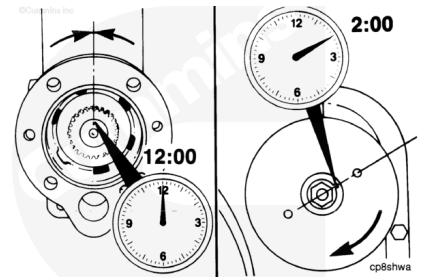

Install the splined coupling on the accessory drive shaft.

Be sure the gasket surfaces of the accessory drive and air compressor are clean and **not** damaged.

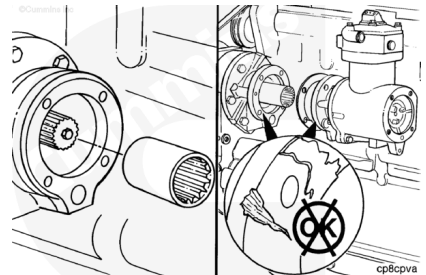

Use a new gasket to install the air compressor and four capscrews to the accessory drive.

Torque Value:

Cummins® Air Compressor 44 n•m [32 ft-lb]

Torque Value:

Holset® Air Compressor 68 n•m [50 ft-lb]


Install the air compressor support bracket.

Torque Value:

Cummins® Air Compressor Support Bracket 44 n•m [32 ft-lb]

Torque Value:

Holset® Air Compressor Support Bracket 47 n•m [35 ft-lb]

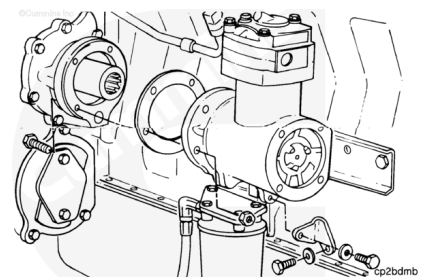

Last Modified: 02-Nov-2022