

Trainings ▾

Install


Install the existing hose and clamps at the end of the rear end of the air compressor inlet tube that connects to the air compressor.

Place the long section of the line on the air compressor.

Install tube mount and the flange nut on the cylinder head fuel rail mounting stud and tighten the flange nut.

Torque Value: 20 n•m [180 in-lb]

Place the existing hose and the existing clamps on the rear end of the air compressor inlet tube where it mates to the exhaust manifold side of the air compressor inlet tube.

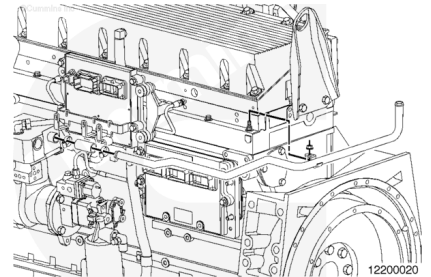

Place the existing hose and clamps on the mixer feed tube.

Install the exhaust manifold side of the air compressor inlet tube. Install tube mount and the flange nut to the intake manifold mounting stud.

Tighten the flange nut.

Torque Value: 20 n•m [177 in-lb]

Tighten the hose clamps.

Torque Value: 8 n•m [71 in-lb]

