

Trainings ▾

Install


Pad Mount

Install the alternator and the four mounting capscrews.

Tighten the capscrews.

Torque Value: 36 n•m [27 ft-lb]

No alignment adjustment is required for the alternator to the alternator bracket.

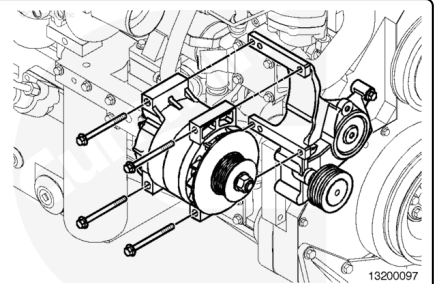

Spool Mount

Install the adjusting link and mounting capscrew (3).

Tighten the mounting capscrew.

Torque Value: 47 n•m [35 ft-lb]

Install the alternator, capscrew (1), washer, and nut (2) to the mounting bracket and adjusting link.

Do **not** tighten the capscrews and nuts until the alternator belt is adjusted.

