


Trainings ▾

Remove

Remove the capscrews and the front lifting bracket.


Remove the capscrews and the rear lifting bracket.

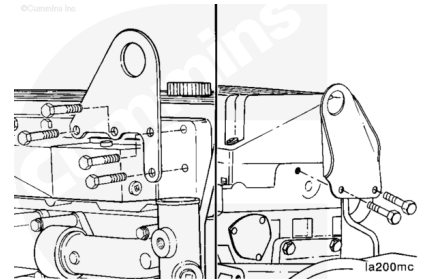

Clean and Inspect for Reuse

⚠ WARNING ⚠

When using a steam cleaner wear safety glasses or a face shield, as well as protective clothing. Hot steam can cause serious personal injury.

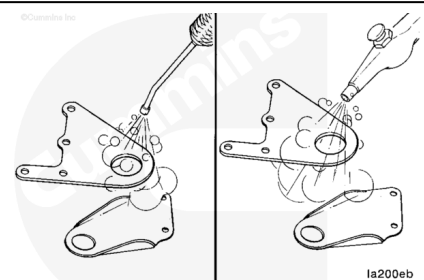

⚠ WARNING ⚠

When using solvents, acids, or alkaline materials for cleaning, follow the manufacturer's recommendations for use. Wear goggles and protective clothing to reduce the possibility of personal injury.

⚠ WARNING ⚠

Wear appropriate eye and face protection when using compressed air. Flying debris and dirt can cause personal injury.


Use steam or solvent to clean the lifting brackets. Dry with compressed air.

⚠ WARNING ⚠

Do not use a cracked or damaged bracket. Do not weld a cracked bracket. Personal injury can result.

Inspect the brackets for cracks or damage.

Replace the bracket if it is cracked.

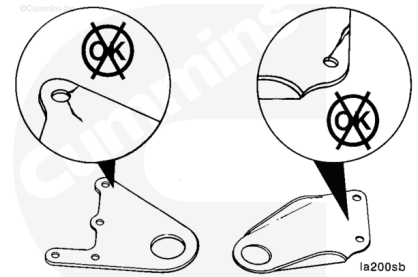

Install

Install the front bracket and capscrews.

Torque Value: 47 n•m [35 ft-lb]

Install the rear bracket and capscrews.

Torque Value: 81 n•m [60 ft-lb]

