


Trainings ▾

Install

Use a new pilot bearing when installing a new or rebuilt clutch.


Remove the pilot bearing with a mandrel and hammer.

Clean the pilot bore with Scotch-Brite™ 7448, Part Number 3823258, or equivalent.

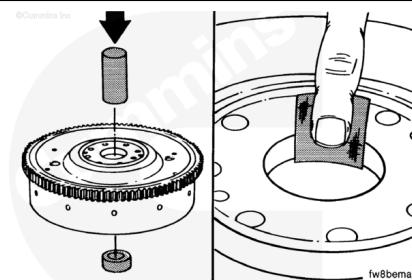


Install the pilot bearing with a mandrel and hammer.

The pilot bearing **must** be installed flush with the pilot bore surface.

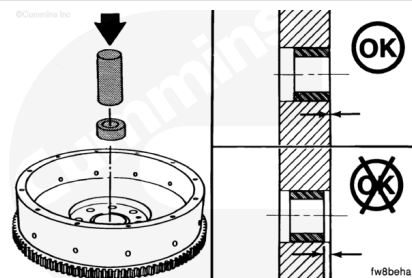

⚠ WARNING ⚠

This component or assembly weighs greater than 23 kg [50 lb]. To prevent serious personal injury, be sure to have assistance or use appropriate lifting equipment to lift this component or assembly.

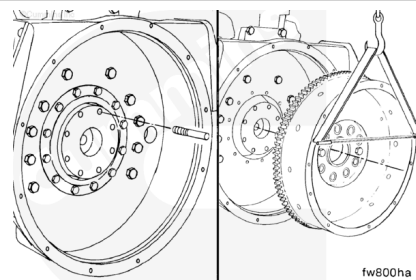

Install guide pin, Part Number 3376696, in the crankshaft flange.

Install the flywheel on the guide pin.


Install the seven capscrews.

Remove the "T-handles" and the guide pin.

Install the remaining capscrew in the hole.

Tighten the capscrews in a star pattern.

Torque Value: 183 n•m [135 ft-lb]

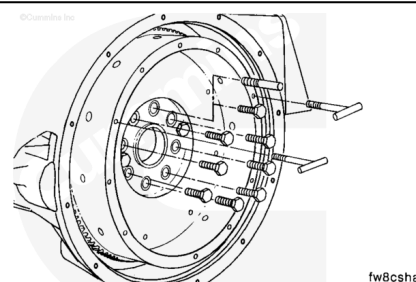

Measure


Bore Runout

Use dial indicator gauge (1), Part Number 3376050 or equivalent, and dial gauge attachment (2), Part Number ST-1325, to inspect the flywheel bore (3) and face (4) runout.

Install the attachment to the flywheel housing.


Install the gauge on the attachment.

Install the contact tip of the indicator against the inside diameter of the flywheel bore.

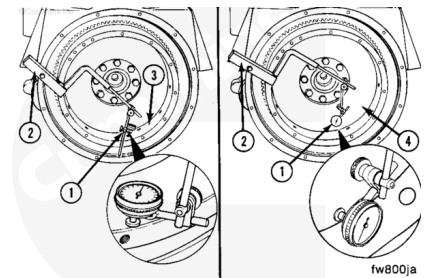


Use the accessory driveshaft to rotate the crankshaft one complete revolution (360 degrees).

The total indicator reading **must not** exceed 0.127 mm [0.0050 in].

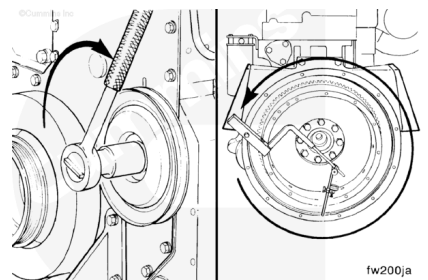


⚠ WARNING ⚠

This component or assembly weighs greater than 23 kg [50 lb]. To prevent serious personal injury, be sure to have assistance or use appropriate lifting equipment to lift this component or assembly.

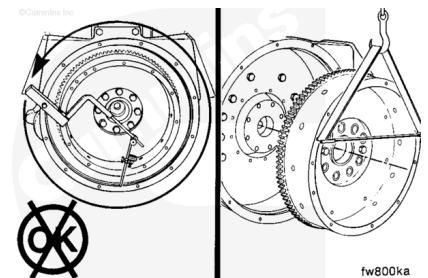


Remove the flywheel if the total indicator reading is greater than the specification.

Inspect the flywheel mounting surface for dirt or damage.

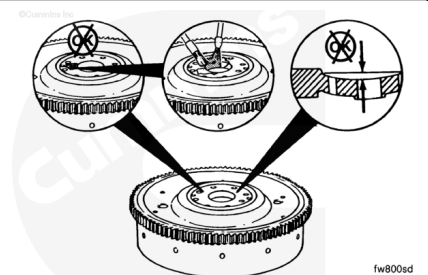


Inspect the crankshaft for dirt or damage.

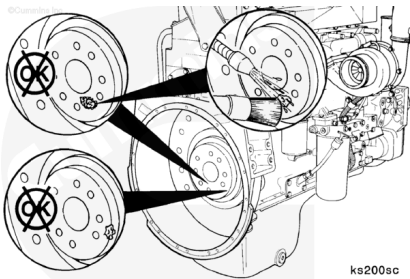

⚠ WARNING ⚠


This component or assembly weighs greater than 23 kg [50 lb]. To prevent serious personal injury, be sure to have assistance or use appropriate lifting equipment to lift this component or assembly.

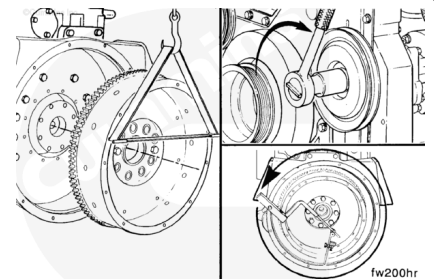

Install the flywheel and inspect the bore runout again.

⚠ WARNING ⚠

This component or assembly weighs greater than 23 kg [50 lb]. To prevent serious personal injury, be sure to have assistance or use appropriate lifting equipment to lift this component or assembly.

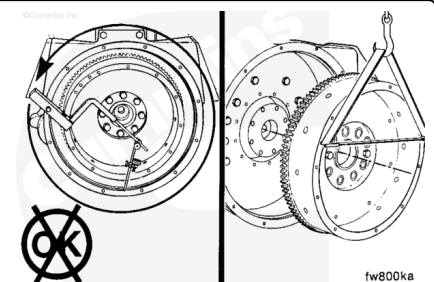


Replace the flywheel if the runout does **not** meet specifications.

Face Runout


Install the contact tip of the indicator against the flywheel face as close to the outside diameter as possible to inspect the face (4) run out.

Push the flywheel forward to remove the crankshaft end thrust.

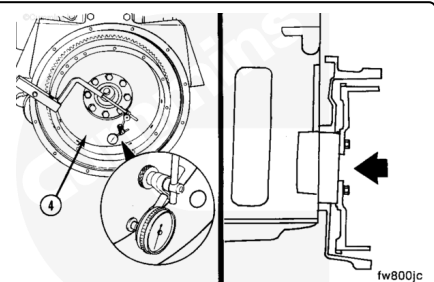


Use the accessory driveshaft to rotate the crankshaft one complete revolution (360 degrees) while keeping the crankshaft end thrust pushed forward.

The total indicator reading **must not** exceed the following specifications.

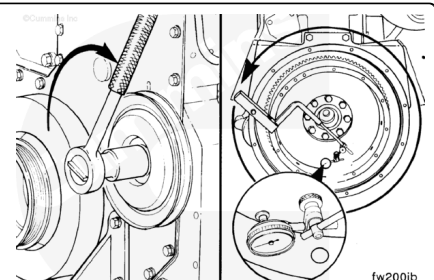

Flywheel Face Runout Total Indicator Reading

Flywheel Radius (A)		Maximum Total Indicator Reading of Flywheel Face	
mm	in	mm	in
203	8	0.203	0.008
254	10	0.254	0.010
305	12	0.305	0.012
356	14	0.356	0.014
406	16	0.406	0.016

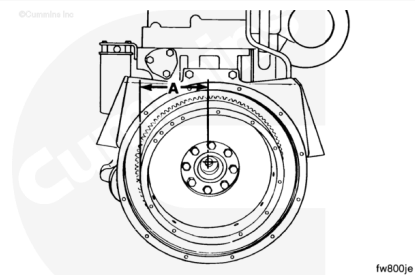

Last Modified: 07-May-2009