

Trainings ▾

Remove

⚠ WARNING ⚠


To reduce the possibility of severe eye damage, wear eye protection when you drive the ring gear from the flywheel. Do not use a steel drift.

⚠ CAUTION ⚠

Do not use a cutting torch to heat the ring gear. The flywheel can be damaged.

Heat the outside surface of the ring gear with a heating torch.

Use a hammer and blunt chisel to remove the gear from the flywheel.

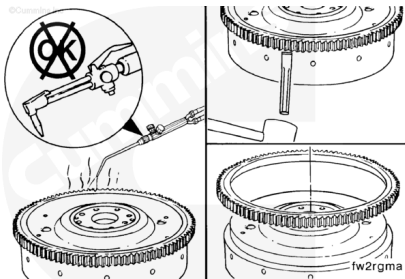

Install


Do **not** attempt to install the ring gear without using heat.

Use an oven to heat the new ring gear for a minimum of one hour. Do **not** heat the ring gear for more than 6 hours.

Measurements

	celsius	fahrenheit
Temperature:	235	450


Do **not** exceed the specified time or temperature.

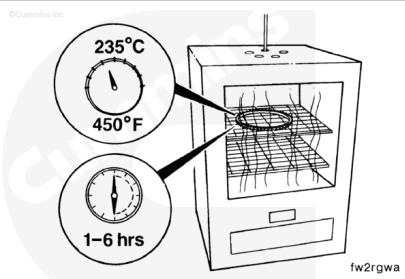

If an oven is **not** available, use a heating torch to heat the gear.

Use a Tempilstik crayon, or equivalent, to check the temperature of the gear.

A more even temperature is obtained by placing the ring gear on a metal plate and then heating the bottom side of the plate with the torch. Do **not** exceed the specified temperature.

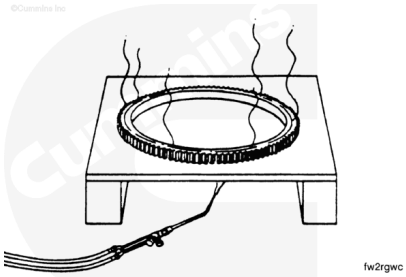

Measurements

	celsius	fahrenheit
Temperature:	235	450

⚠ WARNING ⚠

To reduce the possibility of severe burns, wear protective gloves when installing the heated ring gear.

Install the ring gear on the flywheel before it cools. Allow the air to cool the gear. Do **not** use water or oil to reduce the cooling time.

