


Trainings ▾


Remove

Select the appropriate size allen wrench or socket, and remove the plug.

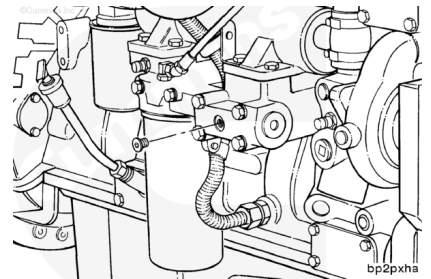

Clean and Inspect for Reuse


Use spray cleaner, Part Number 3823717 or equivalent, to clean the threads of the straight thread plugs and threaded bores.

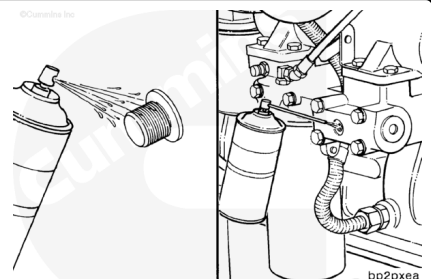

Inspect the threads of the pipe plugs for mutilation or other damage.

Inspect the threaded bores for damage.

Repair the bores, if necessary. Refer to the Alternate Repair Manual, L10 Series Engines, Bulletin 3810310.

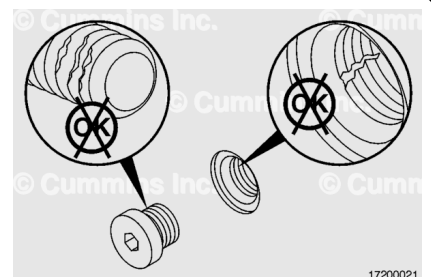


Install

Install a new o-ring on the plug. Lubricate with clean 15W-40 oil.

Install and tighten the plugs.

Use to the following chart for torque values.

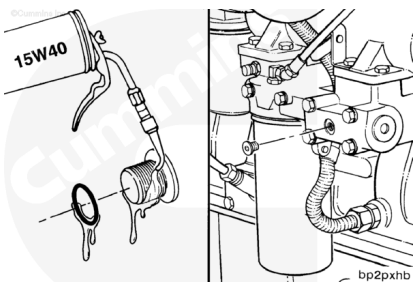

Tighten straight thread plugs to the appropriate torque value.

©Cummins Inc.

Thread Size Inches	Torque - lbf			
	N•m	in-lb	N•m	ft-lb
1/4	4	35		
3/8	6	50		
1/2	8	70		
9/16	12	105		
5/8	16	145		
3/4			20	15
7/8			35	20
1			40	30
1-1/16			45	35
1-3/16			55	40

oi203vg