

Trainings ▾

General Information

The exhaust gas recirculation (EGR) cooler outlet temperature sensor is used to measure the temperature of the exhaust gas that exits the EGR cooler. The ECM uses this temperature to control the emission levels of the engine.

The EGR cooler outlet temperature sensor is located at the intake air horn at the front of the engine.

The EGR temperature sensor is used to measure the temperature of the exhaust gas that exits the EGR cooler.

The EGR temperature sensor is located on the EGR crossover tube.


Initial Check

Use an electronic service tool to monitor the value of the EGR temperature sensor with the key in the ON position and the engine off.

Note : The value of the EGR temperature sensor should be checked when the engine is cold.

The value of the EGR temperature sensor should read within 5.5°C or 10°F of the local ambient air temperature.

Replace the EGR temperature sensor if the value is out of specification.

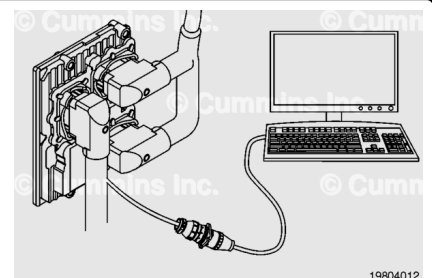


Preparatory Steps

⚠ WARNING ⚠

Batteries can emit explosive gases. To reduce the possibility of personal injury, always ventilate the compartment before servicing the batteries. To reduce the possibility of arcing, remove the negative (-) battery cable first and attach the negative (-) battery cable last.

- Disconnect the batteries. Refer to the OEM service manual.
- Clean the area around the EGR temperature sensor.

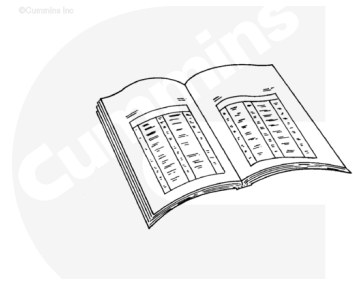


ck800wa

Remove


Lift the tab and detach the connector from the sensor.

Remove the sensor from the air intake connection.

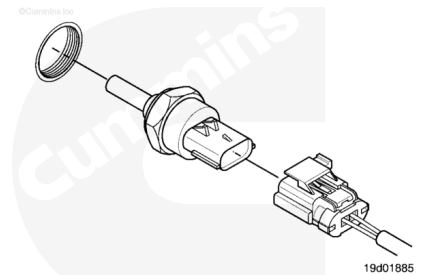

Disconnect the EGR temperature sensor from the engine harness.


Remove the sensor from the engine.

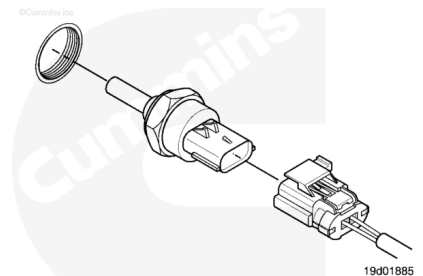

Clean and Inspect for Reuse

Inspect the engine harness connector and sensor for the following:

- Cracked or broken connector shell
- Missing or damaged connector seals
- Dirt, debris, or moisture in or on the connector pins
- Corroded, bent, broken, pushed back, or expanded pins
- Chipped, cracked, extruded, or damaged sensor.

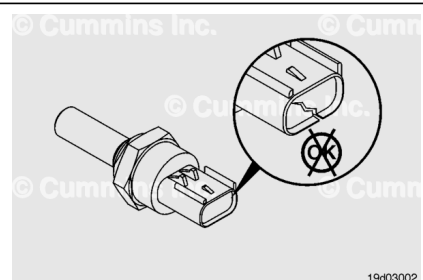

Repair or replace parts as necessary.

Install


Check to make sure the new sensor has an o-ring.

Lubricate the o-ring with clean engine oil.

Install the new sensor into the engine. Tighten the sensor.

Torque Value: 15 n•m [133 in-lb]

Connect the engine harness connector to the new sensor.

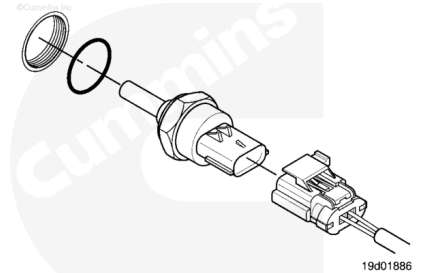


Check to make sure the sensor has a metal sealing washer.

Install the sensor into the EGR crossover tube.

Tighten the sensor.

Torque Value: 34 n•m [25 ft-lb]

Connect the engine harness connector to the sensor.

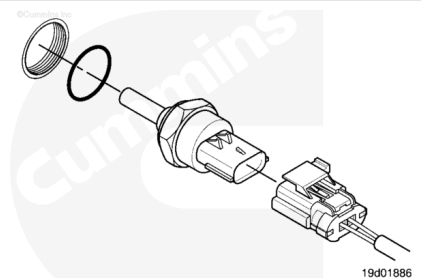

Finishing Steps

⚠ WARNING ⚠

Batteries can emit explosive gases. To reduce the possibility of personal injury, always ventilate the compartment before servicing the batteries. To reduce the possibility of arcing, remove the negative (-) battery cable first and attach the negative (-) battery cable last.

- Connect the batteries. Refer to the OEM service manual.
- Operate the engine and check for leaks.

