


Trainings ▾

Install

Loosen the locknuts on the secondary pistons.

Make sure the secondary pistons are fully retracted.

Install the rear engine brake housing on the rear rocker lever supports.

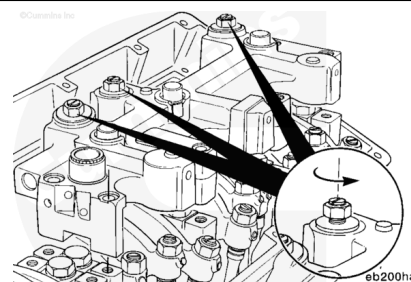


Use clean 15W-40 oil to coat the threads and the bottom side of the capscrew head.

Note : Washers are not used with the capscrews.

Install the capscrews in the rocker lever supports.


Do **not** tighten the capscrews.

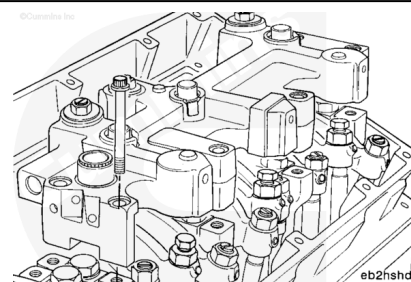

Use clean 15W-40 oil to lubricate the o-rings.


Press the connector all the way into the front housing by hand.

When installing the front housing, be sure the oil connector and o-ring are in a position to be pushed into the rear housing.

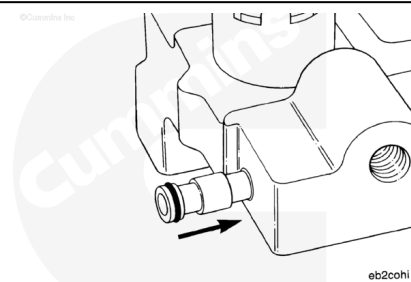


Install the front engine brake housing on the front rocker lever supports.

Center the oil connector between the front and rear housings before tightening the capscrews.

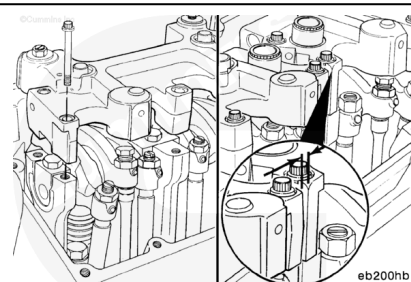

Tighten the capscrews in the sequence shown.


Torque Value: 81 n•m [60 ft-lb]

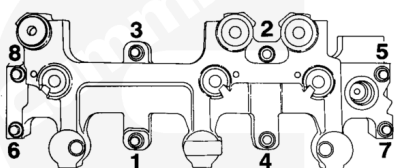

eb2csob

Install the internal oil connector supply hose and tighten the capscrews.


Torque Value: 19 n•m [168 in-lb]

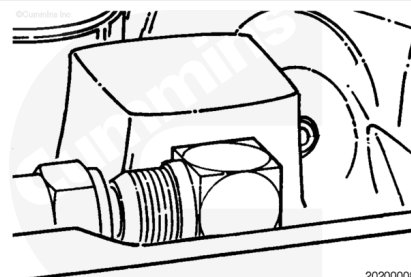

20200008


Install the external oil connector supply hose and tighten the capscrews.

Torque Value: 19 n•m [168 in-lb]

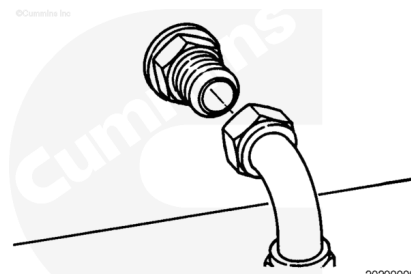

20200009

Connect the solenoid power and ground wires to the terminals on the inside of the rocker lever housing, red wire to the rear housing solenoid and white wire to the front housing solenoid.

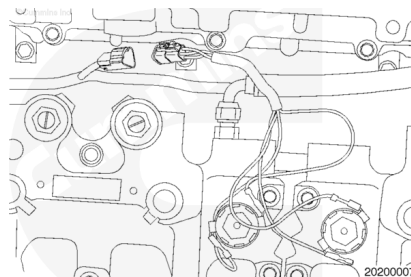


20200007

Adjust

⚠ CAUTION ⚠

Do not tighten the adjusting screw too tightly. The engine can be damaged.

⚠ CAUTION ⚠

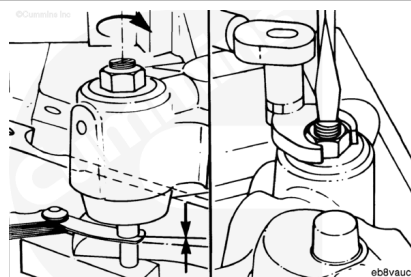

eb8vauc

Failure to set the correct lash can damage the engine.

To obtain maximum brake operating efficiency, and prevent engine damage by piston-to-valve contact, complete the following instructions carefully.

Adjust the exhaust valves on the appropriate cylinder. Refer to Procedure 003-004 in Section 3.

(/qs3/pubsys2/xml/en/procedures/35/35-003-004-tr.html)

After adjusting the exhaust valves on the appropriate cylinder, insert the correct feeler gauge.

Note : Engine brake slave piston lash varies depending on the brake model fitted and may differ between front and rear brake assemblies on the same engine. The correct slave piston lash must be obtained from the dataplate attached to the engine brake housing.

Hold the screw in position and tighten the locknut.

Torque Value:

Without the Torque Wrench Adapter

1. 34 n•m [25 ft-lb]

Torque Value:

With the Torque Wrench Adapter Part Number 3163196

1. 30 n•m [22 ft-lb]

After the secondary piston adjusting screw locknut is tightened to the correct torque value, check the clearance with the feeler gauge again.